



This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines


Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at <http://books.google.com/>

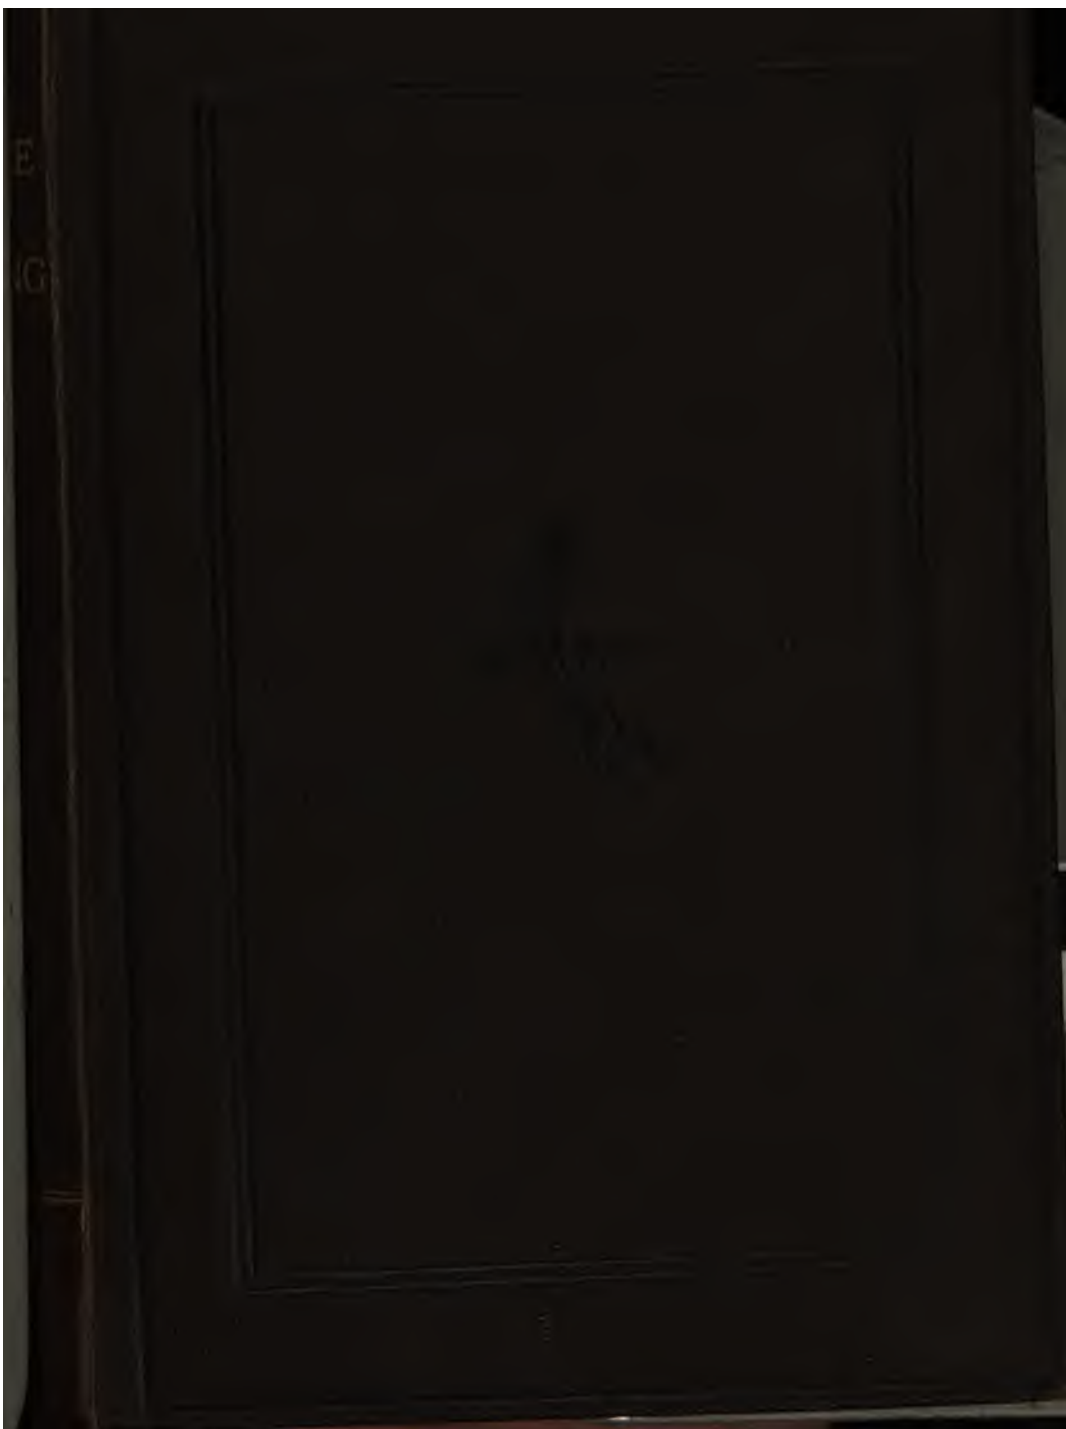

THE SCIENCE
OF
BUILDING.

WORKS WRITTEN OR EDITED

BY

E. WYNDHAM TARN, M.A.

PRACTICAL GEOMETRY, FOR THE ARCHITECT, ENGINEER, and MECHANIC; giving Rules for the Delineation and Application of various Geometrical Lines, Figures and Curves. By E. W. TARN, M.A., Architect, Author of "The Science of Building," &c. With 172 Illustrations. 2nd Edition, with Appendices on Diagrams of Strains and Isometrical Projection. 8vo, 9s. cloth.

THE STUDENT'S GUIDE TO THE PRACTICE OF MEASURING AND VALUING ARTIFICERS' WORKS; containing Directions for taking Dimensions, Abstracting the same, and bringing the Quantities into Bill, with Tables of Constants, and copious Memoranda for the Valuation of Labour and Materials in the respective Trades of Bricklayer and Slater, Carpenter and Joiner, Painter and Glazier, Paperhanger, &c. With 43 Plates and Woodcuts. Originally edited by EDWARD DOBSON, Architect. New Edition, re-written, with Additions on Mensuration and Construction, and useful Tables for facilitating Calculations and Measurements, by E. WYNDHAM TARN, M.A. 8vo, 10s. 6d. cloth.

THE ELEMENTARY PRINCIPLES OF CARPENTRY. Chiefly composed from the Standard Work of THOMAS TREDEGOLD, C.E. With Additions from the Works of the most Recent Authorities, and a TREATISE ON JOINERY by E. WYNDHAM TARN, M.A. Numerous Illustrations. 3s. 6d.

ATLAS of 35 Plates to accompany and illustrate the foregoing book. With Descriptive Letterpress. 4to, 6s.

THE SCIENCE
OF
BUILDING:

AN ELEMENTARY TREATISE
ON
THE PRINCIPLES OF CONSTRUCTION

Especially Adapted to the Requirements of Architectural Students.

By E. WYNDHAM TARN, M.A. (LOND.)

ARCHITECT.

Author of "Practical Geometry for the Architect, &c."

SECOND EDITION, REVISED AND ENLARGED.

ILLUSTRATED WITH FIFTY-EIGHT WOOD ENGRAVINGS.



LONDON:
CROSBY LOCKWOOD AND CO.,
7, STATIONERS'-HALL COURT, LUDGATE HILL.
1882.

173; f. 40.

LONDON :
BRADBURY, AGNEW, & CO., PRINTERS, WHITEFRIARS.

PREFACE

TO THE SECOND EDITION.

IN the present Edition of this work the whole of it has undergone a thorough revision, and much of it has been re-written. A considerable amount of new matter has also been added, which it is hoped will increase its usefulness both to the Student and also to the practitioner of Architecture.

The following is an outline of the additions and alterations that have been made by the Author.

In Chapter I. the additional subjects are, *reaction* and the force of *gravity*, the practical application of the triangle of forces to show the principle of the *bracket*, the method of finding the centre of gravity of a section of an *iron girder* and of an *arc* or *sector* of a circle, the effect of *corbelling-out* and of *buttresses* on the stability of structures; the mode of investigating the *moment of resistance* in a beam is explained, and the nature of *Friction* and *Cohesion*.

Chapter II. on Retaining walls has been re-written, the method of obtaining the formulæ explained, and a

Table given of the requisite thickness of retaining walls for supporting different kinds of earth.

In Chapter III. has been added the *geometrical* method of determining the thrust of an arch, and the various formulæ for calculating the stability of arches, vaults and domes, have been much simplified; the subject of *conical domes* or *spires* has also been introduced and their stability determined, as well as the mode of constructing *iron domes*.

In Chapter IV. much new matter has been introduced on the *chemical composition and strength* of stones and the *geological formations* in which they are found; also on the subject of *mortar and cement*.

In Chapter V. is explained the mode of finding the *safe-load* on a beam with a given strain on the fibres, and the scantlings of floor-timbers have been calculated for various spans; the principles of the *hammer-beam* roof and of the *arched* roof have been investigated, and also the nature of the forces developed in *shoring-up* a wall.

Chapter VI. has been considerably enlarged by the addition of matter on the *nature* of iron, the method of finding the *safe-load* on a beam with a given strain on the fibres, the stability of iron roofs of a *circular* form, and the modes of *preserving* iron from decay.

Chapter VII. has been for the most part rewritten, the subject of *Fluids at rest and in motion* being substituted for that of "Water in Vessels

and Pipes;" *fluids* including *air* as well as *water*; the nature and character of *water* is discussed, as well as its pressure upon the sides of reservoirs and tanks, and the method of conveying *hot-water* from the basement to the upper parts of a house; the quantity of *water* that can be discharged from the bottom of a tank with a given area of orifice, the resistance of long pipes and of *bends* or *elbows* therein to the flow of *water*, and the determination of the *strength* of *pipes* of different material. The nature and composition of *air* are described, as well as the law of *Diffusion* and the principles of *Ventilation*; and the effects produced on walls and roofs by the *pressure* of *wind*, moving with different rates of velocity, are discussed in detail.

Chapter VIII. is entirely new, and treats upon the subject of the nature of *lightning* and the methods to be adopted for *protecting* buildings from its violence.

The Appendix contains an additional Table of the *powers* of *numbers*, intended to facilitate the calculation of several of the formulæ given in the work.

PREFACE

TO THE FIRST EDITION.



IN the following pages the Author has endeavoured to introduce the Student of Architecture to a general outline of the scientific subjects connected with his Profession, an acquaintance with which can at present be only obtained by the perusal of a large number of works by various authorities. In compiling this Treatise, the Author has been careful in all cases to consult the writers who stand highest in their respective branches of knowledge ; and by avoiding the use of the higher mathematics, as well as those topics which belong more especially to the engineering profession, he has brought the various subjects within the capacity of those whose mathematical attainments do not extend beyond elementary geometry and algebra.

CONTENTS.



CHAPTER I.

MECHANICAL PRINCIPLES.

	PAGE
1. Definition of Force; mode of measuring Force; Force of Gravity	1
2. Resultant of two or more Forces; Composition and Resolution of Forces; Triangle of Forces	3
3. Maxwell's Diagram of Forces	6
4. Moment of a Force; the Lever	7
5. Resultant of Parallel Forces; Couples	9
6. Centre of Gravity; to find Position of Centre of Gravity in any Body; Centre of Gravity of a Triangle; Trapezium; General Formula; Centre of Gravity of Iron Girder, of an Arc and Sector of a Circle	11
7. Stability of Structures; Effect of Wind on a High Building; Effect of Corbelling-out; Buttress	18
8. Diagram of Strains in Loaded Beams	21
9. Shearing Force in Loaded Beams.	26
10. Neutral Axis in Loaded Beams	28
11. Modulus of Elasticity I.	29
12. Moment of Inertia of an Area; Moment of Strains	30
13. Friction; Coefficient of Friction	32
14. Cohesion	34

CHAPTER II.

RETAINING WALLS.

15. Pressure on Walls when the Surface of the Ground is Level	36
16. Do do. when the Surface is Inclined	39

CHAPTER III.

ARCHES ; CUPOLAS ; SPIRES.

	PAGE
17. Arches ; General Principles ; Line of Pressures	42
18. Circular Arch ; its Thrust ; Strength of Abutments	45
19. Approximate Geometrical method of finding the Thrust and Strength of Abutment of a Circular Arch	50
20. Stability of Arches arranged on an Octagonal Plan	53
21. Segmental Arches ; their Thrust ; Strength of Abutments	55
22. Gothic Arches ; their Thrust ; Strength of Abutments	59
23. Thrust of Elliptical Arches	61
24. Gothic Vaulting Ribs : their Thrust ; Strength of Abutments	61
25. Oblique or Skew Arches	66
26. Cupolas or Domes ; Mode of Construction ; Thrust ; Strength of Abutments	68
27. Conical Domes or Spires ; their Thrust ; Strength of Wall	73
28. Iron Domes	76

CHAPTER IV.

BUILDING STONES.

29. Classification and Composition of Stones	78
30. Granites ; Serpentine ; Slate	80
31. Sandstones	83
32. Limestones	86
33. Oolites	87
34. Magnesian Limestones	89
35. Porosity or Absorbent Power of Stones	89
36. Strength of Stones	90
37. Mortar	91
38. Cements	92
39. Ransome's Concrete Stone ; Protection of Stone from Weather	93

CHAPTER V.

TIMBER.

40. Growth of Timber Trees	96
41. Decay of Timber ; its Prevention	98
42. Strength of Beams ; Transverse Strain	100
43. Safe-load on Beams	105
44. Deflexion of Horizontal Beams	107

CONTENTS.

xi

	PAGE
45. Strength of long Pillars of Wood	109
46. Strength of Short Pillars	111
47. Tensile Strength of Wood	113
48. Floors ; Scantlings of Timbers	114
49. Timber Framing ; Strains on several Parts of a Truss	116
50. Weight supported by Roofs ; Scantling of Timbers employed in a Roof Truss	121
51. Hammer-Beam Roofs	122
52. Arched Roofs	124
53. Shoring	127
54. Centerings for Arches	130

CHAPTER VI.

IRON.

55. Mode of Manufacture of Iron ; Different kinds of Iron . . .	132
56. Cast-iron	132
57. Cast-iron Beams ; Breaking-strength ; Safe-loads	133
58. Long Cast-iron Columns	137
59. Short Cast-iron Columns	139
60. Wrought-iron ; Resistance to Extension ; Long Columns ; Short Columns	141
61. Wrought-iron Beams ; Rolled Joists ; Plate and Lattice Girders	143
62. Safe-load	148
63. Elasticity and Tensile Strength of Iron Bars	151
64. Deflexion of Wrought-iron Beams	152
65. Effect of Heat upon Iron	154
66. Wrought-iron Roofs ; Methods of calculating Strains on dif- ferent Parts	155
67. Diagram of Strains applied to Roofs	157
68. Circular Roof	159
69. Steel ; its Nature and Strength	161
70. Preservation of Iron	163

CHAPTER VII.

FLUIDS AT REST AND IN MOTION.

71. Definition of a Fluid ; Liquids and Gases	166
72. Water, its Composition and Character	167
73. Pressure of Water on the Sides and Bottom of Tanks	168
74. Centre of Pressure ; Strength of Reservoir Walls	170

	PAGE
75. Hydrostatic Pressure ; Hydraulic Lifts ; Water Supply . .	172
76. Specific Gravity ; Substances heavier than Water ; Substances lighter than Water ; Alloys	174
77. Water in Motion	176
78. Flow of Water through Pipes ; Loss of Head ; Amount of Dis- charge	177
79. Bends and Elbows in Pipes	180
80. Strength of Water Pipes	182
81. Air ; its Composition	182
82. Diffusion of Gases	184
83. Ventilation	185
84. Pressure of Wind on Buildings	188

CHAPTER VIII.

LIGHTNING CONDUCTORS.

85. Identification of Lightning with Electricity	193
86. Construction and Use of Lightning Conductors	197

APPENDIX.

TABLE I. Specific Gravity and Weight of Building Materials . .	201
TABLE II. Powers of Numbers	204

THE SCIENCE OF BUILDING.

CHAPTER I.

MECHANICAL PRINCIPLES.

1. THE SCIENCE of "mechanics" investigates the laws of forces and their effects upon various bodies. The term "force" is applied to whatever causes or *tends* to cause motion, or a change of motion in bodies, and to whatever prevents or hinders their motion; its effect being measured by reference to some unit of weight, as pounds, tons, &c. When a body is set in motion by a force, the effect of the force is measured by the momentum, or the mass of the body multiplied by the velocity generated in an unit of time. When two or more forces act upon a body, but do not produce motion, the body is said to be in *equilibrium* by the action of those forces. The relative magnitude of the forces acting on a body may be represented by straight lines whose lengths are proportional to the forces, and whose directions are those in which the forces act.

Whenever a force is impressed upon a body in any direction, another force of equal magnitude is immediately produced in the opposite direction, which is called the **REACTION** of the impressed force. Thus, if a heavy body

is placed on the ground, it presses thereon with a certain force W , which is proportional to the quantity of matter it contains, but the ground which supports it reacts upon the body with an equal pressure R acting upwards, otherwise the body would sink into the ground. If the body is placed on a liquid it will sink below the surface with a force equal to $W - R$, R in this case being only the weight of the volume of the liquid which the solid body displaces. Also when a body A , which is in motion, strikes a fixed body B , which brings it to a standstill, the stoppage of A is owing to a blow which it receives from B , equal in intensity to that which it struck B , otherwise it would have moved B along with it, or have passed through it as a bullet does through a plank of wood, where the resistance of the plank is less than the force of the blow. It is the reaction of the earth that gives stability to our buildings, and we also see the necessity of so distributing the load that this reaction shall be equal to the pressure, as a want of attention to this is the cause of numerous settlements in buildings from their foundations sinking into the ground.

One of the most important forces with which the architect has to deal is the *force of gravity*, which is measured by the velocity generated in one second by a body falling from rest in consequence of the earth's attraction, the amount of which is determined by experiment for every place on the globe. In this country it is found that a body falling from rest in a vacuum acquires a velocity in the first second of time of about 32.2 feet per second, for which quantity the letter g is always used, and the velocity v generated in any other time t is expressed by the formula

$$v = gt.$$

The space or height through which a body falls from

rest in one second is $\frac{1}{2} g$ or 16.1 feet, and the height h passed through by a body falling from rest during t seconds is (in feet)

$$h = \frac{1}{2} g t^2 = 16.1 t^2.$$

The velocity v which the body acquires in falling through the height h from rest, in feet per second, is

$$v = \sqrt{2 g h} = 8 \sqrt{h}, \text{ very nearly.}$$

It is customary to call h the height *due* to the velocity v .

The quantity g is also put for the number of pounds weight in a *unit of mass*, so that if M represents the mass of a body whose weight in lbs. is W , we have

$$W = M. g, \text{ or } M = \frac{W}{g},$$

which latter quantity or ratio does not change with the latitude of the place, although the value of g may vary.

2. RESOLUTION OF FORCES.—Whatever number of forces act upon a body, it is clear that they can only move it in *one* direction, so that their total effect must be equal to some one force acting in that *one* direction. This force is called the “resultant” of all the forces which act on the body, and if a force equal in magnitude to the resultant and opposite in direction is applied to the body it will be kept in equilibrium. Suppose the two forces P and Q (fig. 1) represented in magnitude and direction by the lines AB and AC , to act on a body A ; draw CD parallel to AB , and BD parallel to AC ; join AD ; then the line AD represents

Fig. 1.



the resultant (R) of P and Q in magnitude and direction. Produce the line DA and take AE equal to AD, then AE will be the magnitude of the force (S) acting on A, which will just balance R, the resultant of P and Q.

The forces P and Q are called the “components” of the force R. If the single force R acts on the body A in the direction AD, and we want to know its effect in any two other given directions AB and AC, we take the length AD to represent R and make it the diagonal of a parallelogram whose sides are parallel to the given directions of AB and AC, then these sides will represent in magnitude the effect of R in those two directions.

If the angle BAC is a *right-angle*, then DB will be perpendicular to AB, and the ratio of DB to DA is called the *sine* of the angle DAB, that of BA to DA being called the *cosine* of DAB; the ratio of DB to BA is called the *tangent* of the angle DAB. The values of the sine, cosine, and tangent of every angle from 0° to 90° have been calculated, and will be found in tables. In this case the resolved parts P and Q, of the force R, at right angles to one another, are:—

$$P = R \times \text{cosine} \quad \text{PAR} = R \times \cos. \text{PAR}$$

$$Q = R \times \text{sine} \quad \text{PAR} = R \times \sin. \text{PAR}$$

$$Q = P \times \text{tangent} \quad \text{PAR} = P \times \tan. \text{PAR}$$

When more than two forces act on the body at A, we can obtain the value and direction of their resultant by first finding that of any two of the given forces, and then considering those two as replaced by their resultant; then find the resultant of this last force combined with another of the given forces, and so on for all the forces, until at last we reduce them to a single force, which will be the resultant required. When the body A is kept in equili-

brum by the three forces P, Q, and S, represented by the lines AB, AC, AE; these forces are proportional each to the *sine* of the angle contained between the other two; that is to say:

$$\frac{P}{\sin. QAS} = \frac{Q}{\sin. PAS} = \frac{S}{\sin. PAQ}.$$


An example of the practical application of this theorem will be found in the case of arches arranged in a polygon (20). Also if we form the triangle ABD of lines drawn in the directions of the forces, it is evident that these lines will represent the forces in magnitude and direction, if taken in order. That is to say, P is represented by AB, acting from A towards B; Q by BD, acting from B towards D; S by DA, acting from D towards A. And conversely, if three forces acting at a point are represented by the sides of a triangle, taken in order, they will balance each other.

It is also clear that in order that three forces may balance each other or be in equilibrium, their directions must meet in one point.

The following is an example of the application of the principle of the Resolution of forces to practical building.


Let AC (fig. 2) represent the vertical face of a wall, in which a beam AB is fixed firmly at A, but projects therefrom the length AB, the end B having to sustain a weight W, which would bend it downwards, but is prevented from doing so

Fig. 2.

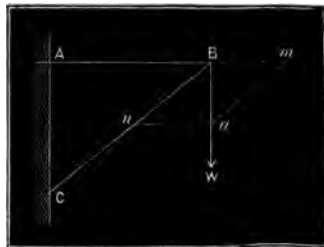

by the strut BC fixed to the end B of AB , and into the wall at C , so as to form what is called by architects a "bracket." Let the weight W be measured by the length of the vertical line Ba on any convenient scale of parts. Draw am parallel to BC , meeting AB produced in m ; and draw an parallel to Bm , and meeting BC in n . The length Bm will then represent the force with which AB is strained in the direction Bm , on the same scale that Ba represents the load W . Also the length Bn will represent on the same scale the pressure down the strut in the direction BC ; the former being a stretching or tensile force, and the latter a compressive one.

Fig. 3.

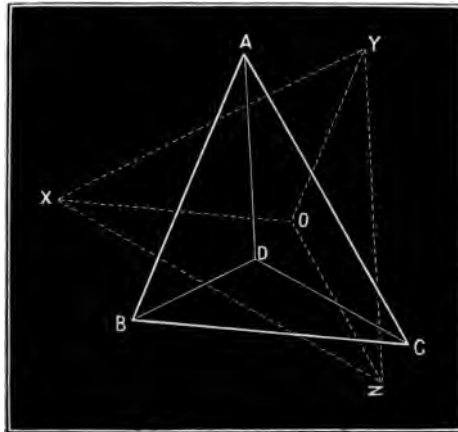


3. Let ABC (fig. 3) be a triangular piece of framework jointed at A , B , and C , and kept in equilibrium by the action of three forces acting at the joints. Since there is equilibrium the directions of these forces must meet at some point, D , and must also be proportional to the sides of a

triangle which are respectively parallel to the lines AD, BD, CD. Let XYZ be such a triangle. Then to find the stresses in AB, BC, CD arising from the forces, draw lines from the points X, Y, Z, parallel respectively to the sides of the triangle ABC; these will meet in a point O, and the line XO will represent the stress in BC; YO that in AB; ZO that in AC; to the same scale as that on which the sides of the triangle XYZ, represent the original forces acting at the joints A, B, C. The figure ABC is called the "frame diagram," and the figure XYZ the "stress diagram." The lines which in the former make a closed polygon are represented in the latter by lines meeting in a point, and vice versa; so that they may be called *reciprocal figures*. This is the basis of the method of diagrams applied by the late Prof. Clerk Maxwell to the determination of the relative values of the stresses on the several parts of any framework, such as a roof-truss, lattice-girder, &c. (See paper by J. C. Maxwell read at meeting of British Association, 1867.) An example of its application to iron roofs will be found at section (67).

4. MOMENTS.—It is often necessary in the solution of mechanical problems to ascertain the effect of a force upon a body with respect to some point through which its direction does *not* pass. Let the forces P, Q, and R act at A (fig. 4), and be represented by the lines AB, AC, AD. Let O be some point which is not in the direction of either of these forces; draw Ob perpendicular to AB; Oc to AC; Od to AD; then the product of the force P into the length Ob is called the "moment of P about O;" the

Fig. 4.

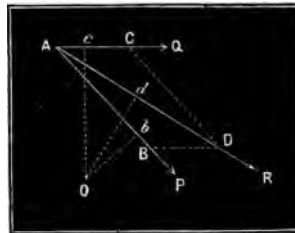

product of Q into Oc is the *moment of Q about O* ; and the product of R into Od is the *moment of R about O* . Moreover, by the principles of geometry it can be proved that the moment of the resultant R about O is equal to the *sum* of the moments of P about O and of Q about O . The *moment* of a force about any point measures its tendency to produce rotation round that point. Whenever two forces act in any directions upon a body having a fixed point, they will

Fig. 5.



be in equilibrium if their moments about the fixed point are equal, but tending to rotation in opposite directions. Thus, if we have a straight rod AB (fig. 5) resting on a fixed point C, and a weight P is applied at one end A, and a weight Q at the other end B, these weights will balance each other if $P \times AC = Q \times BC$.

In this we have the principle of the lever, for by moving C, the fulcrum, near to B, we can make a small weight at A balance a large one at B. The weight P which will balance a given weight Q is determined by the equation

$$P = \frac{BC}{AC} \times Q.$$

If the fulcrum C is placed at one end of the lever, and Q acts at a point B between A and C, the forces P and Q must be in opposite directions in order that they may balance, but the same relation exists between them; that is to say, $P \times AC = Q \times BC$.

The theory of moments is constantly applied in all the investigations into the principles of scientific construction, and therefore requires to be thoroughly understood by the architect.

5. COUPLES.—When two parallel forces P and Q act on a body in the same direction but at different points A and B (fig. 6), their resultant R is equal to their sum,

Fig. 6.

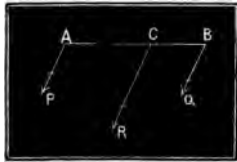


Fig. 7.



and acts at a point C which is determined by the equation,

$$P \times AC = Q \times BC.$$

If the forces P and Q act in opposite directions (fig. 7) (Q being greater than P) the resultant R is equal to their difference and acts in the direction of the greater force at a point C , determined as before by the equation,


$$P \times AC = Q \times BC = Q (AC - AB),$$

$$\text{or } AC = \frac{Q}{Q - P} \times AB.$$

From this it will be seen that as P and Q approach equality, the point C goes further and further away, so that when $P=Q$, C is at an infinite distance, or there is no point of application of the resultant. The two equal and parallel forces acting at A and B in the same plane, now constitute what is termed a “couple;” and the moment of P about B , or of Q about A , is called the *moment of the couple*. The effect of a couple is to communicate an angular motion about an axis perpendicular to the plane in which its forces act, which axis passes through the *centre of gravity* (G) of the body. Two

couples which act upon a body in the same plane, but in opposite directions, will be in equilibrium if their moments are equal. The effect of a couple upon a body is not altered by increasing or diminishing the forces of the couple, provided the length of its arm is diminished or increased in like proportion, so that the moment or

Fig. 8.

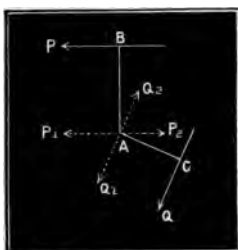

product of the force into the length of the arm, remains the same. The principle of couples enables us to shift the point of application of any forces acting on a body to a point about which they balance, an operation which is often necessary in mechanical problems, and enables us to simplify their solution. Suppose P and Q (fig. 8) to be two

forces acting in the same plane on a body, and that their moments balance about a point A , so that

$$P \times AB = Q \times AC,$$

AB being perpendicular to the direction of P , and AC to that of Q . If we apply at A two equal and opposite forces, each equal and parallel to P , and call them P_1 and P_2 , we shall not disturb the equilibrium; also if we apply at A two equal and opposite forces, Q_1 and Q_2 , each equal and parallel to Q , the equilibrium is undisturbed. We now have the couples P . BA . P_2 and Q . CA . Q_2 , acting in opposite directions, and having equal moments, so that they balance each other, and can be removed without affecting the equilibrium. We have, therefore, remaining only the forces P_1 equal to P , and acting parallel to its direction; and Q_1 equal to Q , also acting parallel to its direction; and these both act at the point

A. Hence it follows that if two forces, acting in any direction on a body, balance each other about any point in that body, they may be transferred to that point where they may be considered as acting with the same force as before, and in directions parallel to their original ones; and their effect upon the body is the same as before. This is an important principle in the investigation of the effect which the thrust of an arch produces on its supporting pier (18).

6. CENTRE OF GRAVITY.—When two parallel forces act upon a body, we have seen in the last article that the point at which their resultant acts is found by equating their moments about that point. In the same way the position of the resultant of any number of parallel forces can be determined, by first finding the resultant of any two of the forces, and then of that first resultant and a third force; and so on until there is only one force left, which is the resultant of all the forces. Now every solid body which is subject to the action of the earth's attraction or gravitation may be considered as consisting of a number of heavy particles, the weights of which are parallel forces acting vertically downwards. There is therefore a point in every body about which all these parallel forces balance, and through which their resultant passes; this point is called the "centre of gravity" of the body. This statement is only strictly true for bodies which are very small as compared with the diameter of the earth, for the direction in which gravity or the earth's attraction acts is towards the *centre* of the earth, and the force of gravity also varies according to the latitude of the place; but as we have only comparatively small objects to deal with, we can, without any perceptible error, consider that the action of gravity on any solid

body is perpendicular to the surface of still water at that place, and is also uniform in force throughout the body. The position of the *centre of gravity* of any body is the same whatever may be the intensity of the force of gravity, and does not vary with change of position. In the case of a rigid body, we may, in all mechanical investigations, consider that its whole weight is collected at its centre of gravity, and if this point is supported, the whole body is in equilibrium.


If a body is hung up loosely by any point, so that it can turn freely about that point, the centre of gravity will always be in a vertical or plumb-line dropt from the point of suspension; hence we can readily find the position of the centre of gravity in an irregular plane figure by suspending it at two points, and the intersection of the plumb-lines dropt from each point will give us the position of the centre of gravity.

In all regular figures, whose material is homogeneous, the centre of gravity is in the centre of the figure; as in the circle, ellipse, polygon of equal sides, sphere, ellipsoid, and all regular solids. In the square and parallelogram it is at the intersection of the diagonals drawn from opposite corners. In any triangle its position is found by bisecting one side and joining the point of bisection with the opposite vertex, and measuring one-third of this last line from the bisected side, or two-thirds from the vertex. Thus in the triangle ABC (fig. 9) AF bisects BC, and $GF = \frac{1}{3} AF$, G being the centre of gravity of the triangle.

Knowing the position of the centre of gravity (G) of the triangle ABC we can find that (g') of a part BCED, cut off by the line DE parallel to BC. The centre of gravity of the smaller triangle ADE is g on the line AF,

and is found as above. Let g' be the centre of gravity of the part BCED, this will also be on the line AF (the point F bisecting BC). We may now consider the weight w of the triangle ADE as acting at g , and the weight w' of the figure BDEC as acting at g' ; then the moments of their weights must balance about G, so that

Fig. 9.

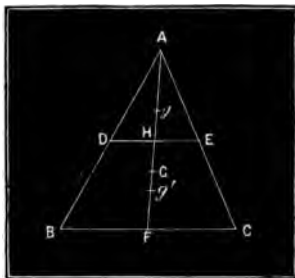

$$w \times Gg = w' \times Gg', \text{ or } Gg' = \frac{w}{w'} Gg.$$

Now since w and w' are proportional to the areas of the figures, we may put the ratio of the areas for that of the weights. If A is the area of the whole triangle, a that of the smaller one, we have,

$$Gg' = \frac{a}{A-a} Gg.$$

Example.—Let $AE = \frac{1}{2} AC$; then $A = 4a$

$$Gg = \frac{1}{3} AF, \therefore Gg' = \frac{1}{3} Gg = \frac{1}{9} AF$$

$$Fg' = FG - Gg' = \frac{1}{3} AF - \frac{1}{9} AF = \frac{2}{9} AF.$$

Another method of finding the centre of gravity of a trapezium, is to divide it into two triangles, then join their centres of gravity, and the distance of the centre of gravity of the figure from that of any one of the triangles is inversely proportional to the areas of the triangles. Thus if g is the centre of gravity of one triangle whose area is A (fig. 10), g' that of the other whose area is a , G the centre of gravity of the trapezium and situate

in the line gg' , its position is determined by the equation,


$$A \times Gg = a \times Gg', \text{ or } Gg' = \frac{A}{a} Gg = \frac{A}{a} (gg' - Gg')$$

$$\text{or } Gg' = \frac{A}{A + a} \times gg',$$

so that we have to divide the line gg' in the proportion of the two areas A and a .

Example.—Let $ABCD$ (fig. 10) represent a trapezium

Fig. 10.

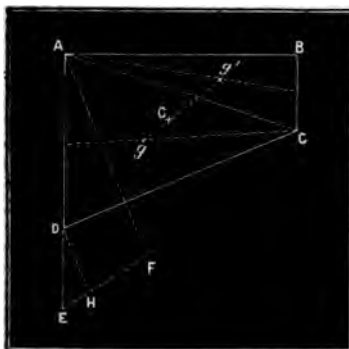

having the two sides AD and BC perpendicular to AB ; join AC ; then the areas A and a are as the bases AD and BC ; let g' be the centre of gravity of the triangle, ABC , and g that of ACD ; join gg' . Produce AD to E , making DE equal to BC ; at E draw a line EF , making any angle with AE , and take $EF = gg'$; join AF , and draw DH parallel

to AF ; then EF is divided in the ratio of $A : a$; and G is found by making $gG = EH$.

The general formula for the centre of gravity of a body which can be divided into two parts whose masses are M_1 , and M_2 , is

$$x = \frac{M_1 x_1 + M_2 x_2}{M_1 + M_2}$$

where x , x_1 and x_2 are the distances of the centres of gravity of the whole and of the two parts respectively,

measured from any fixed point that may be most convenient. Or if x_1 is required,

$$x_1 = \frac{(M_1 + M_2) x - M_2 x_2}{M_1}.$$

Example.—Apply this formula to find g' in fig. 9, the point A being that from which x is measured; then since the masses of the triangles are as the squares on AF and AH,

$$Ag' = x_1 = \frac{2}{3} \frac{AF^3 - AH^3}{AF^2 - AH^2},$$

and if $AH = \frac{1}{2} AF$,


$$Ag' = \frac{2}{3} \frac{1 - \frac{1}{8}}{1 - \frac{1}{4}} AF = \frac{7}{9} AF$$

$$\therefore Fg' = AF - Ag' = \frac{2}{9} AF.$$

To find the centre of gravity (G) of any solid pyramid or cone whose vertex is A. First find g the centre of gravity of the base; join Ag , and take $gG = \frac{1}{4} Ag$. That of a thin hollow cone is found by taking $gG = \frac{1}{3} Ag$. That of a solid hemisphere is found by measuring $\frac{3}{8}$ of the radius above the centre. That of a thin hollow hemisphere is half way between the centre and the vertex.

Suppose it is required to find the centre of gravity G of the section of an iron girder (fig. 11), consisting of three rectangles whose respective areas are a, b, c , and of which m, g , and g' are the centres of gravity, and AB the vertical axis. Let n be the common centre of gravity of m and g , found from the equation

Fig. 11.

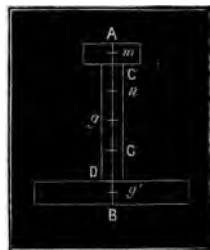

$$\begin{aligned} b \cdot gn &= a \times mn \\ &= a (mg - gn) \end{aligned}$$

$$\text{or, } gn = \frac{a}{a+b} mg,$$

which gives the position of the centre of gravity n of the two rectangles ACD. We can now find G the common centre of gravity of n and g' , by the equation

$$\begin{aligned} c \times Gg' &= (a+b) Gn \\ &= (a+b) (ng' - Gg') \end{aligned}$$


$$\text{or, } Gg' = \frac{a+b}{a+b+c} ng'$$

$$ng' = gn + gg'$$

$$BG = Bg' + Gg'.$$

As an example, let $a = 3 \times 1$, $b = 6 \times 1$, $c = 8 \times 1\frac{1}{2}$; then $mg = 3\frac{1}{2}$, $ng = \frac{7}{2}$, $ng' = \frac{7}{2}$, $Gg' = \frac{3\frac{1}{2}}{16}$, $BG = \frac{3}{8}$.

Fig. 12.

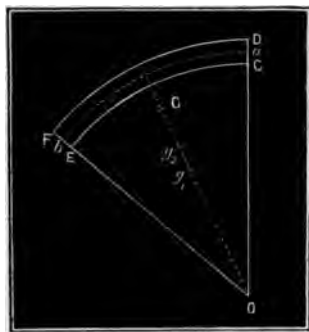

Let it be required to find the centre of gravity G of the circular arc EC (fig. 12), whose centre is O and radius r , subtending the angle EOC at O . The point G will be in the radius which bisects the angle EOC , and its distance from O varies as the *sine* of half the angle, and

inversely as the angle. Putting K for this ratio we find G from the equation

$$OG = K \cdot r,$$

the value of K for different angles being given in the following table:—

Angle EOC.	Value of K.
10°	·999
20	·995
30	·989
40	·980
50	·969
60	·955
70	·939
80	·921
90	·900

To find the position of g_1 , the centre of gravity of the sector EOC, we have

$$Og_1 = \frac{2}{3} K \cdot r.$$

If g_2 is the centre of gravity of the sector FOD, whose radius is R, then

$$Og_2 = \frac{2}{3} KR.$$

Having determined the centres of gravity of the two sectors we can, by means of our previous methods, find the centre of gravity G of the arch DCEF. For since the areas of the sectors are proportional to the squares of their radii, we have

$$Gg_2 = \frac{r^2}{R^2 - r^2} \times g_1 g_2$$

$$\text{where } g_1 g_2 = Og_2 - Og_1$$


$$\text{and } OG = Og_2 + Gg_2$$

If the thickness DC of the arch is small, as compared with the radius OC, the position of G will very nearly correspond with the centre of gravity of an arc whose radius is $r + \frac{1}{2} DC$, as shown by the dotted line ab .

7. STABILITY OF STRUCTURES.—A knowledge of the position of the centre of gravity of any wall or other structure, enables us to determine whether it is in a condition of stability or of instability; that is to say, whether it is in such a condition as to be able to resist an additional force being applied to it in any direction without being overthrown; as well as the exact amount

Fig. 13.

Fig. 14.

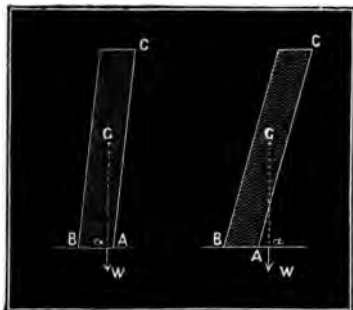

of force which will be required to overturn it. If a plumb-line dropt from the centre of gravity of a body falls *within* the base, that body is in a condition of stability, but if any force is applied to it which causes the plumb-line to fall *outside* the base, the body will be overturned. Let figs. 13 and

14 represent the section of a wall which is out of the perpendicular; the weight W acting at the centre of gravity will have a moment about A , namely $W \times Aa$, which in fig. 13 tends to keep it from falling, and in fig. 14 tends to overturn it.

If a force F , equally distributed over its whole surface, such, for example, as that of the wind, is brought to bear on the wall in fig. 13, it will have a moment, $F \times \frac{1}{2} AC$, tending to overturn the wall about A ; and if the value of this moment is greater than that of the moment $W \times Aa$, the wall will fall over. The pressure of the wind on a vertical surface is sometimes as great as 40 lbs. per square foot (84), and its resultant may be taken as acting at the middle of the wall. If, then, h is the height of the wall, the pressure of the wind (F) at

the middle for one foot length of wall is $40\frac{h}{2}$; and the moment of F about A is $40\frac{h^2}{2}$, or $20h^2$.

Let w be the weight per cubic foot of the wall, t its thickness, $Aa = x$; then the moment of the weight about A is $w.h.t.x$; if this is greater than $20h^2$ the wall will stand, and if less it will fall over. For example, let $h = 40$ ft., $t = 5$ ft., $w = 110$ lbs. When the two forces just balance, we have

$$20 \times 1600 = 110 \times 40 \times 5 \times x; \text{ or } x = 1\frac{1}{2} \text{ ft.}$$

Therefore, in this case the plumb-line from G must fall more than $1\frac{1}{2}$ ft. within the base, otherwise the wall will be blown down by a storm of wind exerting a force of 40 lbs. per square foot of surface; so that the top of the wall must not in this case project more than 2 ft. beyond the base A . The stability of a lofty factory chimney may be determined in this manner. It can be shown (84) that the pressure of the wind on a circular chimney stalk is to that on a square one of the same diameter in the ratio of 2 to 3.

We will now apply the foregoing principles to a case which frequently occurs in building, namely, that of a mass of masonry "corbelled-out" from the face of a wall, as HK from the face HDC of the wall AC (fig. 15).

Suppose the figure to represent the section of such a structure, the centre of gravity of the wall $ABCH$ will be at G , and a vertical therefrom Ga will cut the base BC at

Fig. 15.



the point a , the wall being in a condition of stability. If we now add on the projecting portion HK, the centre of gravity of the whole mass will be moved to g , and the perpendicular gb will cut the base of the wall at b , which is nearer to the edge C than the point a , consequently the structure will not be in so stable a condition as it was without the projection, since the lever arm bC is less than the lever arm aC .


The "Metropolitan Building Act" allows a builder to corbel out a chimney stack above a certain height the full thickness of the wall, so that if $HF = AH$, the figure will represent the section of such a structure; and if we consider it with regard to the base line BC, it will have a moderate amount of stability. We will, however, suppose that there is a joint in the masonry at ED, and consider the mass above EK as simply resting on ED. The centre of gravity of this mass will be at g' on the line HD, and the weight will consequently just pass down the face of the wall, so that the least pressure against the back AE of the wall would overturn it about D, unless the cohesion of the bed of mortar or of cement at ED was sufficient to resist that pressure. We see then that a structure of this kind is in a condition bordering on instability, and is only kept from falling by the cohesion of the cement or by the resistance offered by the lateral extension of the wall on each side of the projection. Where the width of the projection is only small as compared with that of the wall, such a structure will stand in perfect safety; but where the chimney breast extends nearly the whole length of the wall, as is the case in some lofty London houses, there is a great tendency to overturn the wall about the line ED, which is only checked by the resistance offered by the other walls abutting at right angles to it; and if these abutments should at any

time be removed, there will be nothing to prevent the chimney-stack from pulling the wall over. It therefore is essential to the stability of walls that a limit should be put to the corbelling out of such projecting masses.

The effect produced by a "buttress" is just the opposite of what has been described above, and will be seen by reversing the figure ABCDK (fig. 15), and supposing AF to be the base and BC the top of the wall. In this case the moment of the weight of the wall and buttress DF about F increases in proportion to the width of base AF, while the moment of a horizontal force acting at the top B of the wall, and taken about F, remains the same; consequently the stability of the structure increases with the width of the base. In cases where the pressures come upon the wall at intervals instead of being uniformly distributed along the entire length, it is therefore more economical to throw out buttresses at the points of greatest pressure, than to increase the thickness of the whole wall.

8. STRAINS IN BEAMS.—Let AB (fig. 16) be a beam of

FIG. 16.

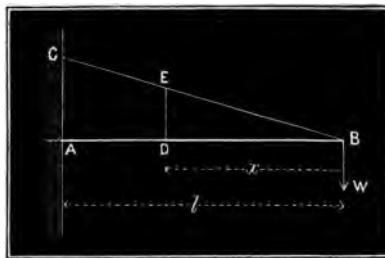

length (l) fixed in a wall at A, and loaded with a weight (W) at B. Then the "strain" upon any part D of the beam at distance x from B is by (4) represented by the

moment of the weight (W) about the point D ; that is, if we call M the moment of strain at D , we have

$$M = W \cdot x$$

and the moment of strain at the point A , next the wall, is

$$M = W \cdot l$$

The strain, therefore, at any point is proportional to its distance from B . If we take CA vertical and make it represent the value of $W \cdot l$ on any convenient scale, and join CB , then the ordinate DE at any point (D) will represent the moment of strain ($W \cdot x$) at that point to the same scale as AC represents $W \cdot l$.

Suppose the weight (W) instead of being applied at one end of the beam AB , to be distributed uniformly over its entire length, w being the weight per unit of length, so that $w \cdot l = W$. Then the weights acting on each unit of length will be so many equal and parallel forces, and their resultant (5), which is equal to their sum, must act at the middle of the beam. Now W equals the sum of all these forces, and its point of application is therefore at the centre of the beam. Therefore the moment of strain upon the point A is

$$M = W \times \frac{l}{2} = \frac{w}{2} l^2.$$


The moment of strain upon any other point D of the beam at distance x from B is

$$M = \frac{w}{2} x^2.$$

If, then, we draw AC (fig. 17) vertical and make it represent on any scale the value $\frac{1}{2} W \cdot l$, and draw a parabola CB having its vertex at B , the ordinate DE at

distance x from B will represent to the same scale the value of the moment of strain at the point D. If AC does not exceed $\frac{1}{4} AB$, an arc of a circle may be substituted for the parabola BC, without material error.


Fig. 17.

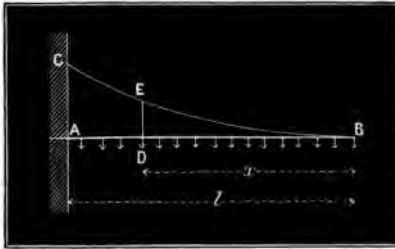

Comparing the strain produced by the weight W concentrated at B, with that produced by the same weight uniformly distributed, we see that the strain in the former case on any point is double the strain in the latter case, so that a beam will bear twice as much when the load is uniformly distributed as it will when the load is concentrated at one end.

When the beam AB is loaded at one end with a weight W , and has also a distributed load $w \cdot l$ to bear, the diagram representing the moment of strain at any point is a combination of the two previous figures. In fig. 18 let DAC be drawn at right angles to AB, take AD equal to $W \cdot l$, AC equal to $\frac{1}{2} w \cdot l^2$.

Fig. 18.

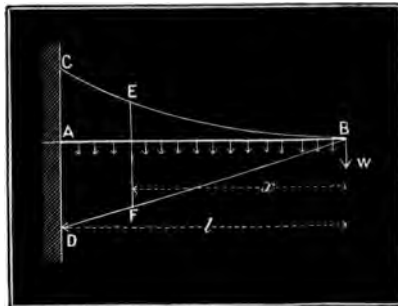

Draw the parabola CB, or an arc of a circle if AC is less than $\frac{1}{4} AB$, and join DB. Then the moment of strain at any point at distance x from B is represented by the

ordinate EF. The moment of the strain at that point is


$$M = W \cdot x + \frac{1}{2} w \cdot x^2.$$

And the moment of the strain at A is

$$M = W \cdot l + \frac{1}{2} w \cdot l^2.$$

Now take the case of a beam AB (fig. 19) supported at the two ends and loaded at any intermediate point D at distance a from A, and distance b from B. Suppose the

Fig. 19.

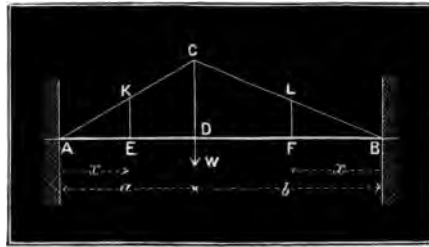

forces P and Q represent the vertical reactions at A and B caused by the weight W. Then if the point where W acts is supposed to be a fixed fulcrum, and weights equal to P and Q are placed at A and B, the beam will be strained in the same manner as at first supposed, and $Q \cdot b$ will be the moment of strain at D. Also by taking moments about A we have

$$Q \cdot l = W \cdot a, \text{ or } Q = W \frac{a}{l}.$$

Therefore the moment of strain at D = $Q \cdot b = W \times \frac{a \cdot b}{l}$.

If x is the distance from A or B of the points E or F, the moment of strain at the point E is

$$M = W \frac{x \cdot b}{l},$$

and the moment of strain at the point F is


$$M = W \frac{x \cdot a}{l}.$$

To draw the diagram of strains, take DC vertical and equal on scale to $W \frac{ab}{l}$; join CA, CB, then the ordinates EK, FL represent the moments of the strains at E and F.

If the point D is the middle of the beam, the moment of strain at that point is $\frac{1}{4} W \cdot l$; since $a = b = \frac{1}{2} l$, and the moment of strain at E or F is $\frac{1}{2} W \cdot x$.

Let the weight (W) be uniformly distributed over the whole length of the beam AB (fig. 20). Then it can be

Fig. 20.

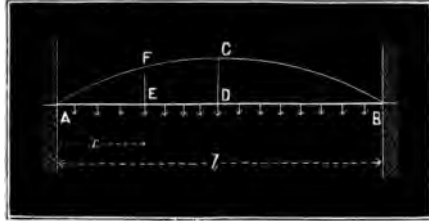

shown by reasoning similar to that just employed, that the moment of strain at any point E at distance x from A or B is

$$M = \frac{W}{2} \times \frac{x(l-x)}{l} = \frac{1}{2} w \cdot x(l-x)$$

if $W = w \cdot l$, or w is the weight per unit of length; the

moment of strain at D is found by making $x = \frac{1}{2} l$, and is

$$M = \frac{1}{8} W \cdot l = \frac{1}{8} w \cdot l^2.$$

Comparing this with the last example, we see that the strain at the centre, when W is concentrated there, is twice as great as when it is uniformly distributed.

To draw the diagram for the strains produced by a distributed weight at any part of the beam, take DC to represent on scale the quantity $\frac{1}{8} W \cdot l$, draw a parabola ACB having its vertex at C ; or if DC is not more than $\frac{1}{8} AB$, a circular arc with its centre on the line CD produced may be substituted without material error. Then the ordinate EF will represent the moment of strain at any point E , to the same scale as DC is drawn.

For methods of drawing the parabola and other curves the reader is referred to the Author's Treatise on "Practical Geometry for the Architect."*

The delineation of diagrams in several other arrangements of load will be found in Humber's "Handy-book of Strains,"* but the above-mentioned are the principal ones that occur in ordinary buildings.


9. SHEARING.—There is another kind of strain which is produced in a loaded beam, called the "shearing force," or the *vertical* action of the straining weight transmitted along the whole length of the beam, and tending to cause contiguous portions or sections to slide vertically upon each other.

When a beam is fixed at one end and loaded at the other with a weight W , that weight represents the *shearing force* produced at every point along the beam.

* Lockwood and Co.

If the weight ($W = w l$) is uniformly distributed along the beam AB (fig. 21), so that w is the weight on each unit of length; then the *shearing force* at any point D at distance x from B is $w \cdot x$, which is the load on the part of the beam between B and D. And the *shearing force* at A is W . If we take the vertical line AC to represent W , and join CB, then the ordinate DE will represent the *shearing force* at any point D.

Fig. 21.

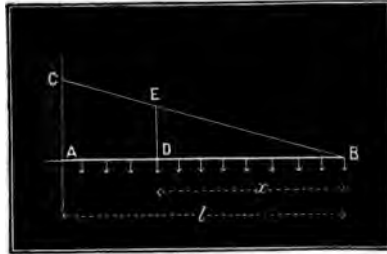


When a beam AB of length l is supported at each end, and loaded with a weight W at any point C, at distances a and b from A and B, the *shearing force* developed at every point between C and A will be represented by $W \frac{b}{l}$; and at every point between C and B by $W \frac{a}{l}$. If C is the middle of the beam, then $a = b = \frac{1}{2} l$,

and the *shearing force* at every point will be $\frac{1}{2} W$.

When a beam AB (fig. 22) of length l is uniformly loaded with a weight ($W = w \cdot l$), the *shearing force* at A and B will be represented by $\frac{1}{2} w \cdot l$, and at any

Fig. 22.

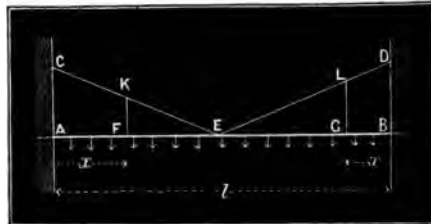

point at distance x from either end it will be represented by $w (\frac{1}{2} l - x)$. Therefore, at the centre, where $x = \frac{1}{2} l$, the *shearing force* will be zero. If, then, the verticals AC and BD are taken to represent the quantity $\frac{1}{2} W$, and we join CE and DE, the ordinate FK or GL will represent the *shearing force* at F or G.

10. NEUTRAL AXIS.—Whenever a beam of any elastic material is supported at its two ends in a horizontal position, and loaded in the middle, it is subjected to a transverse strain, whereby the fibres or particles in the upper part are compressed, whilst those in the lower part are extended. Also the fibres nearest the top are more compressed than those lower down in the beam; and the fibres near the bottom are, on the other hand, more extended than those which are higher up. Hence it follows that there must be a layer of fibres or particles in the interior of the beam, which is neither extended nor compressed; and this layer is called the “neutral surface” of the beam. If we take a vertical section through the middle of the beam, the line in which the neutral surface cuts that section is called the “neutral axis,” and may be considered as passing through the centre of gravity of the section, provided the strain upon the beam is not sufficient to injure its elasticity. Some very carefully-made experiments by Mr. Barlow, which are described in the Transactions of the Royal Society and in Barlow’s treatise on Strength of Materials,* show that in cast-iron beams of rectangular section the neutral axis is at the centre of the section of the beam even when strained with weights amounting to three-fourths of the breaking weight, and that its position is not sen-

* Lockwood and Co.

sibly altered by variations in the amount of the strain applied.

11. ELASTICITY.—When any substance is strained by a force applied in any manner, it will be found that its dimensions are altered during the application of the force; and such a body is said to be *perfectly elastic* if, when the action of the force ceases, it will return exactly to its original dimensions. No substance, however, can be considered perfectly elastic, since some permanent alteration in size and shape is produced whenever a strain is applied. Nevertheless, in practice the alteration is generally of so slight a character when the strain is much less than sufficient to produce fracture, that bodies are generally considered elastic so long as the strains to which they are subjected do not exceed a certain amount, called the “limit of elasticity.” If we take a prism of any material having one square inch of section, and subject it to a longitudinal strain by a force S , the change in its length will be proportional to the amount of force applied, as long as the *limit of elasticity* is not exceeded. Let l represent the original length, x the change in length produced by the force S , E a constant depending on the nature of the material of which the prism is composed; then it is found that,

$$x : l :: S : E$$

$$\text{or, } E = S \times \frac{l}{x}.$$

The constant E is called the “modulus of elasticity,” and its value is determined by experiment for various substances. If we put $x = l$, we get $E = S$, or E is the force that would stretch a body, whose section is one square

inch, to double its length, if such a thing were possible.

12. MOMENT OF INERTIA.—If we suppose any area or plane surface to be divided into a very large number of indefinitely small particles, and call a the area of any one of such particles, x its distance from any given line or axis, then the product ax^2 is called the “moment of inertia” of that particle about the given axis, and the *moment of inertia* of the whole surface is the *sum* of all possible values of $a \cdot x^2$. This is found by means of the integral calculus when the outline of the surface is a known geometrical figure. The formula for the *moment of inertia* of various geometrical figures is given in treatises on dynamics with respect to various axes. In the present work we shall only require to know it for two simple figures, and the axis will be taken through the centre of gravity.

Let the area of the figure be rectangular, having the depth d and breadth b ; then the *moment of inertia* (I) of a rectangle about its centre of gravity is found to be

$$I = \frac{1}{12} bd^3.$$

If we have a hollow rectangular figure or a beam of I section (figs. 49, 50, 51)* in which t is the total thickness of the web or vertical portion, d_1 the clear depth between the top and bottom flanges, we find the moment of inertia about the centre of gravity to be,


$$I = \frac{1}{12} (b \cdot d^3 - (b-t) d_1^3).$$

When a beam is fixed at one end and strained by a load at the other end, it assumes a curved form as CD (fig. 23). Let AB be the neutral axis of the section (10), OA and OB the radius of curvature of AB, then the fibres above

* Page 145.

AB are extended and those below it are compressed in proportion to their distance from the neutral axis. Draw Ac parallel to OB. Let a be the area of section of any

Fig. 23.

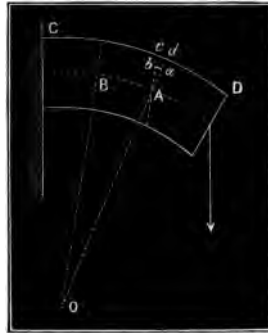

fibre at a distance $Ab = x$ from the neutral axis, which is elongated by the amount ab by a force p ; its original length being equal to AB ; then by (11) we have

$$\begin{aligned} E \cdot a &= p \frac{AB}{ab} \\ \text{or } p &= E \cdot a \frac{ab}{AB} \\ &= E \cdot a \frac{x}{OA} \end{aligned}$$

The moment of p about the neutral axis is—

$$p \cdot x = E \cdot a \cdot \frac{x^2}{OA}$$

and the same for the other fibres in the section; so that the whole *moment of resistance* (M) is

$$\begin{aligned}
 M &= p.x + p'x' + \dots \\
 &= \frac{E}{OA} (ax^2 + ax'^2 + \dots) \\
 &= \frac{E}{OA} \times I
 \end{aligned}$$

where I is the moment of inertia of the section taken about the neutral axis; and by similar triangles,

$cd : Ac :: AB : OA$, therefore we have,

$$M = E \frac{I}{Ac} \frac{cd}{AB}.$$

But by (11) $E \frac{cd}{AB} = S$, the force per square inch pro-

ducing the elongation cd ; if then we put $Ac = z$ the distance from the neutral axis of the most extended or compressed fibre, we have

$$M = S \frac{I}{z}.$$

13. FRICTION.—When we attempt to slide a heavy body along the surface of any other solid material, we become conscious of a considerable resistance being offered to its motion, which it requires a certain amount of force to overcome. This resistance to motion is denominated “Friction,” and is found by experiment to be proportional to the pressure which the two bodies in contact exert upon each other, but is independent (except in extreme cases) of the extent of area of the surfaces in actual contact. The resistance also depends very much on the roughness of the surfaces; for if we examine with a magnifier the surface of a piece of worked stone, which to the unaided vision appears to be smooth and level, we

shall find that it really consists of a number of hills and valleys, so that when two such surfaces are brought in contact the hills on one surface become interlocked with the valleys on the other, as in the case of toothed wheels, and it is not until the pressure which one set of hills exerts on the other has worn them both down to a level, that one body is enabled by the applied force to move over the surface of the other. Friction may, therefore, be looked upon as the *reaction* (1) of the projections upon one surface against those of the other. Hence it is that, when two bodies are rubbed together, fine particles of each substance are found to be lying loose upon their surfaces, these being the small hills above mentioned, which have been rubbed down by the pressure.

If P is the perpendicular pressure of one body on another, and we put F to represent the force of friction, then the ratio $\frac{F}{P}$ represents what is called the *coefficient of friction* for the particular surface and material, being determined experimentally for different substances in the following manner. Let the body be placed upon a plane surface, AB , which is movable about the point A , and let the plane AB be tilted up about A through an angle α until the body is just upon the point of sliding down the plane; the angle α at which sliding is about to commence is called the “angle of repose,” and we find that

$$\frac{F}{P} = \tan. \alpha,$$

for which the symbol μ is generally employed. Knowing then the value of μ or $\tan. \alpha$, and also of P for any par-

ticular substance, we at once get the force of friction, namely,

$$F = P.\mu = P. \tan. a.$$

The value of the coefficient of friction μ for *dry* masonry and brickwork—that is to say, without a bed of mortar—is about $\cdot65$, the *angle of repose* a being 33° . For the same materials put together with mortar, the value of μ while the mortar is fresh is $\cdot75$, the angle of repose being 37° . In other words, the force required to move a piece of stone or brick along the *level* surface of a similar substance is two-thirds of its weight in the former case, and three-fourths of its weight in the latter case, when there is a bed of wet mortar interposed between them. If the mortar has been allowed to set, the force of *cohesion* (14) will come to the aid of friction, and the resistance will be greatly increased. Friction is one of the most important forces with which the architect is concerned, as upon it a great deal of the stability of his buildings depends.

14. COHESION is that force of attraction existing between the particles of a solid body, or between those of two substances in close contact with each other, which prevents them from being separated without the exertion of a stretching force acting in the opposite direction to the force of cohesion. In the operations of building a number of different materials are brought together in such a manner as to form one compact structure, and these are held together to a great extent by the force of cohesion. For instance, cement or mortar is employed for the purpose of uniting stones and bricks so as to form a solid wall, and in considering the stability of the structure we have to ascertain the cohesive strength not only of the


stones or bricks themselves, but also of the cement with which they are united. Now as it is a well-established rule of mechanics that the actual strength of any body or structure never exceeds the strength of its weakest part, it is of little use to have the cohesive power of the cement greater than that of the stone or brick, or to have that of the stone or brick very great when the cement which unites them has but little cohesive power. For example, the cohesive power of stone and brick varies from 300 to 500 lbs. per square inch of section; that of Portland cement, when thoroughly hardened, is about 300 lbs. per square inch when mixed with twice its bulk of sand, and 600 lbs. when used neat. The cohesive strength of cast-iron, or its resistance to tensile strain, is about 7 or 8 tons per square inch of section, while that of wrought-iron is about three times as much, and that of steel from 30 to 40 tons per inch. The cohesion of the fibres of wood is greater in the direction of their length than transversely to it, which arises from the nature of its structure; and the resistance to tensile strain is generally much greater in timber than the resistance to compression.

CHAPTER II.

RETAINING WALLS.

15. WHEN an embankment of loose earth is left to itself it assumes a gradual incline, which is called its *natural slope*; and the angle which this slope makes with the horizon is called the "angle of repose," and varies according to the adhesive qualities of the component parts

Fig. 24.

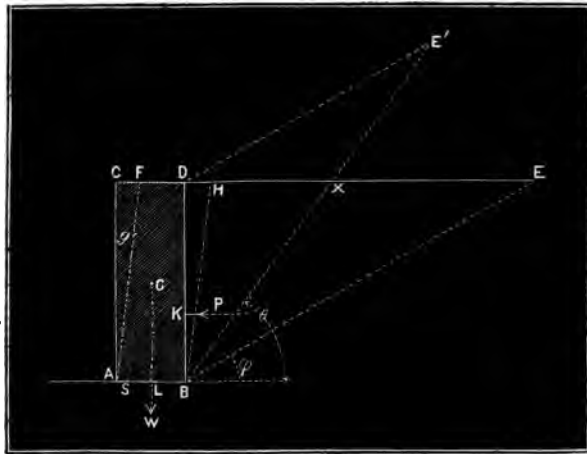

of the soil, from about 20° for wet clay to 55° for compact earth. When, therefore, earth is filled up against a vertical wall, the pressure sustained by the wall is that of the

wedge of earth which lies above the *natural slope*. Thus, in fig. 24, if AD is the section of a wall against which the earth is filled up, BE the *natural slope* making the angle ϕ with the horizontal, the wall has to support the pressure of the triangular mass of earth BDE. Let P be the pressure of the earth perpendicular to the face BD of the wall, acting at a point K, the position of which is to be hereafter determined. Let h be the height BD, t the thickness AB, supposed uniform, w the weight of a cubic foot of earth, w' that of a cubic foot of the wall. Now the earth between BE and BD may yield in any line as AX making, say, the angle θ with the horizontal, and the problem is resolved into determining the value of θ , which gives the greatest value to P. If Q is the weight of the triangular piece of earth BDE, we find, from the principles of the inclined plane, that

$$\begin{aligned} P &= Q \cdot \tan. (\theta - \phi) \\ &= \frac{1}{2} w h^2 \cot. \theta \cdot \tan. (\theta - \phi), \end{aligned}$$

if we take 1 foot in length of the wall. Now this quantity is found to be greatest when

$$\theta - \phi = 45^\circ - \frac{1}{2}\phi$$

which gives us for the value of P,

$$\begin{aligned} P &= \frac{1}{2} w h^2 \tan.^2 \left(45^\circ - \frac{\phi}{2} \right) \\ &= w \frac{h^2}{2} \tan.^2 \left(\frac{DBE}{2} \right). \end{aligned}$$

Referring to the case of the pressure of water against the side of a tank (73), we find that F being that pressure, and w the weight of a cubic foot of water,

$$F = w \frac{h^2}{2}$$

so that P may be considered as the pressure of a mass of liquid, of which the weight per cubic foot is

$$w \cdot \tan. \left(\frac{DBE}{2} \right);$$

And as the pressure increases uniformly from the top of the wall downwards, the position of the point at which the resultant of the forces acts must be that of the centre of pressure (74), as in the case of water, at a distance of one-third of the height of the wall from the bottom, or

$$BK = \frac{1}{3} h.$$

The force P tends to overturn the wall about its outer edge A, and the force which resists it is the weight W of the wall itself acting at G, its centre of gravity; the moments therefore of W and P, taken about A, must balance each other in order that the wall may be in equilibrium. In practice, however, it will not do for a wall to be only just in equilibrium with the forces acting on it; and to secure stability, it is usual to take the moments about a point S within the base, where $AS = \frac{1}{3}t$.

The moment of P about S is $\frac{1}{3} P.h$, and that of W about S is $\frac{2}{3} w'h't^2$; and if we equate the moment of P with that of W, we obtain the following formula for the thickness t of the wall:

$$t = \frac{2}{3} \sqrt{\frac{w}{w'}} \cdot h \cdot \tan. \frac{DBE}{2}.$$

The values of $\tan. \frac{DBE}{2}$ for different angles of repose are

given in the table at the end of this chapter, as well as the corresponding values of t , as calculated from this formula.

If we take $CF = 3AS$, and make AF the face of the wall, we shall find that the centre of gravity (g) of this wedge is exactly over S , so that the value of the moment of its weight about S is zero; but the wall will still have the same stability or power of resisting the force P , while $\frac{2}{3}$ ths of the masonry will be saved. In this case the position of G has been shifted further back, so that the lever arm SL of W is increased in the same proportion as W itself is decreased, or the moment of W about S remains unaltered.

A further increase to the resistance of the wall is obtained if we take the wedge ACF from the front of the wall and place it in the position BDH at the back, for in this case we find

$$\begin{aligned} t &= \frac{2}{3} \sqrt{\frac{2}{3}} \sqrt{\frac{n}{n'}} h \cdot \tan. \frac{DBE}{2} \\ &= \frac{4}{5} \cdot \frac{2}{3} \sqrt{\frac{n}{n'}} h \cdot \tan. \frac{DBE}{2} \end{aligned}$$

Comparing this result with that obtained above, we see that the thickness may be $\frac{4}{5}$ ths of that which is necessary when the wall is vertical at the back.

16. When, instead of being level at the top of the retaining wall as at DE , the earth is sloped at the angle of repose as DE' , we have to find the angle θ which BE' makes with the horizontal when the pressure P of the triangular piece of earth BDE' is greatest against BD . Putting Q for the weight of the earth, we have as before

$$\begin{aligned} P &= Q \cdot \tan. (\theta - \phi) \\ &= \frac{1}{2} n h^2 \cdot \frac{\cos. \theta \cdot \cos. \phi}{\cos. (\theta - \phi)} \end{aligned}$$

which has the greatest value when $\theta = \phi$, in which case

$$P = \frac{1}{2} w h^2 \cdot \cos.^2 \phi$$

and the moment of P about S is

$$\frac{1}{3} P \cdot h = \frac{1}{6} w h^3 \cdot \cos.^2 \phi.$$

The moment of W is as before

$$W \times SL = \frac{3}{8} w' \cdot h \cdot t'^2$$

Equating the moment of P with that of W, we get for the thickness t' of the wall,

$$t' = \frac{2}{3} \sqrt{\frac{w}{w'}} \cdot h \cdot \cos. \phi$$

The values of $\cos. \phi$ for different angles of repose, and the corresponding values of t' , as calculated from this formula, are given in the table below.

In the following table the values of t and t' are calculated on the supposition that the retaining wall is of rectangular section and built of solid concrete whose weight per cubic foot (w') is 140lbs. Or where the wall is battered on the face as AF, t or t' will be the thickness of the wall at AB, the thickness FD at the top being $\frac{2}{3}$ AB.

Kind of Earth.	w in lbs.	ϕ	$\tan. \frac{DBE}{2}$	\cos	t	t'
Compact earth	126	55°	·315	·574	·20h	·36h
Dry do.	120	45°	·414	·707	·26h	·44h
Shingle . .	112	40°	·466	·766	·28h	·46h
Dry sand . .	100	40°	·466	·766	·26h	·43h
Dry clay . .	120	40°	·466	·766	·29h	·47h
Wet do. . .	130	20°	·700	·940	·46h	·61h
Gravel . .	110	30°	·577	·866	·34h	·51h


Those of our readers who wish to study this subject from a theoretical point of view are referred to an article in the

Philosophical Transactions for 1856, "on the stability of loose earth," by W. J. Macquorn Rankine, F.R.S., the subject of which is the mathematical theory of that kind of stability which in a mass composed of separate grains, arises wholly from the mutual friction of those grains, and not from any adhesion amongst them. The investigation is based on the following "Principle":—"The resistance to displacement by sliding along a given plane in a loose granular mass is equal to the normal pressure exerted between the parts of the mass on either side of that plane, multiplied by a specific constant." This "specific constant" is the *coefficient of friction* of the mass, and is regarded as the tangent of the *angle of repose*.

CHAPTER III.

ARCHES ; CUPOLAS ; SPIRES.

17. THE ARCH, which we now propose to consider, is a structure consisting of a number of wedge-shaped stones called "voussoirs," arranged in the form of a circle or other geometrical figure, resting upon two piers, and carrying a wall or other superstructure. These voussoirs are kept in their place by their mutual pressures which are brought into play by their own weights, together with that of the superstructure, and by the resistance offered by the piers or abutments. If a straight line is drawn through the bed joint of each voussoir which shall represent the resultant of the pressures upon that joint, a polygon will be formed by the lines representing the several resultants; the curve which touches all the sides of the polygon is the "line of pressures" of the arch, and the points where it cuts the joints are the "centres of resistance." If we divide the depth of the joints into four equal parts, the *centres of resistance* ought to lie in the two *middle* divisions, in order that the joint may not have any tendency to open either at its outer or inner edge. Also the *line of pressures* must fall within the thickness of the piers. The depth of the voussoirs also should not be less than one-thirtieth of the span in a semi-circular arch, otherwise the arch will give way by the opening of the joints. It is also desirable that the mean pressure upon




any joint should not exceed one-twentieth of the ultimate resisting power of the material composing the voussoirs.

If a transverse section is made of a cylindrical arch, the inner curve is called the "intrados," and the outer curve the "extrados."

Fig. 25.

Fig. 26.

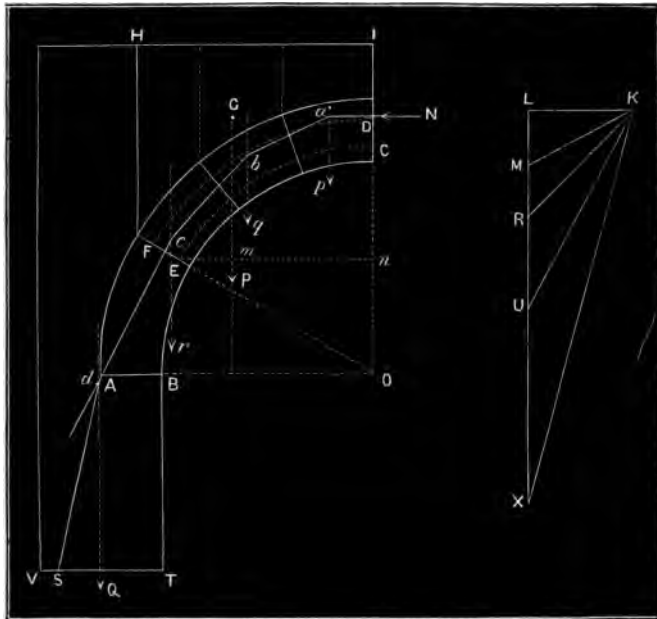

The following example will explain more fully what has been just stated, and will serve to elucidate the principles upon which the stability of an arch depends. Let ABCD (fig. 25) represent the section of half a semi-circular arch carrying a wall or "surcharge," whose summit is the horizontal line HI. The arch is kept in a condition of stability by the pressure N at D of the

other half-arch, by the weight W of the portion between DC and EF and its surcharge, and by the weight Q of the abutment HV . The joint EF , which makes an angle of 30° with the horizontal, is called the "joint of rupture," for reasons hereafter explained. Let the arch between EF and CD be divided into any number of voussoirs. In the present case we divide it into only three voussoirs for the sake of simplifying the problem. Take DC and FE equal to half the depth of the voussoirs; then, as before mentioned, it is requisite that the line of pressures shall fall between the dotted lines CE and DF . Find the centre of gravity, G , of the arch ED and its surcharge, by one of the methods previously given (6) or by the method given in (19), and let P be the weight of this mass represented by the area of the section. Find also the centre of gravity of each of the portions into which the arch and surcharge are divided, and let the weights or areas of each be p , q , and r . The force N is determined from the equation

$$N = W \frac{Em}{Dn},$$

and its direction is horizontal, and meets the vertical ap from the centre of gravity of the first voussoir and surcharge in the point a . Let the horizontal line KL (fig. 26), represent N on any scale; draw the vertical LX , and take LM as the weight or area p on the same scale; then KM will be the resultant of N and p . Draw ab parallel to KM meeting a vertical from the centre of gravity of the second voussoir and surcharge in b . Take MR (fig. 26) to represent, on the same scale as before, the weight or area q , then KR will be the direction and magnitude of the resultant of N , p and q . Draw bc parallel to KR meeting the vertical from the centre of gravity of the third voussoir


and surcharge in c . Take RU (fig. 26) as the weight or area r , then KU represents the resultant of N , p , q , and r , or of N and W . Draw cd parallel to KU meeting the vertical from the centre of gravity of the pier VH in d , and let UX (fig. 26) be the weight Q , of the pier, on the same scale as the rest; then KX will be the resultant of all the forces N , W , and Q , both in magnitude and direction. Draw dS parallel to KX , then if the point S falls within the base of the pier there will be stability; but if it falls outside or beyond the edge V , the structure will be unstable and will be pushed over by the thrust of the arch. The points where the lines ab , bc , cd , cut the joints of the voussoirs are the *centres of resistance*, and are situated upon the line of pressures. By help of such a diagram we can determine whether any arch of given dimensions is in stable or unstable equilibrium.

18. The main object aimed at in the investigations of the arch is to find what thickness must be given to the abutments in order that they may be strong enough to resist the thrust of an arch, of which the span and depth of the voussoirs is known, as well as the height of the piers and of the superstructure.

In order to understand the method of investigation, we must first examine how an arch will break up or give way if overloaded, or if the piers are too weak to sustain it.

In fig. 27 we have the section of a circular arch resting on two piers; this arch we may consider as divided into two

Fig. 27.

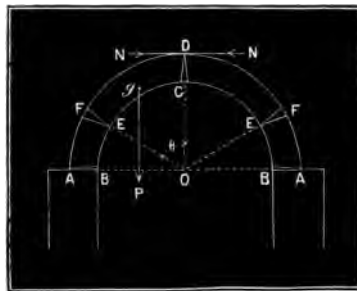

equal parts by the vertical line through the centre, which balance each other by their mutual resistance at CD. If this arch is overloaded or the piers are built too thin to resist the outward thrust which the voussoirs produce by their mutual pressures, the centre will sink, and the haunches will rise at EF, so that the arch will tend to break up into four parts; by the opening of the joint CD at C, of EF at F, and of the springing joint AB at B; hence it appears that when the arch is about to fall, the whole thrust at the crown, which we will call N, acts at the point D. The joint EF is called the *joint of rupture*, and is evidently that at which the effect of the thrust N is greatest, and its exact position in any particular form of arch can be determined by mathematical investigation. For if P is the weight of the portion between EF and CD, acting at g its centre of gravity, and its moment about E is $P \cdot x$, while that of N is $N \cdot y$, we have only to equate these moments,

$$N \cdot y = P \cdot x, \text{ or } N = P \frac{x}{y},$$

and then calculate the thrust N for different values of the angle θ which FE makes with CD, and we shall find what value of θ makes N greatest.

The algebraical expression for the value of N is rather complicated, and the full investigation will be found in Captain Woodbury's "Treatise on the Arch," and Fenwick's "Mechanics of Construction." It is there shown that the greatest value of N is obtained when θ is 60° , the arch being semicircular and all the voussoirs of equal depth. When the thrust N of the opposite half-arch is exerting its greatest force upon the joint EF, it will act horizontally at the point D or vertex of the arch; and the

moments of N and P about E will balance each other. We can, therefore, by the principles of mechanics (5) transfer them to the point E, and consider them as acting there with their original values and parallel to their original directions. The forces which are now acting on the pier, are P the weight of the arch between EF and CD (fig. 28), together with its surcharge FDKL, supposed to act vertically at E; the force $N = P \frac{x}{y}$, supposed to be

acting horizontally at E; the weight F of the portion HMBEFL acting vertically through its centre of gravity; and the weight Q of the pier MSTB, also acting vertically through its centre of gravity. Equating the moments of P, F and Q taken about S, to that of N, we shall obtain the thickness (t) which must be given to the pier in order that all the forces may be in equilibrium, or t is found from

Fig. 28.



$$N.b = P.a + F.c + Q.q \quad \text{.} \quad (\text{A})$$

which is called the *equation of equilibrium*; a , b , c , and q , being the perpendicular distances from S of the directions of the forces P, N, F, and Q, respectively. But to secure the stability of the structure we must multiply N by the *coefficient of stability*, which we may safely take as 2. We have then to determine t from the following *equation of stability*,

$$2 \mathbf{N} . b = \mathbf{P} . a + \mathbf{F} . c + \mathbf{Q} . q \quad (\text{B}).$$

The following are the values of each of these four quantities in the semicircular arch one foot in width of soffit. Let δ be the weight per cubic foot of the arch and its surcharge, δ_1 that of the pier; r the radius or half-span, h the depth of the voussoirs, k the height of surcharge DK; H the height of the pier from the base S to the springing AB, t its thickness ST.

$$N . b = \delta \frac{2H + r}{2h + r} \left\{ \frac{3k}{8} (r^2 - h^2) + .026 r^3 + \frac{3h}{8} r^2 - \frac{3h^3}{16} r - \frac{h^3}{4} \right\}$$

$$P . a = \delta (.134r + t) \left\{ .87 k (r + h) + .65 (r + h)^2 - .524 r^2 \right\}$$

$$F . c = \delta \left\{ \frac{t^2}{2} (r + h + k) + t (.089r^2 - .3hr + .134k . r - .65 h^2 - .87 h . k) + .0053 r^3 - .05 h . r^2 + .009 k . r^2 + .1 h^2 r - .12 h . k . r . + .38 k . h^2 + .25 h^3 \right\}$$

$$Q . q = \frac{\delta_1}{2} H . t^2.$$

When the pier is of the same material as the arch, the quantities δ and δ_1 can be omitted altogether. If the horizontal thrust N acting at E is required, we obtain its value from

$$N = \frac{2\delta}{2h + r} \left\{ \frac{3}{8} k (r^2 - h^2) + .026 r^3 + \frac{3}{8} r^2 . h - \frac{3h^3}{16} r - \frac{h^3}{4} \right\}$$

the value of b being $H + \frac{r}{2}$.

These formulæ appear rather complicated, but they are easy of application, and a little practice will enable anyone who has a very moderate acquaintance with algebra to calculate them readily.

Example.—Let $r = 10$, $h = 2$, $k = 5$, $H = 10$, $\delta = \delta_1 = 120$ lbs. The value of N for an arch one foot width of soffit and of the above dimensions is 4656 lbs. acting horizontally at E . Omitting the values of δ and δ_1 from the expressions as they will divide out in forming the equations, we obtain

$$N . b = 582 ; P . a = 125.16 + 93.4 t ;$$

$$F . c = 8.5 t^2 - 1.7 t + 1.4 ; Q . q = 5 t^2 .$$

And the equation (A) therefore becomes

$$13.5 t^2 + 91.7 t - 455.4 = 0 ,$$

which gives $t = 3\frac{1}{2}$ ft. for equilibrium.

The equation (B) for stability is

$$13.5 t^2 + 92 t - 1037.4 = 0$$

from which we find $t = 6$ ft. for stability.

In a semicircular arch of any other span, but of which the several proportions are the same as in the foregoing example, the thickness of the pier can be determined by multiplying the radius or half span by .6 for stability, or by .33 for equilibrium. If the height of the pier in this example is 100 instead of 10, the value of t will be 10.9 for stability; and in any other similar structure of like proportions, the thickness of the pier can be found by multiplying the radius by 1.09. In arches of different span, but having the several parts in the *same proportion*, the thrust N varies as the *square* of the span; so that if the span is doubled the thrust is increased fourfold.

If in the example above given we make $k = 8$, and $H = 20$, then the value of t is found to be $5\frac{1}{2}$ ft. for equilibrium, and $8\frac{3}{4}$ ft. for stability, the mean of which is about one-third the span of the arch. From this we obtain a general rule, that if the height of the pier to the springing of the arch, and the height from the springing line to the top of the surcharge, are each equal to the span of the arch, then the thickness of the abutments should not be less than one-third of the span of the arch.

In all the above calculations we have taken it for granted that the materials composing the arch, pier and surcharge have the same specific gravity or weight per cubic foot. If, however, the pier is of a different weight per foot from the rest of the structure, the values of δ and δ_1 must be included in the expressions; when, however, the specific gravity of the surcharge differs from that of the arch the formulæ become much more intricate, but the difference in the results obtainable will be only slight and may generally be neglected.

19. The thrust of an arch and the requisite thickness of pier may be obtained approximately by the following geometrical process, published by the present author in "The Builder" for December 28, 1867. Let there be first drawn carefully to scale a section of the half arch with its pier and surcharge, as in fig. 29, making the arc AF one-third of the arch AD.


We must now find the position of G, the centre of gravity of the portion HFECI, which can be done very nearly by taking $CK = \frac{1}{3} CD$ and joining FK; then the trapezium HFKI will have its centre of gravity corresponding very nearly with the point G, and its position is found by the method given in (6) fig. 10, by dividing the trapezium into two triangles by the line HK. We have then P the

weight of HFECI acting at G, and its moment about E is $P \times Em$; N the thrust of the other half-arch acting at D, has a moment about E of $N \times En$ (Em and En being measured by scale). Therefore $N = P \frac{Em}{En}$; P being represented by the area of the trapezium, namely,

$$\frac{HF + IK}{2} \times HL.$$

The force Q we may take as the area of the whole figure HS acting at its centre of gravity, and F as that

Fig. 29.

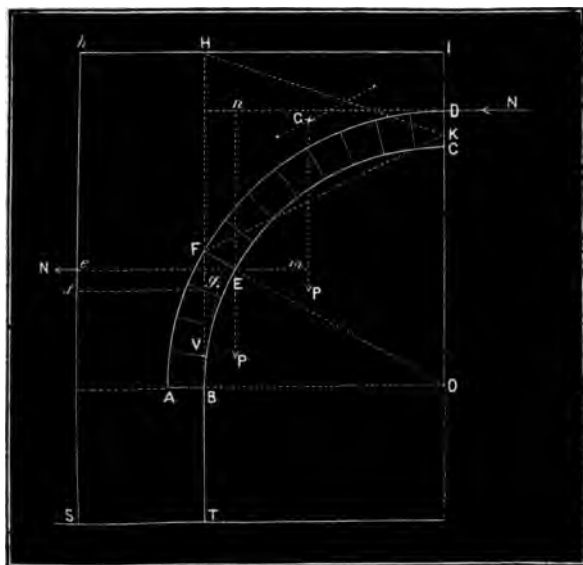

of a triangle VFE also acting at its centre of gravity (g) determined as shown in (6). The forces N and P are to be considered as acting at E , and we have now to take

the moments of P, F and Q about S, and equate them to twice the moment of N taken about S; we thus obtain a quadratic equation from which to find t , the necessary thickness of the pier for stability. The moment of N is $N \times Se$; the moment of P is $P \times Ee$; the moment of F is $F \times fg$; and that of Q is $HT \times \frac{t^2}{2}$. The application of this method is best shown by an example. Let $OB = 10$, $AB = \frac{3}{2}$, $ID = \frac{1}{2}$, $BT = 10$; then we find by measurement that $HF = 8.25$, $IK = 3.5$, $HI = 10$, $Em = 3$, $En = 6.5$, Se or $b = 15$, $Ee = t + 1.3$, $fg = t + .44$, $VF = 4$. Therefore

$$P = \frac{HF + IK}{2} \times HI = \frac{8.25 + 3.5}{2} \times 10 = 58.75.$$

$$N = P \frac{Em}{En} = 58.75 \times \frac{3}{6.5} = 27.1.$$

To find the actual value of N for an arch of one foot length of soffit, or the horizontal thrust at E, we must multiply the above quantity by the weight of one cubic foot of the material used in the structure; and if that is 120 lbs., the horizontal thrust of the arch at E will be 27.1×120 or 3252 lbs.

We can now form the moments of the forces about S as in the previous article (18).

$$N \cdot b = 27.1 \times 15 = 406.5,$$

$$P \times Ee = 58.75 (t + 1.3) = 58.75t + 76.4,$$

$$F \times fg = \frac{4 \times 1.3}{2} (t + .44) = 2.6t + 1.14,$$

$$Q \frac{t}{2} = HT \frac{t^2}{2} = 12t.$$

The equation for determining the value of t for stability is formed by putting $2 N . b$ equal to all the rest, which gives,

$$813 = 12 t^2 + 61.35 t + 78.94,$$

$$\text{or, } t^2 + 5.1 t - 61.2 = 0,$$


from which we obtain $t = 5.7$.

The foregoing method will also enable us to determine whether a given thickness of pier (t) will suffice to secure the stability of an arch of known dimensions. In the last example, let us suppose 5 feet to be the given value of t , then we must put 5 for t in all the quantities which contain t , and see whether their sum is less or greater than 813, which is the value of $2 N b$; if it is less, then 5 is too little, and if greater, it is more than enough. When $t = 5$, $P \times Ee = 370$, $F \times fg = 14.4$, $\frac{Qt}{2} = 300$; the sum of these is 684, which being less than 813, the structure will be wanting in stability. If we take $t = 6$, then we find their sum is 877, which being more than 813, the structure will possess ample stability. We can thus by trials of two or three values of t find the thickness that will ensure stability, without having to solve a quadratic equation.

20. When several arches of equal size are arranged in a straight line and supported on piers, their thrusts will balance each other, so that the piers need not be of the strength which we have been finding by the foregoing formulæ, but only sufficiently strong to support the super-incumbent load acting vertically upon them; and it is only necessary that the end piers or abutments shall be of the strength given by the above rules. When, however, the arches are arranged round a circle or polygon

instead of in a straight line, the case is different, there being an outward thrust which is not counterbalanced by the mutual reactions. For example, suppose we have eight arches arranged in the form of an octagon on plan

Fig. 30.

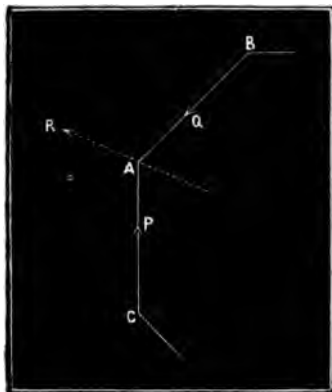

and supported only upon light piers; let AB (fig. 30) represent one side of the octagon; AC an adjoining side; P the horizontal thrust of the arch AC, Q that of the arch AB; the forces P and Q being equal will, by the principles of mechanics (2), have a resultant R whose direction bisects the angle BAC. The tendency therefore of the forces P and Q is to thrust out A

in the direction, AR; and we must therefore have a counterbalancing force equal to R acting towards A in the direction RA, in order that the forces may be in equilibrium. From (2) we at once find the relation which R must bear to P and Q;

$$\begin{aligned} \text{for, } R : P &:: \sin. QAP : \sin. RAQ, \\ \text{or, } R : P &:: \sin. 45^\circ : \sin. 67\frac{1}{2}^\circ \\ &:: 101 : 132 \end{aligned}$$

$$\text{so that} \quad R = P \times \frac{101}{132}.$$

Example.—Let eight arches be arranged in the form of an octagon, each being of the form and dimensions of the example in (19). Let the soffit of the arches be

2 feet wide, then the value of P or of Q is 2×3252 or 6504 lbs.

$$\text{Therefore } R = 6504 \frac{101}{132} = 4976 \text{ lbs.}$$


The force R may be the thrust of another arch placed in the direction AR; and if this arch has the same proportions as the other arches, we can at once determine its span, since the thrusts of similar arches are to one another as the squares of their spans. Now the span of the arches forming the octagon being 20 feet, we find,

$$\begin{aligned} \text{span of arch in AR} &= 20 \sqrt{\frac{R}{P}} = 20 \sqrt{\frac{101}{132}} \\ &= 17.5 \text{ feet.} \end{aligned}$$

No allowance is here made for the resistance offered by the pier, which is supposed to be only of sufficient strength to bear the vertical weight of the superstructure.

21. SEGMENTAL ARCH.—The thrust of segmental arches, and the requisite thickness of pier, may be determined in the same manner as in semicircular arches, with such modifications as the particular case may demand. Let us take an arch whose form is that of a segment of a circle, subtending 120° at the centre, as in fig. 31. The joint of rupture will be at the springing or skew-back EF, since FEO makes 60° with the vertical; the forces P and N will be the same as in the semicircular arch

Fig. 31.

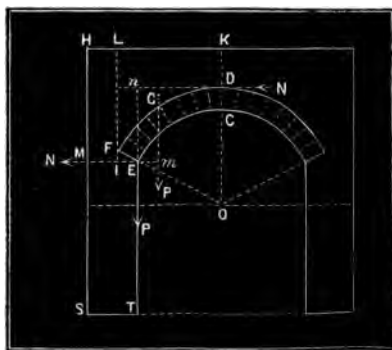

(18) and will act at E; N will act in the direction of EM, and P in that of ET; P being the weight of the figure LFECK acting at its centre of gravity G; Q the weight of the pier MSTE. The force F we can now consider as the area of the parallelogram HMIL (neglecting the small wedge EFI). Then the moments of the forces about S are

$$P \times EM = P \cdot t; N \times ET = P \frac{Em}{En} ET;$$

$$F \times \frac{MI}{2} = HM \frac{MI^2}{2}; Q \frac{t}{2} = ET \frac{EM^2}{2} = ET \frac{t^2}{2}.$$

Putting $ET = H$, and the other dimensions as in (18) we have as before (page 48)

$$N \times ET = \delta \frac{2H}{2h+r} \left\{ \frac{3k}{8} (r^2 - h^2) + .026 r^2 + \frac{3h}{8} r^2 - \frac{3k^2}{16} r - \frac{h^2}{4} \right\}$$

$$P \cdot t = \delta \cdot t \{ .87k (r + h) + .65 (r + h)^2 - .524r^2 \}$$

$$F \times \frac{MI}{2} = \delta \cdot HM \times \frac{MI^2}{2} = \frac{\delta}{2} \left(\frac{r}{2} + h + k \right) (t - .87h)^2$$

$$Q \times \frac{t}{2} = \delta_1 \cdot ET \times \frac{t^2}{2} = \frac{\delta_1}{2} H t^2.$$

Then the value of t for stability is determined as before, by equating twice the moment of N to the sum of the three other moments. The span in this arch will be $1.732r$.

Let us apply it to an arch having the dimensions of the example in (18). The actual value of N for an arch having a soffit one foot wide is, as before, 120×38.8 , or 4656 lbs. Omitting δ , and making $ET = 10$, we get

$$2 N \times ET = 776; P \cdot t = 93.4t;$$

$F \times \frac{MI}{2} = 6t^2 - 20.88t + 18.24$; $Q \frac{t}{2} = 5t^2$; and the equation for stability becomes

$$776 = 11t^2 + 72.5t + 18.24$$

which reduces to

$$t^2 + 6.6t - 68.9 = 0;$$

therefore

$$t = 5.8 \text{ ft.}$$

The span of this arch is 17.32 feet. In any other segmental arch of similar proportions, the thickness of pier will be .58*r*.

We will now take the case of a segmental arch which subtends an angle of 90° at the centre O. The joint of rupture will be at the springing as before, but the springing EF being now nearer the crown, the thrust N is less than in the semicircular arch of same radius. The value of N acting horizontally at E for an arch whose soffit is 1 foot in width is,

$$N = \frac{\delta}{h + .29r} \left\{ .012r^2 + .25(h + k)r^2 - .07h^2r - .13k^2 - .25hk^2 \right\}$$

and the moment of N about S is $N \times ET = N \times H$. Also,

$$P \times ST = \delta \cdot t \{ .7k(r + h) + .46(r + h)^2 - .4r^2 \}$$

$$F \times \frac{MI}{2} = \frac{\delta}{2} (3r + h + k)(t - .7h)^2$$

$$Q \times \frac{t}{2} = \frac{\delta_1}{2} H \cdot t.$$

The span of this arch is 1.414*r*.

As an example of this form of arch, we will find the thrust and thickness of pier when the other dimensions are the same as in the last example.

The value of N for an arch having a soffit one foot wide and of material weighing 120 lbs. to the cubic foot, is 120×36.3 , or 4356 lbs., which is the horizontal thrust at E . Then, supposing the whole structure to be built of the same material, and therefore omitting the weight δ from the calculations, we have twice the moment of N about S equals 726 ;

$$P \cdot t = 68t; F \times \frac{MI}{2} = 5t^2 - 14t + 9.8;$$

$$Q \frac{t}{2} = 5t^2. \text{ The equation for stability is}$$

$$726 = 10 t^2 + 54t + 9.8;$$

$$\text{or,} \quad t^2 + 5.4t - 71.6; = 0;$$

$$\therefore t = 6.2 \text{ ft.}$$


The span in this case is 14.14 ft. In any other segmental arch of the same form and proportions, the thickness of pier must be $.62r$.

If in this last example, we make the height H , of the pier ET , 100 feet instead of 10 feet, its thickness must be 11 feet; and in the like proportion for any other height between 10 and 100 feet.

The *flat-arch* frequently used over small openings is in reality a segmental arch, as the joints are made to radiate towards a fixed point O , the distance of which from the skewback EF may be considered as the radius r . Thus, suppose a horizontal line to be drawn across at E and another at D (fig. 31), and the line OEF produced to meet the horizontal through D , and the joints of the voussoirs of the segmental arch $DCEF$ to be produced to meet these two horizontal lines, we shall have a *flat-arch* represented by the segmental arch, and its thrust on the wall will be the same as that of the segmental arch.

22. GOTHIC ARCH.—The thrust of “Gothic” or pointed arches (fig. 32) can be calculated in the same manner as described for semicircular arches, only the position of EF, the joint of rupture, has to be determined for each particular case separately, as it varies according to the *pitch* of the arch. Thus, in the

Fig. 32.

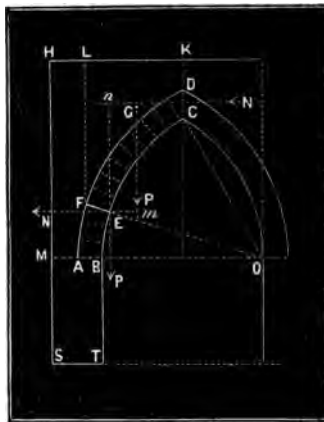

equilateral arch, in which OC makes 30° with the vertical, the joint FE makes the angle 16° with the horizontal; in an arch in which OC makes 15° with the vertical, EF makes 28° with the horizontal; and when OC makes 45° with the vertical, EF makes 10° with the horizontal. The equilateral arch may be taken as a good representation of the general forms of large Gothic arches. In this case we suppose N to act at the middle of the joint CD, its moment about E being $N \times En$ which equals $P \times Em$; P being, as before, the weight of the portion LFECK acting at G its centre of gravity. Also F is the weight of the part HLFEBM acting at its centre of gravity; Q the weight of the pier MBTS. Then the value of N acting horizontally at E is found to be in the equilateral arch,

$$N = \frac{\delta}{\cdot 6r + \cdot 6h} \left\{ k (\cdot 11r^3 - \cdot 46h^2) + \cdot 013r^3 + \cdot 12r^2 \cdot h - \cdot 27h^2 \cdot r - \cdot 45h^3 \right\}.$$

If this is multiplied by the height SN, or b , we have $N \cdot b$

the moment of N about S. In this case $b = H + \cdot 28r$.
The moments of P, F and Q about S are

$$P.a = \delta (\cdot 04r + t) \{k (\cdot 46r + h) + \cdot 1r^2 + hr + h^2\}$$

$$Q.q = \frac{\delta_1}{2} H . t^2$$

$$\begin{aligned} F.c = & \delta \{t^2 (\cdot 5k + \cdot 43r + \cdot 6h) + \\ & + t (\cdot 026r^2 + \cdot 04h.r - \cdot 52h.r - k^2 - h.k) \\ & + k (\cdot 008r^2 + \cdot 04h.r + \cdot 5h^2) \\ & + \cdot 006r^2 + r.h (\cdot 24h - \cdot 013r) + \cdot 45h^2\}. \end{aligned}$$

These are readily calculated by putting for r , h , k and H , their respective values; $r = OB$, $h = EF$ or AB , $k = DK$, $H = MS$. We then find t for stability from the equation,

$$2 N . b = P . a + F . c + Q . q.$$

Example.—Let $r = 10$, $h = 1$, $k = 4$, $H = 10$, $\delta = \delta_1 = 120$ and $b = 12\cdot 8$. Then $N = \delta . 9\cdot 7$, or omitting the values of δ and δ_1 we have $2 N . b = 248\cdot 3$; $P . a = 43\cdot 4t + 17\cdot 4$; $F . c = 6\cdot 9t^2 - 6t + 11\cdot 15$; $Q . q = 5t^2$. Therefore the equation is,

$$248\cdot 3 = 11\cdot 9t^2 + 37\cdot 4t + 28\cdot 55;$$

$$\text{or, } t^2 + 3\cdot 14t - 18\cdot 5 = 0;$$

$$\therefore t = 3 \text{ feet.}$$

The horizontal thrust of N at E in this arch for every foot width of soffit is 1164 lbs. In any arch of similar proportions the thickness of the pier must be three-tenths of the span. If we increase the height of the pier to 100 feet, or ten times the span, the thickness of pier must be 5\cdot 55 feet, or $\cdot 555r$. These investigations of the

thrust of Gothic arches were first published by the present writer in "The Builder," March 31, 1866.

23. ELLIPTIC ARCH.—The horizontal thrust of an elliptical arch can be found approximately from that of a semicircular one; being nearly the same as that of a semicircular arch, having the same span, but whose vertical depth is to that of the elliptical arch as the major to the minor axis of the ellipse. (Fenwick's "Mechanics of Construction.") Thus, suppose the height of the ellipse is 20 feet to a span of 60 feet, the axes being in the proportion of 3 to 2; then if the voussoirs at the crown are 2 feet deep, the equivalent circular arch will have a radius of 30 feet, and depth of voussoirs 3 feet. This is only an approximation, and the exact relations between the several parts may be investigated directly in the same manner as given for the circular arch; but the algebraical formulæ are more complicated, and the position of the joint of rupture must be determined in each particular case. In an ellipse, however, which is not very flat, the joint of rupture may be taken as very nearly that which makes 30° with the horizontal, as in the circular arch.

24. GOTHIC VAULTING consists of a number of stone arched ribs which spring from the walls of a building, or from corbels projecting therefrom; the space between the ribs being filled in with stone panelling of a light character. To avoid complicating the question of thrust in such arches, we will suppose the vaulting to consist of transverse ribs whose direction is at right angles to the walls, and diagonal ribs making 30° with the former, as in the plan, fig. 33. The transverse rib (fig. 34) we will suppose to be an equilateral arch. We will at present omit from the investigation all intermediate ribs and

filling in, which can be allowed for by adding something to the thickness of the main ribs themselves. The back of the ribs is filled up to the haunches as far as HK , so as to prevent them from yielding at that part; OH making 30° with the horizontal. In this kind of arch, having but little surcharge, there is a tendency to break up by the rising of the crown and the falling in of the

Fig. 33.


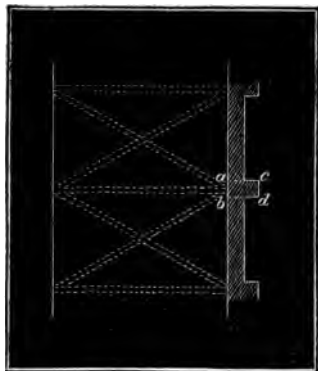


Fig. 34.

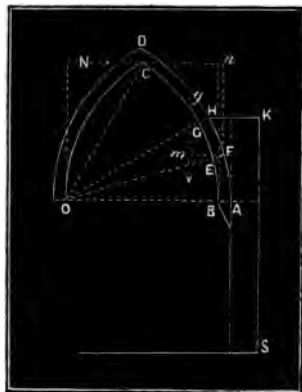

haunches; so that the joint CD will tend to open at D , and the joint of rupture EF to open at E ; the portion above EF tending to turn over on the point F . We shall here take EF as making 16° with the horizontal as in (22). The horizontal thrust N at the crown will now act through C , and its moment about F will equal that of P about F ; P being the weight of the part above EF acting at the centre of gravity g . Let l be the breadth of soffit of each rib, h the depth of the ribs, r the radius OB , δ the weight per cubic foot. Then the value of N is found to be

$$N = \frac{l \cdot \delta}{\cdot 6r - \cdot 3h} \left\{ \cdot 15h \cdot r^2 + \cdot 65h^2 \cdot r + \cdot 4h^3 \right\}.$$

The moment of N about S , the outer edge of the base of the pier, is $N \cdot b$; where $b = H + \cdot 28(r + h)$; H being the height of the pier to the springing AB . Also if we put P , the weight of the portion above EF , acting in this case at F , R that of the part $HFEBA$, acting vertically through its centre of gravity, their moments about S are

$$\begin{aligned} P \cdot a &= l \cdot \delta (\cdot 04(r + h) + t) \{ \cdot 01r^2 + \cdot 8h \cdot r + \cdot 7h^2 \} \\ R \cdot c &= l \cdot \delta \{ t(\cdot 01r^2 + \cdot 3h \cdot r + \cdot 15h^2) + \cdot 0002r^2 \\ &\quad + \cdot 004h \cdot r^2 + \cdot 14h^2 \cdot r + \cdot 05h^3 \}. \end{aligned}$$

The diagonal ribs will not have the same pitch as the transverse ones, but we may, without materially affecting the calculations, treat them as equilateral, having for their radius $1 \cdot 16r$. The thrust of these ribs will be oblique, so that we must only take the resolved part of the horizontal thrust N' perpendicular to the wall, multiplying by $\cos. 30^\circ$, or $\cdot 87$. The value of N' acting perpendicularly to the wall for each diagonal rib is

$$N' = \frac{l \cdot \delta}{\cdot 8r - \cdot 3h} \left\{ \cdot 2h \cdot r^2 + \cdot 8h^2 \cdot r + \cdot 4h^3 \right\}.$$

r being the radius of the *transverse* rib. Then the moment of N' about S is $N' \cdot b'$, where $b' = H + \cdot 32r + \cdot 28h$. Also we find,

$$\begin{aligned} P' \cdot a' &= l \cdot \delta (\cdot 04r + \cdot 03h + t) \{ \cdot 013r^2 + \cdot 9hr + \cdot 7h^2 \}. \\ R' \cdot c' &= l \cdot \delta \{ t(\cdot 013r^2 + \cdot 35h \cdot r + \cdot 15h^2) + \cdot 0002r^2 + \\ &\quad + h \cdot r(\cdot 005r + \cdot 14h) + \cdot 04h^3 \}. \end{aligned}$$

We will take the width ab (fig. 33) of the pier as $3l$; then we have

$$Q \cdot q = \frac{3l \cdot \delta_1}{2} \left(H + \frac{1}{2}(r + h) \right) t.$$

The equation from which t is found for stability is $2N \cdot b + 4N' \cdot b' = P \cdot a + 2P' \cdot a' + Q \cdot q + R \cdot c + 2R' \cdot c'$.

Example:— $r = 20$, $h = 1$, $l = \frac{1}{2}$, $H = 30$, $\delta = \delta_1 = 120$; $N = \delta \times 3.14$, $N' = \delta \times 3.07$; $b = 35.88$; $b' = 36.68$. The horizontal thrust N of the transverse rib at F is found to be 377 lbs.; that of the two diagonals resolved perpendicular to the wall, or $2N'$, is 737 lbs.; or the total thrust at F is 1114 lbs. The thickness (t) of the pier is found by the formulæ: (omitting the value of δ)

$$2N \cdot b = 225; 4N' \cdot b' = 450;$$

$$P \cdot a = 8.7 + 10.4t; 2P' \cdot a' = 19.9 + 24t;$$

$$R \cdot c = 3 + 5.2t; 2R' \cdot c' = 6.4 + 12.4t;$$

$$Q \cdot q = 30.4t^2. \text{ And the equation for stability becomes}$$

$$675 = 30.4t^2 + 52t + 38;$$

$$\text{or,} \quad t^2 + 1.7t - 21 = 0;$$

$$\therefore t = 3.8 \text{ feet.}$$

In any other vaulting of the same proportions, t is found by multiplying the *half-span* by .38. If the value of H is 60 feet, the value of t in the above example must be 4.3 feet.

The foregoing example applies only to a vaulting of skeleton ribs, and omits the pressure upon them which is produced by the filling in of the panels between the ribs. Let us now suppose this filling in to be 3 inches or $\frac{1}{4}$ ft. in thickness, and to be of the same kind of material as the ribs. The pressure on the transverse rib will be

greatest at the crown, and will diminish to nothing at the springing; it will be the same as if we added $2AB$ or $2h$ to the thickness at C , or of a rib whose depth at C is 3 feet and at AB 1 foot. The centre of gravity g at which P acts will also be moved nearer to C , so that not only is P increased but also the length of Fm its lever arm about F . We shall therefore obtain an approximate value of N if we multiply P by 2 and Em by $\frac{3}{2}$, so that in this case we have (18)

$$N \cdot y = 2P \times \frac{3}{2}x,$$

$$\text{or, } N = 3P \frac{x}{y},$$

or N is three times as great as in the case of the skeleton ribs. $P \cdot a$ will also be twice as great, so that we must put $3N$ for N and $2P$ for P in the above formulæ of calculation. In the diagonal rib the load at the crown is half that upon the transverse rib, but increases to the same amount at the springing. We may therefore put $2N'$ for N' and $2P'$ for P' in the above formulæ. We have then

$$3N = 1131; 4N' = 1474;$$

$$\text{horizontal thrust at } F = 3N + 4N' = 2605 \text{ lbs.}$$

$$6N \cdot b = 675; 8N' \cdot b' = 900,$$

$$2P \cdot a = 17.4 + 20.8t; 4P' \cdot a' = 39.8 + 48t.$$

Hence the equation for stability becomes

$$30t^2 + 86t - 1508 = 0,$$

$$\text{or, } t = 5.8 \text{ feet.}$$

And in any other vaulting of which the several proportions are the same, the value of t is found by multiplying the *half-span* by .58.


25. OBLIQUE ARCH.—When two roads at different levels cross one another in directions which are not at right angles to each other, and an arch is thrown across the lower road to carry the upper one, it is called an “oblique” or “skew” arch; and the angle which a perpendicular to the axis of the lower road makes with the axis of the upper one is called the “angle of obliquity.” If the courses of an *oblique* arch were built so as to be at right angles to the abutments, as in the ordinary arch, a large part of them would have no abutment at one side, and the arch would fail. If, on the other hand, the beds of the courses were parallel to the two faces of the arch, they would abut obliquely on the piers, and the soffit would not form an even surface.

This last plan has occasionally been adopted in small arches of moderate obliquity, but would be very deficient in stability if used for large arches, or where the obliquity was considerable. The method employed in forming large oblique arches is to consider the arch as a portion of two concentric cylinders cut obliquely by the two planes forming its faces, and which are parallel to the direction of the upper roadway. The solid contained between these two cylinders is cut by a number of screw surfaces all of similar form and described about a common axis; and these again are intersected at right angles by another set of screw surfaces, also of similar form. In this way the solid contained between the two cylinders is divided into a number of equal and similar solids which are the voussoirs of the arch. The templates for forming these voussoirs require to be made with considerable accuracy, the several angles being calculated by the help of trigonometry for each particular case. The rules for getting out the templates are given in Buck’s “Treatise on

Oblique Arches,"* to the last edition of which Mr. Barlow has added a method of arriving at the necessary results without the actual use of trigonometrical formulæ. A small work by Mr. W. Donaldson also gives a very accurate method. Oblique arches should always be segments of circles of considerable flatness, and the obliquity may be made with safety as great as 65° .

In fig. 35, DEP represents the semicircle of which APB is the segment employed as the section of the soffit

Fig. 35.

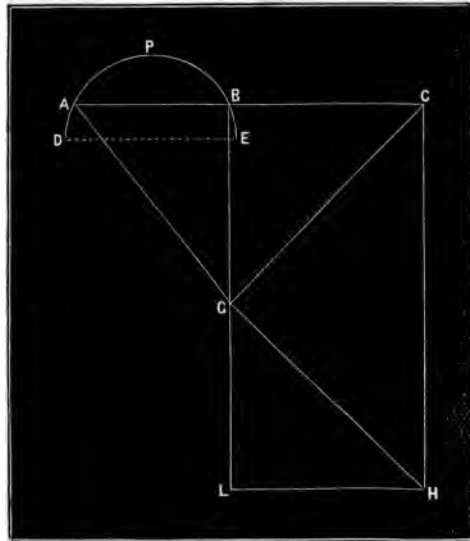


of the oblique arch. Let BAG be the angle of obliquity; BC the length of the arc APB developed, and drawn perpendicular to BG. Then GC is the spiral of the heading joints, and is to be divided into the determined

* Lockwood & Co.

number of voussoirs. To this the direction of the coursing joints is to be perpendicular. Make GH perpendicular to GC, and CH parallel to BG; draw HL perpendicular to CH; then GH is the development of the segmental spiral, and GL its axial length.


Fig. 36.

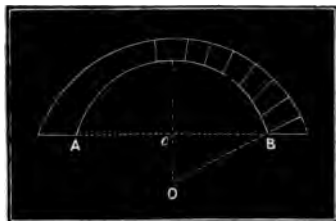

The lines of the faces of the arch are ellipses, and the joints of the voussoirs all radiate from a point O (fig. 36) situated below the springing line or axis of the cylinder; its position being found by calculation.

26. CUPOLAS.—If we suppose an arch of any form of section to revolve about its vertical axis, a hollow shell will be formed, which is called a “cupola” or “dome.” Such a shell is often built over a circular chamber, either underground or above ground. When built underground, it possesses great strength and power of resistance to pressure, having all the rigidity of the vertical and horizontal arch combined, and any thrust is entirely overcome by the surrounding earth. The dome is built on the principle of the arch, having wedge-shaped voussoirs; but as it consists of a series of horizontal rather than vertical arches, it follows that as soon as any number of courses are completed the structure is in a condition of stability, and requires no further support from centering except for the construction of the remaining courses; so that any number of the upper courses may be omitted without endangering its stability. When a dome is elevated upon a circular wall or “drum,” it will produce a certain horizontal thrust upon the wall. The investiga-

tion of the thrust and necessary thickness of wall may be made in the same manner as that adopted in the case of the ordinary arch, by considering the dome to consist of a number of lunes or thin slices cut out of the entire dome by two planes intersecting at the vertical axis, and making a small angle, such as 2° , with each other. Fig. 37 represents a lune cut out of one side of a circular dome, which for the sake of investigation we may consider as balanced by an equal lune cut out of the opposite side;

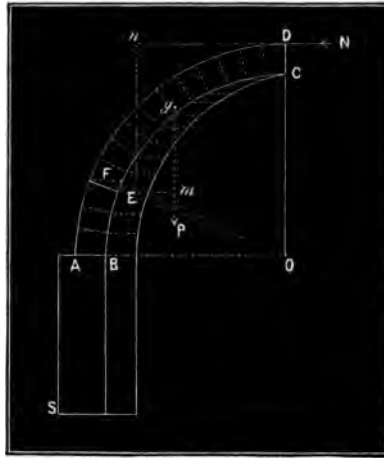

the two lunes meeting at the crown CD, and balancing each other by their mutual pressures, which we call N, acting horizontally. Of course such lunes could not be built to stand alone, but the lateral pressure of the whole circle of lunes keeps them together. The horizontal thrust of a dome upon the walls is much less than would arise from an ordinary arch of equal span ; and it may be reduced still further by means of iron belts girding the dome at a short distance above the springing. The joint of rupture in the hemispherical dome is ascertained, by analytical methods, to be that which makes 20° with the horizontal ; it is therefore at this level that the iron belt will produce the greatest effect in counteracting the thrust.

Using the same notation as in the arch, we have P the weight of the part above the joint of rupture EF; F that of the part below EF; Q that of the portion of the wall or *drum* on which the lune stands; N the horizontal thrust. Having determined the position of the joint of rupture EF, we can suppose P and N to be transferred to E; F to act at the centre of gravity of the part between EF and AB; Q at the centre of gravity of the pier BS. Let R and r be the external and internal radii of the dome; δ the weight of a cubic foot of the dome. Then the thrust N at E of the 180th part of the dome is found to be,

$$N = \delta \frac{.00719r (R^3 - r^3) - .00393 (R^4 - r^4)}{R - .342r}.$$

Hence it appears that in domes of similar proportions the horizontal thrust varies as the *cube* of the diameter or span.

The moment of N about the outer edge of the pier is $N \cdot b$, where $b = H + .342r$; H being the height of the pier to the springing of the dome.

In order, however, to simplify the problem and render the calculation easier, we shall take the lune of the dome at the base as 1 foot in length instead of the 180th part of the whole circumference, the length of 1 foot being taken half-way between A and B; so that we must multiply the above value of N by 180, and divide by the circumference of the circle whose radius is $\frac{1}{2} (R + r)$. We shall also consider that the same material is used throughout in the construction both of the dome and of the pier, so that we may omit the value of δ from the equations. We thus obtain the following moments of the forces N, P, F, and Q, taken about the outer edge S of the pier.

$$N . b = \frac{H + \cdot 342r}{R + r} \cdot \frac{\cdot 412 (R^2 - r^2) r - \cdot 225 (R' - r')}{R - \cdot 342r}$$

$$P . a = \frac{R^2 - r^2}{R + r} (\cdot 439t + \cdot 026r)$$

$$F . c = \frac{\cdot 149 (R^2 - r^2) (t + r) - \cdot 11 (R' - r')}{R + r}$$

$$Q . g = \frac{1}{2} H . c.$$

Then the value of t for equilibrium is obtained as in the case of the arch, from the equation

$$N . b = P . a + F . c + Q . g.$$

For stability we get t from the equation

$$2 N . b = P . a + F . c + Q . g.$$

As an example, let $R = 11$, $r = 10$, $H = 50$; then we find $N . b = 107.2$; $P . a = 6.92t + 4.16$; $F . c = 2.35t - .8$; $Q . g = 25t^2$. The equation for equilibrium therefore is

$$25t^2 + 9.3t - 104 = 0,$$

which gives, $t = 1.86$.

The equation for stability is

$$25t^2 + 9.3t - 211 = 0,$$

which gives, $t = 2.7$.

The value of N or the horizontal thrust at E , for the 180th part of the dome in the above example is 92 lbs. as obtained from the first equation given above, if we put $\delta = 125$ lbs.; or the total horizontal thrust is 16560 lbs. for the whole dome.


In any other hemispherical dome whose thickness is one-tenth of the radius, and the height of the pier five times the radius, the thickness of the pier for stability is .27 r . When H is 10 ft., t is found to be 2.37 ft.; and

when H is 100 ft., t is 2·8 ft. The dome in this case is supposed to be of uniform thickness throughout, and the wall or pier of solid construction.

When the section of the dome is a Gothic or pointed arch, the position of the joint of rupture will depend on the *pitch* of the arch; if the *pitch* is low or the section differs but little from a semicircle, the joint of rupture will make an angle of nearly 20° with the horizontal, but if the *pitch* is high, it makes a much smaller angle. Thus, for instance, if the radius drawn to the vertex makes only 10° with the vertical, the joint of rupture makes 17° with the horizontal; but when that radius makes $22\frac{1}{2}^\circ$ with the vertical, the joint of rupture makes $13\frac{1}{2}^\circ$ with the horizontal; and if it is at 30° with the vertical, then the joint of rupture is 10° only with the horizontal. The value of N , or the horizontal thrust at E , diminishes as the pitch increases; so that, if in the hemisphere it is 92, in the Gothic domes of the three sections above described it is 88·7, 80·4, and 77·3 respectively, the *span* being the same in all. In a parabolic dome of the same span as the above, the height being equal to half the span, the thrust is 79·6, and acts at the springing, which is the joint of rupture. If the thickness of the hemispherical dome is made to diminish upwards, so as to be half the thickness at the crown, that it is at the springing, the thrust is greatly decreased, being only 55·8 in the dome of 20 ft. span, as compared with 92 in the dome of uniform thickness. The foregoing description is taken from two papers by the present writer on the "Stability of Domes," read before the Royal Society, May 31 and November 22, 1866, and published in the "Proceedings of the Royal Society," No. 85, and also in the "Civil Engineer and Architect's Journal" for February and March, 1868.

27. CONICAL DOMES OR SPIRES.—The strongest kind of dome is that which has the conical form, and is generated by the revolution of two triangles such as AOC, BOD (fig. 38) about a vertical axis OC; the part ABDC between the triangles forming the solid shell of the dome or spire. In constructing a spire the beds of the masonry should be at right angles to the slope of the cone, and not horizontal, as is frequently the case. Take any one of the beds, as EF, and let the weight w of the portion above EF act at its middle point I and be represented on

Fig. 38.

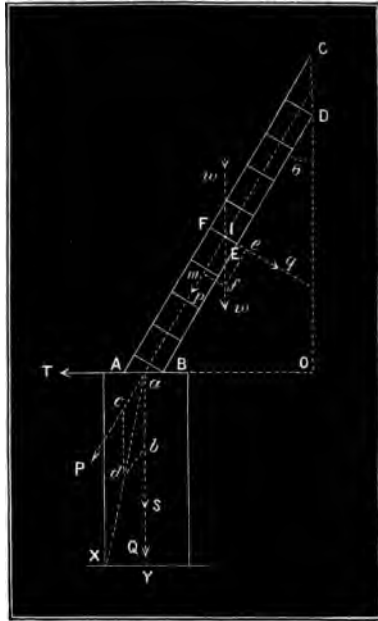

any scale by the vertical line If. By drawing a rectangle having If for its diagonal we can now resolve w into two other forces (2), namely q acting parallel to FE and represented by the line Ie, which will be counteracted by a corresponding force from the opposite side of the cone; and p acting parallel to AC and represented by the line Im or ef, which is the only force of which we need take account; and by the principle of the resolution of forces we have

$$p = w \cdot \cos BDO.$$

Suppose the spire to rest on the level top AB of the vertical wall AX, and let W be the total weight of a slice of the cone whose base is 1 foot in length measured at the middle point *a* of AB; let P be the resolved part of W acting at *a*. Then if we put θ for the angle BDO, we have,

$$P = W \cdot \cos \theta$$

$$W = \frac{\delta}{3} \cdot \frac{R^2 K - r^2 k}{R + r}$$

where OC = K, OD = *k*, and δ is the weight of a cubic foot of the structure.

Draw the vertical line *aY* which we will suppose to pass through the centre of gravity of the wall. Take *ac* to represent on any convenient scale the force P in the direction of Ia produced, and *ab* on the same scale to represent the weight Q of the wall in the line *aY*; and complete the parallelogram *abdc*; then the diagonal *ad* will represent on the same scale the resultant of the forces acting on the wall, and if this line cuts the base of the wall within the outer edge X, the structure will be in a condition of stability; if it passes through the point X, it will be just in equilibrium and the least additional thrust will overturn it. If *ad* produced cut the base outside the point X, then the structure will be in a condition of instability, and will be overthrown.

Resolving the force P at *a* horizontally and vertically, and putting T for its horizontal component or the thrust at AB acting outwards and tending to overturn the wall; S for its vertical component acting in the line *aY*, Q for the weight or area of section of the wall also acting in the line *aY*; we have,

$$T = P \cdot \sin \theta = \frac{1}{2} W \cdot \sin 2 \theta$$

$$S = W \cdot \cos^2 \theta$$

$$Q = \delta \cdot H \cdot t$$

where H is the height XY and t the thickness of the wall. In order to find the value to be given to t for any known value of T , we must equate the moment of T taken about X with the sum of the moments of S and Q about the same point. If we suppose the material used in the construction of the spire and the wall to be of the same density, we can omit δ from the expressions.

$$T \times AX = \frac{1}{2} W \cdot H \cdot \sin 2 \theta$$

$$= \frac{1}{6} \frac{R^2 K - r^2 k}{R + r} H \cdot \sin 2 \theta$$

$$S \times YX = \frac{1}{2} W \cdot t \cdot \cos^2 \theta$$

$$= \frac{1}{6} \frac{R^2 K - r^2 k}{R + r} t \cdot \cos^2 \theta$$

$$Q \times YX = \frac{1}{2} H \cdot t^2.$$

The value of t which will produce equilibrium between the forces is found from the equation

$$T \times AX = (S + Q) YX$$

and the value of t which is required for stability in the structure is obtained from the equation

$$2 T \times AX = (S + Q) YX.$$

As an example we will take the case of a conical spire whose section is an equilateral triangle; then $\theta = 30^\circ$, $\sin \theta = \cdot 5$, $\cos \theta = \cdot 87$, $\cos^2 \theta = \cdot 75$, $\sin 2 \theta = \cdot 87$. Let $R = 11$, $r = 10$; then $K = 19$, $k = 17\cdot 3$; and let $H = 20$. Then we find $W = 9$; $T \times AX = 78$,

$S \times YX = \frac{27}{5} t$; $Q \times YX = 10 t^2$. The equation for equilibrium becomes

$$80 t^2 + 27 t - 624 = 0$$

or, $t = 2.63$.

The equation for stability is

$$80 t^2 + 27 t - 1248 = 0$$

or, $t = 3.78$.

In this form of dome or spire there is no outward thrust in the cone itself provided the beds of the stones are laid at right angles to the slope; but if the beds are horizontal there will be a tendency to slide outwards at each layer of stones, as shown by the horizontal thrust T where the base of the cone rests upon a level bed on the top of the wall at AB .

28. IRON DOMES.—The domes which we have hitherto considered are supposed to be built up of masonry or brickwork, and to be of considerable thickness: these have but little lateral or cohesive strength, their stability mainly depending upon their weight and resistance to compression. There is another material, however, of which domes may in some cases be constructed, namely, wrought iron in thin plates riveted together into the form of a cone. Such a cone possesses great lateral or tensile strength which entirely prevents any outward thrust from being thrown upon the supporting wall, and its crushing strength is so great that a considerable saving in weight or pressure upon the foundations can be effected, the thickness of the plates being diminished from the base upwards, since the compression is greatest at the lowest part and decreases towards the top. The tensile strain at any part is also proportional to the diameter and therefore to the quantity of metal, being

greatest at the base where there is most resistance, and diminishing upwards with the diminution of the thickness of metal. In such a dome there is no loss of power or waste of material, the greatest amount of strength being obtained with the least possible quantity of metal. Openings to an almost unlimited extent can also be made so as to form a mere skeleton dome provided that all the parts remain connected together, and the openings may be filled in with glass or other material, without seriously affecting the stability of the structure.

Conical domes of wrought iron can be erected of much vaster dimensions, and at much less cost, than is possible with those of stone or brick, one having been built by Mr. J. Scott Russell for the Vienna Exhibition of 1873 with a span of 360 feet, the slope being 30° with the horizon, and the base elevated 80 feet from the ground. The upper portion of the cone was cut away, leaving an opening 100 feet in diameter, over which another conical dome was erected on a drum 34 feet high, on the top of which was a third dome 24 feet diameter on a drum 28 feet high, making a total altitude from the ground to the summit of 280 feet, the whole being constructed of wrought iron. A full description of this dome will be found in the "Transactions of the Institute of Architects, for 1874."

CHAPTER IV.

BUILDING STONES.

29. THE stones used for structural purposes in this country are divided into five distinct classes, namely: 1, Granites; 2, Sandstones; 3, Limestones; 4, Oolites; 5, Magnesian Limestones.

These stones are all a combination of several simple bodies such as silica, lime, magnesia and alumina, which are their chief ingredients; whilst iron, in the form of oxide, and potash are found in smaller proportions. *Silica*, or *silicic acid*, which forms a large part of many stones, is itself a compound of oxygen with the element silicon, and is found in its purest form in quartz, flint and sand. It is exceedingly hard so as to be able to scratch glass, and is unaffected by acids, but is acted on by alkalies when heated with them. *Lime* is a compound of oxygen with the metal calcium, but is never obtained pure, being mostly found as a carbonate, or in combination with carbonic acid, for which it has a great affinity, and which it will absorb from the atmosphere if left exposed for a length of time. The lime used in making mortar is obtained from the carbonate by driving off the carbonic acid and water in a kiln, and is then in the form of *quick-lime*, which absorbs water with great avidity and development of heat, and then becomes *slacked-lime*. Lime is also obtained in combination with

other acids, especially sulphuric acid, with which it forms the sulphate of lime, as in alabaster and gypsum, from which *Plaster of Paris* is obtained by heating and driving off the water, so that when water is added to the plaster it again becomes a hard and solid mass. Sulphate of lime is nearly insoluble in water, but the carbonate is readily dissolved. We can easily distinguish the two substances by the application of a little dilute acid, which produces violent effervescence in the carbonate, owing to its giving off carbonic acid, while the sulphate is unaffected. *Magnesia* is a compound of the metal magnesium with oxygen, and is generally obtained in the form of carbonate; this is not so readily acted on by dilute acid as the carbonate of lime, a very slight effervescence only being produced. *Magnesia* also occurs sometimes in combination with sulphuric and silicic acids. *Alumina* consists of the metal aluminium combined with oxygen, and is mostly found in combination with silica, forming the silicate of alumina which is the basis of the various clays.

Iron is never found in the pure metallic state on account of its affinity for oxygen, with which it forms the oxide or peroxide. It is seldom entirely absent from any mineral substances, the varied tints of which are chiefly due to its presence in greater or less proportion. The red and reddish-brown stones contain the largest quantities of iron, while those which are light brown, or cream-coloured, contain only a slight trace of it. *Potash*, which is the metal potassium combined with oxygen, is a powerful alkali, and is found in small quantities in granites and some other stones.

The above-named substances are said to be "chemically" united to the oxygen and acids with which they

combine, the combining proportions being always the same in the same materials, and the substance which results from the combination differs entirely from the original elements, the peculiar features of which have been lost or merged into those of the compound body. When, however, two or more of these compounds are found mixed together in a stone, they are said to be "mechanically" united, their proportions varying considerably, while the bodies themselves still retain most of the characteristics they possessed when separate. Thus we find silica combined *mechanically* with carbonate of lime in every variety of proportion, there being no *chemical* union between them.

30. GRANITES are classed by geologists among what are termed "metamorphic" rocks, having been originally deposited in a very different condition to that in which they are now found. They possess a more or less crystalline character, which has been produced by long-continued chemical action combined with great heat and pressure, by which their original nature has been entirely transformed. Granites differ considerably in the qualities of durability, hardness and crushing strength, some being readily disintegrated by the action of weather, while others possess great durability, and may be safely employed to resist the constant wearing effects of water. Their resistance also to crushing varies very greatly, specimens of Cornish granite having been crushed with a weight of 6,400 lbs. per square inch, while others from Peterhead and Aberdeen have required a pressure of 8,300 lbs. and 10,900 lbs. per square inch to crush them. The specific gravity of granite varies from 2.6 to 3; and the weight per cubic foot from 162 lbs. to 188 lbs.

The component parts of granite are quartz, feldspar,

mica or talc, and sometimes hornblende. These are *mechanically* united in various proportions, each of the three being a distinct mineral composed of bodies which are *chemically* united. *Quartz*, which forms about 70 per cent. of the composition of granites, is nearly pure crystallized silica or silicic acid, and is the hardest of all the substances found in the composition of rocks; and the durability of stone often depends on the proportion of silica which it contains, it being perfectly insoluble in water or acids, although it is soluble in powerful alkalies. *Feldspar* is the mineral which gives the varieties of tint to granites, the colour being chiefly owing to the greater or less proportion they contain of the peroxide (rust) of iron. In 100 parts of feldspar, 65 are generally silica, 18 alumina, which is the basis of clays, and 16 potash. Those granites which contain a large proportion of feldspar, are not suited for external building purposes, as this material is the first component which is decomposed by the action of weather or of weak acids, and is converted thereby into a soft friable mass of earthy matter. *Mica* consists of thin transparent plates of great hardness, and to it is due the glittering appearance observable in granite. It contains 40 to 50 per cent. of silica, 16 to 37 per cent. of alumina, $7\frac{1}{2}$ to 10 per cent. of potash, and a considerable proportion of the peroxide of iron.

Hornblende is a heavy, dark-coloured crystalline substance found in a species of granite known by the name of "Syenite"; silica composes nearly one-half of its weight, lime and magnesia about one-third, and alumina one-eighth; it also contains iron and manganese in varying proportions. The presence of hornblende generally adds to the strength and durability of the granite.

Granite is quarried in various parts of England, Wales, and Scotland; the grey being found in Devon, Cornwall, and the Channel Islands; grey and pink granite at Mount Sorrel, in Leicestershire; a reddish kind in Cumberland and Westmoreland, as the Shap granite, which is remarkable for its handsome appearance when polished. In Scotland both red and grey are got from Peterhead, in Aberdeenshire, and a pink kind is found in the Isle of Mull, on the west coast, which is highly prized for ornamental purposes. It is also quarried extensively in the counties of Perth, Kinkardine, Banff, Inverness, Kirkcubright, and Wigtown. All the harder granites are susceptible of a high degree of polish, which greatly increases their beauty and durability. Granite lies at the bottom of the strata forming the crust of the earth, but from the action of subterranean forces it has been lifted up, so that it forms the substance of some of the highest mountains.

SERPENTINE is a stone that may be classed among granites on account of its *metamorphic* character, although it differs entirely from them in composition and structure, being chiefly composed of silica and magnesia in nearly equal proportions, and coloured with the oxide of iron. It is not suited for external use, but is valuable as an ornamental stone, being capable of receiving a good polish, which develops the beauty of its tints. It is chiefly obtained from the Lizard in Cornwall, and from Holyhead in Anglesea.

SLATE is another substance found among the oldest rocks, which is metamorphic in character, its composition being chiefly silica and alumina. By the action of heat, combined with enormous pressure, its natural bed has generally been destroyed, and a new kind of bedding

called *cleavage* produced, so that it can be readily split into thin slices on the planes of cleavage. It is remarkable for its cohesive strength, as well as its power of resisting compression, both of which are from 8 to 10 tons per square inch in the best Welsh slates. Slate is obtained in several parts of North and South Wales, in Cumberland and Westmoreland, and the northern part of Lancashire. In Scotland slate is found in the counties of Argyle, Perth, Forfar, Aberdeen, and Banff.

31. SANDSTONES are so called from being chiefly composed of sandy or siliceous particles, which are cemented together by a small proportion of carbonate of lime. They all contain more or less of the peroxide of iron, to which material their variety of colour is owing; the red and brown sandstones containing as much as three per cent. of iron, while in the light-coloured stones only a slight trace is to be found. Sandstones also vary greatly in quality, some being soft and easily reduced to powder from want of a proper material to cement the particles of silica together; whilst others which have a good cement are among the hardest of the rocks. They may also be said to belong to nearly all the main divisions of the geological crust of the earth; those found in the lower or more ancient strata being harder, heavier, and more durable than those found in the higher or more recent strata. Thus, for example, in this country we have sandstones in the "Chalk" formation of Surrey, Sussex, Hants, and Dorset, which weigh only 103 lbs. to 111 lbs. per cubic foot, and these are generally of a soft and friable nature. Others are found in the "Wealden" which underlies the "Chalk," weighing 118 lbs. per cubic foot, as the Calverley stone, near Tonbridge Wells. In the "Lias," which is below the "Wealden," we

find sandstones weighing 127 lbs. per cubic foot, as in the neighbourhood of Whitby. In the "New Red Sandstone" series which underlies the "Lias," there are sandstones, such as that of Mansfield, weighing 146 lbs. to the cubic foot, and having a crushing strength of 5,000 lbs. per square inch. The Mansfield stone forms in its chemical composition a connecting link between the sandstones proper and the magnesian limestones, being found to contain 49 per cent. of silica, $26\frac{1}{2}$ per cent. of carbonate of lime, and 16 per cent. of carbonate of magnesia. The red Mansfield stone is considered to be less durable than the white.

There are many other quarries of serviceable stone in the "New Red" series, as in the neighbourhood of Newcastle and Whitehaven; Northallerton, Stockton, and Richmond in Yorkshire; in Lancashire, near Liverpool, Preston and Barrow; in several parts of Cheshire, Derbyshire, Staffordshire, Warwickshire, Salop, and Gloucestershire.

By far the largest number, as well as the most useful, of the sandstones are obtained from the "Carboniferous" series, which underlies the "New Red Sandstone;" for although this series derives its name from the presence of layers of coal, yet the larger proportion of it consists of sandstone rocks, varying greatly in texture and character, but known generally by geologists as the "grits." They are all more or less laminated, which enables us in most cases to detect readily the natural bed of the stone; some are so highly laminated that they split up with a slight blow into thin slabs or "flags," and are then only fit for paving purposes. The "grits" are generally very durable *when laid on their natural bed*, but if placed in front of a wall with their bed vertical they will flake off like the leaves of a

book, when exposed to the action of the atmosphere. Their weight varies from 140 lbs. to 160 lbs. per cubic foot, and the crushing strength from 4,000 to 8,000 lbs. per square inch. They contain from 93 to 98 per cent. of silica, with only a very small quantity of carbonate of lime; hence they are valuable stones for buildings which are exposed to a smoky or damp atmosphere, as weak acids do not injure them.

The chief quarries of the "grits" are found in Yorkshire, the term "York" being given in London to most of the stone which comes from that county. Some of these are in the form of "slabs" and "flags" for paving purposes, and are chiefly obtained from the vicinity of Halifax and Leeds, as well as in the parts of Lancashire bordering on Yorkshire. Other stones, such as those of Bramley-fall and Park-spring, near Leeds, and from Huddersfield and Halifax, are well suited for the best architectural work. The stone of Darley-dale, in Derbyshire, is a compact grit of brownish colour, possessing a high degree of crushing strength; and also the Craigleith stone, found near Edinburgh, which is less dense, but has a greater strength. The red sandstone of Dundee has a fine close grain, but is softer and less durable than many of the other stones belonging to this series.

The formation next below the "Carboniferous" in geological sequence, and known as the "Old Red Sandstone," contains many varieties of sandstones suitable for building purposes, some of which are highly durable, while others, which contain a considerable proportion of iron, are found to decompose rapidly. They are heavy stones, weighing from 150 lbs. to 160 lbs. per cubic foot. This formation is largely developed in several parts of Scotland, and some good building stones are obtained at

Dumfries, Corsehill on the Solway Frith, Roxburgh, Jedburgh, Berwick, Lanark, and many other places in the southern counties. In the central counties there is good stone to be had near Dundee, Forfar, and Stonehaven; and in the northern parts at Cromarty and Inverness. The "Old Red" is found on the West of England, and forms a large part of Salop, Hereford, and Gloucester; as at Lydney, Tortworth, Coleford, Newnham, Leominster, Malvern, and Chepstow. A similar formation is also found in Devonshire and Cornwall, where red and grey sandstones are obtained in large quantities. Red is the predominant tint in the stones of this formation.

32. LIMESTONES are so called from being chiefly composed of the carbonate of lime, and are found more or less in nearly all the geological strata. They vary greatly in texture, some having the softness of chalk, and others a hardness equal to that of granite. Those which are not fit for use as building stones are valuable for burning into lime. The weight of the "freestones" which can be used for building is from 130 to 150 lbs. per cubic foot, and the crushing strength from 2,000 lbs. to 6,000 lbs. per square inch. The Chilmark stone (Wilts), belonging to the Oolitic series, has a crushing strength of 6,395 lbs. per square inch, and contains $10\frac{1}{2}$ per cent. of silica, 79 per cent. of carbonate of lime, 3.7 per cent. of carbonate of magnesia. It weighs 151 lbs. per cubic foot.

Some portions of the chalk formation produce limestones suitable for building purposes, as that of Totternhoe in Bedfordshire, of Beer near Axminster, of Devizes in Wilts, of Andover, Basingstoke, and Sherborne in Hants, and at many other places. The Kentish Rag is a hard limestone found in the lower "Greensand formation," and is much used for rough walling. In the "Wealden"

strata is found a fossiliferous limestone which goes by the name of "Sussex Marble," being sufficiently hard to receive a polish, and is found in the neighbourhood of Petworth and Staplehurst. In the "Lias" formation there are some good limestones at Shepton Mallet, Wellington, Yeovil in Somerset; at Merthyr in Glamorgan; at Ketton, in Rutland; at Whitby, in Yorkshire; and at Castle Carey, in Dorset. A very hard limestone is found below the Coal measures, and is occasionally worked for building, as in the neighbourhood of Leicester, and of Bristol, and also in some parts of Scotland; it constitutes the marble of Derbyshire. The Devonian formation produces a considerable quantity of good building limestone in South Devon, some of which makes an excellent marble.

33. OOLITES, which form a large and very useful class of building stones, are limestones of a peculiar construction, being composed of small particles, like the *roe* of a fish, cemented together. They contain little or no silica, being almost entirely composed of carbonate of lime with a small proportion of the carbonate of magnesia. The best of those found in this country is from the Island of Portland, which contains 1·2 per cent of silica, 95 per cent of carbonate of lime, and 1·2 per cent of carbonate of magnesia. Its crushing strength is 3,900 lbs. per square inch, and its weight varies from 132 lbs. to 136 lbs. per cubic foot. Bath stone contains no silica, but has 94½ per cent. of carbonate of lime, and 2½ per cent. of carbonate of magnesia. The crushing strength of that from the Box quarries is 1,492 lbs. per square inch, and its weight is 123 lbs. per cubic foot. The Ancaster stone has a similar composition to the Bath, but is harder and heavier, its crushing strength being 2,345 lbs. per square inch, and its weight 139 lbs.

per cubic foot. The oolitic formation lies geologically between the Chalk and the New Red Sandstone, and is divided in four distinct series, the upper of which is the *Portland* oolite, below this the *Oxford* oolite, next comes the *Bath* oolite, and lastly the *Inferior* oolite. *Portland oolite* is so called from the island of that name on the Dorset coast, which is entirely composed of oolitic stone, but of variable quality, the quarries on the east of the island producing better stone than those on the west. In the same quarry also there is a great difference in quality, the stone of the middle or "Whitbed," generally known in London as *brown* Portland, being considered best for building purposes, although the lower bed is more often used on account of its whiteness and being easy to work. The stone of Chilmark and Tisbury, although not decidedly *oolitic*, belongs to the Portland series, which is also found in the counties of Bucks and Oxford. *Oxford oolite* is developed at Headington and Wheatly in Oxfordshire, the stone from which has been much used for buildings in Oxford; also about Weymouth and other parts of Dorset. *Bath oolite* is found in North Wilts, in the neighbourhood of Chippenham; also in parts of Gloucestershire, Northampton, Lincoln, and Rutland. There is much difference in Bathstone as regards durability and hardness, that which is called "Box ground" being generally considered best for outside work. *Inferior oolite* is found in Somerset, the stone of Doultling belonging to this series has been much employed for buildings of importance, and has a crushing strength of two tons per inch. It is also found at Hamhill near Yeovil, and Dundryhill near Bristol; at Painswick and other parts of Gloucestershire it yields an excellent building stone; the counties of Lincoln and Rutland also produce many quarries of the *Inferior* oolite.

34. MAGNESIAN LIMESTONE derives its name from being composed of the carbonates of lime and magnesia in nearly equal proportions. It belongs geologically to the New Red Sandstone series. The texture is very irregular, and consequently it is not to be always depended upon as a good *weather* stone; that which is most crystalline is generally the best for resisting the action of weather. The stone from Bolsover is the hardest and most compact found in this country, its crushing strength being 8,300 lbs. per square inch, and its weight 152 lbs. per cubic foot. It contains 3·6 per cent. of silica, 51 per cent. of carbonate of lime, and 40 per cent. of carbonate of magnesia; its specific gravity is 2·43. The weight of that from the Anston quarries is 144 lbs. per cubic foot. The name *Dolomite* is also applied by geologists to the formation producing the Magnesian limestone, which, however, occupies but a small tract of country in England on the edge of the coal-measures of Yorkshire, Durham, and Nottingham, extending from Mansfield in the south to Tynemouth in the north, and including Hartlepool, Darlington, Ripon, Tadcaster, Doncaster, and Mansfield.

35. POROSITY.—A very important feature to be considered in selecting stone for the outside walls of buildings is the amount of water which it will absorb when exposed to the action of driving rains. A large number of specimens of various kinds of stone, well dried, were left for several days in water, and being carefully weighed both before and after the saturation, the exact quantity of water absorbed was ascertained. Among sandstones, we find that specimens of Craigneith stone and from Park Spring (Yorkshire) absorb ·08 of their bulk of water; Kenton stone, ·099 of its bulk; Heddon stone, ·104 of its bulk;

Mansfield white, ·092 ; and **Mansfield red**, ·104. **Morley Moor stone** (Derbyshire) absorbs ·134 of its bulk ; **Redgate stone** (Durham) absorbs ·104 of its bulk.

Among the magnesian limestones, the **Bolsover stone** absorbs ·079 of its bulk of water ; **Jackdaw Craig**, ·104 of its bulk ; **Huddlestone**, ·12 ; **Roach Abbey stone**, ·172 ; **Park Nook**, ·221 ; **Cadeby**, ·256. Of the limestones which are not oolitic, the **Chilmark** absorbs from ·028 to ·086 of its bulk of water ; **Hamhill**, ·115 ; **Barnack**, ·141.

Of the oolites, **Portland stone** absorbs ·135 of its bulk of water ; **Ketton**, ·151 ; **Ancaster**, ·166 ; **Box (Bath)**, ·169 ; **Haydor (Lincoln)**, ·207.

The absorbent power or porosity of stone is often found to be inversely as its density or specific gravity ; thus, among sandstones, the **Park Spring**, whose density is 2·42, is least absorbent ; and the **Morley Moor stone**, whose density is 2·09, is most absorbent. Among magnesian limestones, the **Bolsover**, having a density of 2·43, is least absorbent ; and the **Cadeby**, whose density is 2·03, is most so. Of the limestones, **Chilmark**, which has a density of 2·52, is least absorbent ; and **Barnack**, whose density is 2·19, is most absorbent. Among oolites, the rule does not hold quite so strictly, as **Ancaster stone** has both a higher density and greater absorbent power than **Portland** ; but **Bath stone**, whose density is considerably less than either, absorbs more water ; while the **Haydor**, which is denser than **Bath**, absorbs much more water still.

36. STRENGTH.—The resistance of stones to a crushing force will generally be found to vary with their density, when the composition is similar ; the strength of **Park Spring**, whose density is 2·42, being 7,600 lbs. on the square inch ; while that of **Kenton**, whose density is 2·32,

is 5,000 lbs.; and Morley Moor stone, with a density of 2.09, has a strength of 3,050 lbs. Bolsover stone has a strength of 8,300 lbs., with a density of 2.43; while that of Roach Abbey is 3,900 lbs., with a density of 2.23; and that of Cadeby is 1,634 lbs., with a density of 2.03. Portland has a strength of 3,900 lbs., with a specific gravity of 2.17; that of Haydor is 1,780 lbs., to a density of 2.13; and that of Bath is 1,500 lbs., to a density of 1.97.

The cohesive strength of stone, when subjected to a tearing or tensile force, is comparatively small, being only 500 lbs. per square inch in Chilmark, and rather less in Craigleith stone. When large flat stones, in which the area of the beds is great in proportion to the thickness, are subjected to heavy pressure, it is necessary to be very careful in making the beds perfectly even; otherwise, if there is any projection in the bed, it becomes a fulcrum for the superincumbent weight to break the stone upon, it being then subjected to a transverse strain instead of a simple crushing weight. It is in consequence of neglecting this precaution that large stones are so frequently fractured, the resistance of stones to transverse strain being much less than their resistance to crushing.

37. MORTAR is the material used for causing the beds of stones and bricks of which a wall is built to adhere together, so as to form one solid mass. It is composed of lime and clean sand intimately mixed together with water. The lime is obtained by burning limestone in a kiln, by which means the water and carbonic acid in combination with the lime are driven off and "quick" lime is obtained. When water is added to quick-lime it is rapidly absorbed, great heat being given out at the same

time; the lime thus becomes the hydrate of lime and is said to be "slacked;" it then gradually "sets," and absorbs carbonic acid from the atmosphere, returning to its old condition of carbonate of lime, and, in conjunction with the sand, forms a siliceous limestone. Mortars that harden slowly should be protected from the weather for some time, as rainwater easily dissolves the hydrate of lime if exposed to its action before it has had time to become a carbonate.

The cohesive power of mortar is very slight while still moist, but as it dries this power increases, and in course of time may become as great as that of the stone or brick which it unites. Much, however, depends on the quality of the lime and the proportion of sand, about two or three of the latter to one of the former being generally used to make good mortar. *Fat* limes, or those which slack quickly when water is applied to them, do not generally make such strong mortar as *poor* limes, which take longer time in the process. It has been found that a great additional cohesive strength may be given to mortar by adding to it a small proportion of plaster of Paris, or, as it is called, rendering it "selenitic." The strength of mortar also depends much on the quality of the sand, which should be perfectly free from all earthy or clayey matters.

Some limes, when mixed with sand and water, have the property of setting or hardening in walls that are built under water; such limes are termed "hydraulic," and generally contain a considerable proportion of alumina, with silica and oxide of iron. The Lias formation which underlies the Oolites supplies the greater part of the stone for these limes.

38. CEMENTS are artificial compounds of lime, iron,

silica or sand, and alumina or other materials: they do not require any admixture with sand, which only weakens them. When mixed with water they set rapidly, and become very hard in a few hours. The principal cements used for building walls are those known as "Roman" and "Portland," the former being a mixture of limestone with pozzolana, which contains all the ingredients mentioned above, besides small quantities of magnesia, potash, and soda. These are intimately mixed together in water, dried, and burnt in a kiln, and afterwards ground. Portland cement is generally a compound of limestone, such as chalk, with the mud obtained from river banks, the process of manufacture being similar to that of Roman. These cements are stronger after having been kept for some months in a dry place, than if used fresh. The cohesive strength of Portland, when used neat to form a joint between bricks or stones, is about 500 lbs per square inch, when thoroughly hardened. Cements for inside decorative purposes which go by the names of "Parian," and "marble," are composed chiefly of plaster of Paris mixed with borax or alum. They harden rapidly, and are capable of receiving a certain degree of polish.

39. PROTECTION of the face of stones which are much exposed to weather or the action of acids is of great importance in this climate, and various processes have been devised for preventing disintegration. Ransome's method is to coat the stone with a thin film of silicate of lime, which is done by first washing the surface with a solution of silicate of soda, obtained by boiling flints in a solution of caustic soda. The surface is then played upon with a solution of the chloride of calcium, obtained by dissolving lime in muriatic acid; a chemical change immediately

takes place, the silicate of soda changing to silicate of lime, which is insoluble in water, and the chloride of calcium changing to chloride of sodium or common salt, which is very soluble in water, and is easily washed off.

Ransome's concrete stone is prepared in a similar manner. Finely sifted dry sand is mixed with a small proportion of pulverised stone or carbonate of lime, to each bushel of which mixture is added one gallon of the liquid silicate of soda, and the whole is well mixed in a mill. The plastic mass thus obtained is put into moulds and well rammed with wooden instruments so as to fill up all the interstices. When turned out of the moulds the blocks are played upon with a cold solution of the chloride of calcium, by which the mass is quickly solidified. It is then immersed in a boiling solution of the same material, and when removed from the bath is washed with water to remove the salt deposited on the surface. The crushing strength of this material varies according to the nature of the substances used in its composition.

Browning's solution for protecting the surface of stone can be applied like paint with an ordinary brush after the surface has been thoroughly cleansed. The composition of this varnish is as follows : 85½ per cent by weight of benzoline, or other similar spirit, 10 of a resinous gum such as "gum dammar," 2 of wax, 2 of sugar of lead, and ½ per cent. of corrosive sublimate.


For full information respecting the building stones of this country the reader is referred to the report of the Commissioners on Stone for Building the Houses of

Parliament, most of which is reprinted in Gwilt's "Encyclopædia." Also to the mineral statistics of the United Kingdom in the "Memoirs of the Geological Survey of Great Britain," edited by R. Hunt, in which there is a short notice of all the important quarries in the kingdom.

CHAPTER V.

TIMBER.

40. GROWTH.—The various timbers used for the purposes of building are derived from the class of trees which botanists denominate “Exogens” or outward growers, the new wood being added to the *outside* of that formed during the previous year. All trees found in cold climates and also the greater part of those in the tropics, belong to this class. The mode of development is as follows: the first year’s growth of the stem consists of a central part called the *Pith*, which is surrounded by a woody stem, covered on the outside by the *Bark*. In the second year the inner part of the bark separates from the wood, and sap forms between the wood and the bark, the new sap-wood being connected with the pith by means of cross passages called medullary rays, through which the secretions pass from the outside to the centre. The root absorbs juices from the soil and conveys them to the woody fibres immediately surrounding the pith, by which they pass upwards and throughout all the branches to the leaves. By means of the leaves the superfluous water is given off, and the fluid entirely changes its nature. It now descends through a series of tubes in the inner part of the bark, and is deposited so as to form the new wood, bark, &c. The circulation



of the sap will continue in trees after the *outer* part of the bark has been removed. The *pith* connects the root with the leaf-buds, to which it conveys nourishment; it is at first green, and filled with fluid, but loses its colour as it dries up when the tree gets old; this is the first part that decays in the live tree, the *dead knots* found in wood being the dried up pith of the branches, and many trees which appear sound outside will, when cut up, be found partly decayed in the middle. The cellular mass of the stem is pressed into plates of various thickness by the wedges of wood formed within it, so that when a transverse section is made of the stem these plates appear as a number of lines radiating from the centre, and are called the medullary rays. The medullary sheath consists of spiral vessels surrounding the pith, projections of which pass through it into the medullary rays; by means of this sheath oxygen is conveyed to the leaves, being obtained by the decomposition of water or of carbonic acid. Surrounding this sheath is the *wood* proper, which consists of concentric layers formed by successive deposits year after year of the nutriment which descends from the leaves. In countries which have a winter and summer, each layer of wood is the produce of one year's growth; the secretions are found most abundant in the oldest layers, and when these become filled up they cease to perform any vital function, and form what is termed *heart wood*. The bark also consists of concentric layers, being increased by additions to its inner layers so as to allow for the gradual distension of the wood beneath; the outer bark does not increase but splits off, and a new one takes its place. The bark serves the double purpose of being a protection to the new wood, and also a filter through which the

descending juices pass. The part immediately under the bark is called the *sap-wood*, being that in which the fluid descends, and is deposited year by year; the quantity is greater in some kinds of trees than in others, the oak having about three times as much as the chesnut, and fir trees having about four times the quantity. This part of the tree contains the largest quantity of *albumen*, which is a material that readily decomposes. Growing trees contain a large quantity of water, and timber that has been newly cut is found to have from 20 to 45 per cent. of water, according to the character of the wood, the harder woods having less water than the softer. Before the wood can be used for building purposes, much of this water must be driven off, either by exposure to the air or by heating to about 130° Fahrenheit. The durability of timbers depends, in a considerable degree, on the quantity of *turpentine* they contain, as this is nearly insoluble in water, and prevents the decay of the wood. *Tannin* is also a very serviceable material in timber, giving great durability to such woods as contain the greatest quantity of it, as for example the oak.

41. DECAY.—When timber has been employed in a building, it is sometimes found, after a few years, to be in a state of decay, so that the safety of the whole structure becomes endangered. This generally arises from the use of new timber insufficiently seasoned. When a tree is fresh cut down it contains a considerable amount of moisture, especially in the part near the outside called the *sap-wood*. Before, therefore, being used in a building it should be well seasoned, so as to get as much as possible of the sap out of it; if this is not done a certain amount of fermentation will take place in the albumen contained inside the timber, which causes the deposition of the

spores of fungi upon it, as these are constantly floating in the air unperceived, and only waiting for a situation suitable to their development in order to deposit themselves. If the timber is in a damp place without ventilation or a free current of air, the fungi develop very rapidly into minute fibres, covering the whole surface of the wood with a white film; these fibres penetrate into all parts of the wood, from which they suck the juices, and soon leave nothing but a soft, dry, powdery mass, which will fall to pieces when touched. A free current of air is hostile to the growth of the fungi, while a stagnant condition of the air, especially if the temperature is high, accelerates their growth. If sap-wood is used in a building, it is always the first to be affected by decay.

The prevention of decay in timber is a subject which has occupied the attention of many scientific persons, who have invented various processes of more or less utility. The most important point, however, is to get rid of all the superfluous water and sap, which can be done by soaking the wood for a few days in water, and then gradually drying in air, or by the quicker process of placing it in a chamber raised to a temperature of 130° ; but timber must not be over-dried, otherwise it becomes brittle. If a solution of chloride of mercury or corrosive sublimate is injected into the pores of the wood, it combines with the albumen, and renders it insoluble, and thereby prevents its decomposition. Steeping wood in a fluid obtained from tar, and called *creasote*, is a very effective method of preventing decay, but can only be applied to rough timbers, as joists, sleepers, or rafters. Washing the surface with a solution of sulphate of copper or of corrosive sublimate, will prevent the formation of fungus on the surface

of wood, and the latter is effective against the attacks of insects.

42. BEAMS.—Timber, when used as a beam, may be loaded in several different ways ; either fixed at one end and loaded at the other, or over its entire length ; or supported at both ends and loaded in the middle, or loaded at several points, or loaded uniformly over its whole length. For convenience of calculation we shall give a distinct formula for each mode of loading. In obtaining these formulæ, it is assumed that the resistance of the material to extension and compression is exactly in proportion to the tensile and compressive strains applied ; also that the neutral axis coincides with the centre of gravity of the section (10), the strains on the beam being less than sufficient to cause permanent injury to the fibres.

It has been previously shown (12), that when a beam is fixed or supported in a horizontal position and strained by a force (W), the “moment of resistance” of the beam at any section is directly as the *moment of inertia* of the section, taken about its *neutral axis*, and inversely as the distance of the neutral axis from the farthest edge of the section.

When a rectangular beam $A B$ is fixed in a wall at A (fig. 16)* and strained by a weight W at the other end B , the *moment of the strain* M at any point D (where $B D = x$) has been shown (8) to be

$$M = W \cdot x,$$

and this must be equal to the *moment of resistance*, which has also been shown to be

$$M = S \frac{I}{z},$$

* Page 21.

where I is the moment of inertia of the section, z the distance of the neutral axis from its furthest edge, S the strain per square inch of section, and depending on the nature of the material. The section of the beam being a rectangle of depth d and breadth b , we have by (12), $I = \frac{1}{12} b \cdot d^3$, and $z = \frac{1}{2} d$.

Hence it follows that

$$W \cdot x = \frac{1}{6} S \cdot b d^2.$$

The strain is of course greatest when $x = l$, the length of the beam, or we have for the case of a beam fixed at one end and loaded at the other,

$$W = \frac{1}{6} S \frac{b d^2}{l} \quad . \quad . \quad (A).$$

When the weight W is uniformly distributed over the entire length of the beam, we have from (8) for the moment of strain at A ,

$$M = \frac{W}{2} l = \frac{1}{6} S \cdot b d^2,$$

$$\therefore W = \frac{1}{3} S \frac{b d^2}{l} \quad . \quad . \quad (B).$$

for a beam fixed at one end and uniformly loaded over its whole length. When the beam is supported at each end and loaded at the distance a from one end and b from the other, it has been shown (8) that $M = W \frac{a \cdot b}{l}$, therefore in such a case

$$W = \frac{1}{6} S \frac{b \cdot d^2}{a \cdot b} l \quad . \quad . \quad (C).$$

If the load is in the middle, $a = b = \frac{1}{2} l$, and

$$W = \frac{2}{3} S \frac{b d^2}{l} \quad . \quad . \quad (D).$$

for a beam supported at each end and loaded in the centre.

When the beam is uniformly loaded throughout, we have, by (8), $M = \frac{1}{8} W l$, and therefore

$$W = \frac{4}{3} S \frac{bd^2}{l}. \quad (E).$$

For a beam supported at each end, and loaded with $\frac{1}{2} W$ at each of two points dividing the length into three equal parts,

$$W = S \frac{bd^2}{l}. \quad (F).$$

Comparing this with (D) we see that the beam will bear half as much more load than it will when W is at the centre.

The value of S has to be determined by experiment, for each kind of material. For if a beam, supported at each end, breaks with a load W at the middle, the value of S can be obtained from the equation,

$$S = \frac{3}{4} W \frac{l}{b \cdot d^2}.$$

Experiments by Barlow* on beams of the best English oak, 7 ft. long and 2 in. square, give $W = 637$ lbs. as the breaking weight in the middle. Substituting these values in the formula for S , we have,

$$S = \frac{3}{4} \times 637 \times \frac{84}{2 \times 4} = 10,033 \text{ lbs.}$$

In order to find the strength of any other beam of oak, we have only to substitute this value of S in either of the foregoing formulæ, (A), (B), (C), (D), (E), (F).

In a similar manner the value of S may be obtained

* Barlow, *On Strength of Material*. Lockwood & Co.

from the experiments of Barlow upon other kinds of timber, as given in the table below, the length being in feet, and all the other dimensions being put into inches in using the formulæ, and the breaking weight W in lbs.

	Value of S .
Red pine	671
Pitch „	816
Riga fir	540
Beech	778
Oak, British	836
„ Dantzic	730
„ Canadian	883

From the above formulæ it will be seen that the breaking weight at the weakest part of a rectangular beam is proportional to the breadth multiplied by the square of the depth, divided by the length. Also, by comparing (D) and (E), it appears that when the weight is equally distributed over the whole length of the beam, the breaking weight is twice as great as when concentrated at the centre. Hence we may consider the beam's own weight as straining it with a force equal to that produced by half its weight laid on the centre, and the beam may then be considered as without weight.

It is found by experiment that when the ends of a beam are firmly held down, the breaking weight is half as much more as when the ends are only supported loosely.

The permanent load laid upon a beam of timber ought not to exceed one-sixth of the breaking weight.

Example.—Let a beam, AB (fig. 19)* of English oak, having a breadth 8 in., depth 10 in., and length 10 ft., be loaded at D, 3 ft. 4 in. from A, and 6 ft. 8 in. from B; to find the breaking weight. By formula (C) we have,

$$W = \frac{1}{6} S \frac{bd^2}{ab} l = \frac{836}{6} \times \frac{8 \times 100}{3\frac{1}{3} \times 6\frac{2}{3}} \times 10 = 50,160 \text{ lbs.}$$

* Page 24.

If D is the centre of the beam, by formula (D) we have,

$$W = \frac{2}{3} S \frac{bd^2}{l} = 557 \times \frac{800}{10} = 44,560 \text{ lbs.}$$

Let the same beam be laid on its side; then we have $b = 10 \text{ in.}$, $d = 8 \text{ in.}$, and the breaking weight is,

$$W' = 557 \times \frac{640}{10} = 35,648 \text{ lbs.}$$

so that $W' : W :: 640 : 800$, or as 4 : 5. This difference arises from the fact of the strength being proportional to the *square* of the depth, while it is only as the first power of the breadth. If, then, we double the breadth we only double the strength, but by doubling the depth we quadruple the strength.

If a prop or pillar is placed under the centre of a beam, supported at each end, it may then be considered to be divided into two separate beams, each of which being half the length will have double the strength of the unsupported beam, since the strength is inversely as the length; so that the whole beam will bear four times as much when supported in the middle as well as at the ends, as it will when only supported at the ends; and one-half the load will be borne by the pillar.

Suppose a beam AB (fig. 19, page 24), uniformly loaded, to be supported on three pillars at A, D and B; then the pillar at D will bear half the load of the beam, and the pressures on A and B will be inversely as their distances from D. If we call P the reaction at A, Q that at B, and R that at D, we find, by taking moments of the forces about A and B, that,

$$P : Q : R = DB : DA : AB,$$

and $R = P + Q = \frac{1}{2}$ the load on the beam.

Also the strain on the two parts of the beam, AD and BD, will be proportional to their length, and the load they will carry will be inversely as their length.

43. SAFE-LOAD.—In following the several steps of the foregoing investigation, the student will notice a certain apparent contradiction between the hypothesis on which we start and the result we obtain. For whereas we begin by assuming that the strains are not such as to cause permanent injury, we end by applying the formula to the determination of the breaking-weight of the beam. As however in practice we seldom care to know the breaking-weight, but only the *safe-load*, it is better to ascertain what is the safe-load per unit of section that we can apply to the material of which a beam is composed, and determine therefrom the scantling that must be given to it, so that the strain upon any part shall not exceed that load. If we put f to represent the resistance of a square inch of the fibres at a distance of 1 inch from the neutral axis, then the resistance per square inch at top or bottom of the rectangular beam whose depth is d , is $f \times \frac{d}{2}$. Suppose the section of the beam to be divided horizontally into $2n$ equal rectangles, then the thickness of each is $\frac{d}{2n}$, and the *moment of resistance* of the several rectangles will be

$$2 f \cdot b \left(\frac{d}{2n} \right)^3 (1^2 + 2^2 + \dots + n^2) = M$$

$$\text{or, } M = f \cdot b \frac{d^3}{12}, \text{ nearly,}$$

when n is very great, or $\frac{d}{2n}$ very small.

And since the moment of W at the centre of a beam is

$\frac{1}{4} Wl$, and must be equal to the above moment of resistance, we have

$$W = \frac{2}{3} f \frac{d}{2} \cdot \frac{bt^3}{l} \dots\dots (G)$$

In order to be able to apply this formula to any particular beam we must ascertain the value to be given to f . Now the crushing strength of oak is 10,000 lbs per square inch, while its tensile strength is 15,000 lbs; but, as the strength of a beam is only that of its weakest part, we must take the lower amount as the breaking-strain per square inch at the top or bottom edge of the beam. Taking one-sixth of 10,000, or 1667, as the safe strain, we have

$$f \times \frac{d}{2} = 1667,$$

which gives for the *safe-load* in lbs at the middle of a beam of oak from formula (E),

$$W = 1111 \frac{bt^3}{l},$$

where all the dimensions are in inches.

Applying this to the example given above (42), where $b = 8$, $d = 10$, $l = 120$, we find the *safe-load* to be 7407 lbs., which is very nearly one-sixth of the breaking-weight as determined by the previous formula. If the beam is of fir, we must not take the safe strain per inch at more than two-thirds of what we have taken for oak; so that in fir we shall have $f \times \frac{d}{2} = 1111$, which gives from formula (G)

$$W = 741 \frac{bt^3}{l}$$

for the safe strain in lbs. at the middle of a beam of fir, all the dimensions being expressed in inches.

The crushing strength per square inch for different kinds of timber is given at page 113, so that by taking one-sixth of the value found in that table for the value of $f \times \frac{d}{2}$, we can determine the *safe-load* at the middle of any rectangular beam by means of the formula (G).

44. DEFLEXION.—A beam that is supported or fixed in a horizontal position, and subjected to a transverse strain, will be bent or deflected from the straight line, and will assume a curved form. The resistance to deflexion follows a very different law to the resistance to fracture. Let D be the amount of deflexion or distance of the centre of a loaded beam (supported at each end) from its position when unloaded; E the *modulus of elasticity* (11); W the load laid on at the centre; l the distance between the points of support; b the breadth and d the depth of the beam. Then it is shown by writers on the strength of materials, that when the *limit of elasticity* is not exceeded, the deflexion varies *directly* as the weight W and as the *cube* of the length l ; it is also *inversely* as the *moment of inertia* (I) of the section. Hence we obtain the expression for the deflexion,

$$D = \frac{W}{48E} \times \frac{l^3}{I}.$$

And in a rectangular beam, $I = \frac{1}{12} b \cdot d^3$ (12),

$$\therefore D = \frac{W}{4E} \times \frac{l^3}{b \cdot d^3} \dots\dots\dots (H)$$

The *resistance* to deflexion is, of course, *inversely* as the deflexion, and is expressed by the formula,

$$\frac{1}{D} = \frac{4E}{W} \times \frac{b \cdot d^3}{l^3}.$$

That is to say, the *resistance to deflexion* is directly as the breadth into the cube of the depth, and inversely as the load into the cube of the length.

The value of E is found from the equation,

$$E = \frac{W}{4D} \times \frac{l^3}{b \cdot d^3}$$

In the case of an oak beam 2 in. square and 84 in. long, supported at the ends and loaded with 200 lbs. in the middle, a deflexion of 1.28 was obtained. Substituting these values in the formula for E, we get,

$$E = \frac{200}{4 \times 1.28} \times \frac{84^3}{2 \times 2^3} = 1447031 \text{ lbs.} = 646 \text{ tons.}$$

In a similar manner we obtain the values of E from experiments on other kinds of timber, as given in the following table:—

	Value of E in tons.
Red pine	821
Pitch „	547
Riga fir	574
Beech	604
Oak, British	646
„ Dantzic	520
„ Canadian	845

In using the formula (H) with these values of E, W must be expressed in tons. The formula for deflexion shows us the advantage gained by increasing the depth; for if we have two beams of equal length and breadth, but the depth of one beam double that of the other, the deflexions with the same load will be as 1 to 8, or by doubling the depth we increase the power of resisting flexure eight times.

When the load is uniformly distributed over the whole length of the beam, it can be demonstrated that the de-

flexion is reduced to five-eighths of what it is when the load is concentrated at the middle; so that the deflexion of a beam, arising from its own weight alone, is five-eighths of that which it would have if all its weight were to act at its centre. The deflexion of a beam, whose ends are firmly fixed, is half that of the same beam when the ends are only loosely supported.

Example 1.—To apply the formula (H) to ascertain the deflexion of the oak beam in (42) with W equal to 5 tons or one-fourth of the breaking weight laid on the middle. Here,

$$D = \frac{W}{4E} \times \frac{l^3}{b \cdot d^3} = \frac{5}{4 \times 646} \times \frac{120^3}{8000} = .418 \text{ in.}$$

If the beam is laid on its side and loaded with 4 tons, or one-fourth of its breaking weight, we find $D = .522$ in.

Example 2.—Let it be required to find the breadth that must be given to an oak beam 10 in. deep and 10 ft. or 120 ins. bearing, in order that its deflexion D shall not exceed one-tenth of an inch when loaded in the middle with a weight of 1 ton. Here we have to calculate b from the equation,

$$b = \frac{W \cdot l^3}{4E \cdot D \cdot d^3} = \frac{1728000}{258 \times 1000} = 6.7 \text{ in.}$$

Now, suppose the breadth to be given, say 8 in., and other things being as before, it is required to find the depth of the beam. We have to calculate the value of d from the equation,

$$d^3 = \frac{W \cdot l^3}{4E \cdot D \cdot b} = \frac{1728000}{258 \times 8} = 836.$$

$$\therefore d = \sqrt[3]{836} = 9.42 \text{ in.}$$

45. LONG PILLARS.—When timber is subjected to a

compressing force in the direction of its length, as when used for columns, struts, &c., it will break either by bending, or by the crushing of its fibres, or by a combination of bending and crushing. This will depend on its length as compared with its diameter; for if its length is 30 times the diameter, the pillar will break by bending before crushing can begin. If its length is less than 25 times, but more than 10 times the diameter, it will break partly by crushing and partly by bending. If the length is less than 10 times the diameter, it will break by crushing only.

The mathematician Euler ascertained, from theoretical investigations on elastic rods, that the strength of long pillars in which the diameter is small as compared with the length, was proportional directly to the fourth power of the diameter, and inversely as the square of the length.

In the case of pillars of wood the experiments of Hodgkinson confirmed the rule obtained by Euler, and the formula for the breaking weight of pillars, whose length is 30 times the diameter, is

$$W = a \times \frac{d^4}{l^2}.$$

The value of a is 11 for Dantzic oak, and 8 for red deal, W being in tons, d in inches, and l in feet. In practice a pillar ought not to be loaded with more than one-tenth of its breaking weight; so that if we put 1.1 and .8 for a , the above formula will give us the *safe permanent load* in each case.

In order to facilitate the calculation of this formula, we have given a Table of the second and fourth powers of numbers in the Appendix.

Example.—Let $l = 10$ ft., $d = 4$ in., $a = 1.1$; then

$$W = 1.1 \frac{4^4}{10^3} = 2.8 \text{ tons, safe load.}$$

Mr. Hodgkinson found by experiment that if the load does not press on the pillar exactly in the direction of its axis, the strength is greatly diminished; and if it act in the direction of the diagonal, the strength is reduced to one-third of what it is when it acts down the axis.

46. SHORT PILLARS.—When the length of a pillar is less than 25 times its diameter, but more than 10 times, the resistance to *crushing* comes into action as well as the resistance to *bending*, the material being partly crushed before it breaks by bending. Mr. Hodgkinson's method of approximating to the strength of such pillars is, first to calculate the breaking weight (b) by the formula for long pillars, as above; then if c is the area of the section of the pillar in inches multiplied by the crushing strength per square inch (as per table),* the breaking-weight (W) is found by the formula,

$$W = \frac{b \cdot c}{b + \frac{3}{4}c}.$$

Thus, in deal the crushing strength per square inch is about 3 tons, or between 6,000 lbs. to 7,000 lbs., and in oak 10,000 lbs., or $4\frac{1}{2}$ tons. Let us find, for example, the breaking-weight (W) of a pillar of oak, 4 in. square, whose length is 5 ft., or 15 times the diameter; then we have,

$$b = a \frac{d^4}{l^3} = 11 \times \frac{256}{25} = 112.6 \text{ tons.}$$

$$c = 16 \times 4.5 = 72 \text{ tons.}$$

* Page 113.

$$\therefore W = \frac{112.6 \times 72}{112.6 + 54} = 48.7 \text{ tons.}$$

The *permanent safe load*, acting in the direction of the axis of the column, will therefore be 4.9 tons.

In pillars whose length is less than 10 diameters, the material is crushed before it can begin to bend, and therefore the crushing strength alone has to be considered, which is in proportion to the area of the transverse section; so that the strength of a short pillar is found by multiplying the number of square inches in the section by one of the numbers in the following table, which is the result of Hodgkinson's experiments on cylinders of wood, 1 in. diameter and 2 in. long, flat at the ends. The figures in the first column are for specimens moderately dry, while those in the second column are for specimens kept in a warm place for two months longer, after being turned. It was found that wet timber showed great weakness, being in some cases less than half as strong as dry timber. (See Mr. Hodgkinson's paper in the "Philosophical Transactions" 1840.)

In making use, however, of this table, it must be borne in mind that when a piece of timber is cut out of a tree, different parts of it will possess different degrees of strength. Thus the older wood near the centre will be much harder and stronger than that near the outside; the strength will also depend upon the age of the tree, older trees which have not begun to decay being generally tougher than younger ones. For these reasons the tabulated numbers can only be taken as giving an approximation to the relative strength of different kinds of wood, and are probably rather above the average strength.

CRUSHING STRENGTH; TENSILE STRENGTH. 113

DESCRIPTION OF WOOD.	Crushing strength per square inch in lbs.	
Alder	6,831	6,960
Ash	8,683	9,363
Baywood	7,518	7,518
Beech	7,733	9,363
Birch (American)	—	11,663
„ (English)	3,297	6,402
Cedar	5,674	5,863
Crab	6,499	7,148
Deal (Red)	5,748	6,586
„ (White)	6,781	7,293
Elder	7,451	9,973
Elm	—	10,331
Fir (spruce)	6,499	6,819
Hornbeam	4,533	7,289
Larch (fallen 2 months)	3,201	5,568
Mahogany	8,198	8,198
Oak (Quebec)	4,231	5,982
„ (English)	6,484	10,058
„ (Dantzic, very dry)	—	7,781
Pines, pitch	6,790	6,790
„ yellow, full of turpentine	5,375	5,445
„ red	5,395	7,518
Plum (wet)	3,654	—
„ (dry)	8,241	10,493
Poplar	3,107	5,124
Sycamore	7,082	—
Teak	—	12,101
Walnut	6,063	7,227
Willow	2,898	6,128

47. TENSILE STRENGTH.—The resistance of timber to a stretching-force acting in the direction of its length is proportional to the area of the transverse section, and quite independent of the length. The *ultimate strength*, or force that will break timber by stretching, is from 3½ to 6 tons per square inch for fir, and from 4 to 8 tons for oak. Therefore to find the resistance of any piece of fir or oak to a stretching force, multiply the number of square inches in its section by one of these quantities.

The strain is here supposed to be applied in the direction of the fibres, but when the tensile force acts at right angles to *their direction* the resistance of the wood is very

much less, being about 1 ton per inch in oak, and $\frac{1}{3}$ of a ton in fir. For the tensile strength of other kinds of wood the reader is referred to "Carpentry and Joinery,"* in Weale's series, as edited by the present author.

48. FLOORS.—The strength of the timbers which carry a floor can be determined by the rules given above (42), (43), when we know the amount of load they are required to carry. In single-joisted floors the depth is generally 5, 7, 9 or 11 inches, so that if we suppose them to be placed 12 inches from centre to centre, and to bear safely a load of 100 lbs. to every square foot of flooring, we shall have a uniformly distributed load on each joist of $100 \times L$ lbs. (L being its length in feet), which is equivalent to half that load at the centre. We can, therefore, in the case of fir joists, whose depth d and length l are given (in inches), find the breadth by means of the formula given above (43), namely,

$$b = \frac{W}{741} \cdot \frac{l}{d^2} = \frac{50L}{741} \cdot \frac{l}{d^2} \\ = .0675 L \frac{l}{d^2}$$

The following Table of breadths is calculated from this formula, and gives the minimum scantling of single joists of different lengths required for safety when the load is 100 lbs. on every square foot of flooring.

L in ft.	$d = 5''$	$d = 7''$	$d = 9''$	$d = 11''$
	b in ins.	b in ins.	b in ins.	b in ins.
6	$1\frac{1}{4}$
8	$2\frac{1}{4}$	$1\frac{1}{4}$
10	$3\frac{1}{4}$	$1\frac{3}{4}$	$1\frac{1}{4}$...
12	...	$2\frac{1}{2}$	$1\frac{1}{2}$	1
15	$2\frac{1}{4}$	$1\frac{1}{2}$
18	$2\frac{1}{4}$

Where the ends of the joists are carried on BINDERS, the scantling of these must depend on the span of the joists as well as the length of the binder. Let S be the span in feet of the joists, L the length in feet of the binder, l and d its length and depth in inches, then for a given value of l and d we get—

$$b = .0675 L \cdot S \frac{l}{d^2}$$

The following table gives the value of b when the depth is 10 inches and 12 inches for different values of L and S ; no allowance, however, is here made for notches or mortice holes cut in the binder for the ends of the bridging joists; where these are made, an extra thickness of one inch should be given on each side in which they are cut, as they considerably weaken a beam.

L in ft.	S in ft.	$d = 10''$	$d = 12''$
		b in ins.	b in ins.
10	6	3	...
"	8	$5\frac{1}{4}$	$3\frac{1}{2}$
"	10	$8\frac{1}{4}$	$5\frac{1}{2}$
12	6	$7\frac{1}{2}$	5
"	8	$9\frac{3}{4}$	$6\frac{1}{2}$
"	10	$10\frac{3}{4}$	$8\frac{1}{4}$
15	6	11	$7\frac{1}{4}$
"	8	...	$10\frac{1}{4}$
"	10	...	$12\frac{3}{4}$

When the binders themselves have their ends framed into GIRDERS, we have the case of a beam loaded at one or two intermediate points. Thus in a girder 10 or 12 ft. long there will be a binder framed into it at the centre, and in one of 15 or 20 ft. there will be two binders dividing the girder into three equal bays. In the former case we have half the weight W of the floor acting on

the middle of the beam, and in the latter we have the case provided for by the formula (F) (42), the strain being two-thirds of that produced when all the load is at the centre. When there is only one binder at the centre of the girder, if we put S for the span of the bridging joists, L the length of the binder, we have $W = 100 S \times L$ as the load on the centre of the girder, since half the weight of the floor is carried by the walls on which the ends of the bridging joists rest; so that

$$b = .135 L \cdot S \frac{l}{d^2}$$

gives the breadth of a fir girder whose length and depth are known, which will safely bear a load of 100 lbs. per square foot of flooring. As an example, let $S = 6$, $L = 12$, $l = 144$, $d = 12$; then

$$b = .135 \times 6 \times 12 \frac{144}{144} = 9\frac{3}{4} \text{ inches.}$$


Let there be two binders 6 ft. apart framed into a girder 18 ft. long, the depth being 12 inches as before. In this case one-third of the load is carried by the walls, and the total weight sustained at two points by the beam is $100 \times 2S \times L$, which by formula (F) is equivalent to a load of $\frac{2}{3} \times 100 \times 2S \times L$ placed at the centre; or, $W' = \frac{2}{3} W$, so that b will be $\frac{2}{3}$ of the breadth found in the former case; that is, $b = 13$ inches. An extra breadth should be given to allow for the mortice holes cut in the girder for the ends of the binders, but as these only occur in one or two places they do not materially injure the strength.

49. TIMBER FRAMING.—When a piece of timber is used in framework, it is subjected to one or more of the strains which we have been considering, and its proportions must

be arranged according to the amount, character, and direction of the strains it has to bear. When a beam is subjected to a strain in any direction, the straining force can be resolved into two other forces at right angles to each other, one acting transversely and another acting longitudinally, by means of the principle of the resolution of forces (2).

Suppose a rafter AB (fig. 39) carrying a load W acting at its centre of gravity g , to lean against a wall at B, and to be framed into a

Fig. 39.

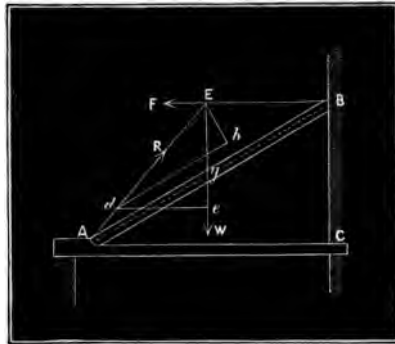

horizontal beam at A. Let F be the reaction of the wall acting horizontally at B; then R the reaction at A is the resultant of the two forces W and F , and its direction meets that of W and F in E . If then Ee is taken to represent on scale the weight W , the hori-

zontal line de will represent F , and Ed will represent R , in direction and magnitude; or the three forces W , F and R are in the ratio of the three sides of the triangle Eed . We can also determine the relation of F to W by equating the moments (4) of these forces taken about the point A, namely,


$$F \times BC = W \times \frac{1}{2} AC,$$

$$\text{or,} \quad F = W \frac{AC}{2BC}$$

Now, suppose the wall BC removed, and that in its place is substituted another rafter BA' equal to AB , and


framed into the tie-beam AA' (fig. 40); F will now be the mutual pressure of the two rafters at B , and the horizontal strain on the tie-beam will be represented by the line de (fig. 39); Ee being the line which represents the

Fig. 40.

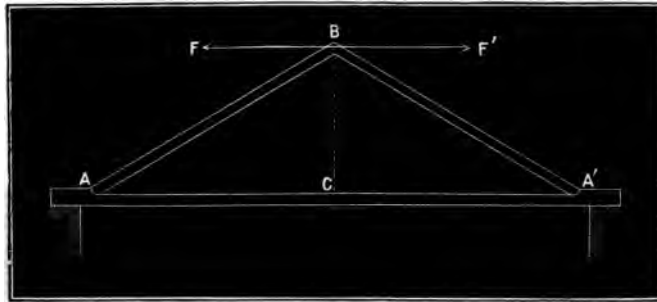

weight laid on each rafter. The tie-beam must also be made sufficiently strong to bear its own weight without bending, which it may also be prevented from doing by being held up in the middle by a piece of timber called a

Fig. 41.

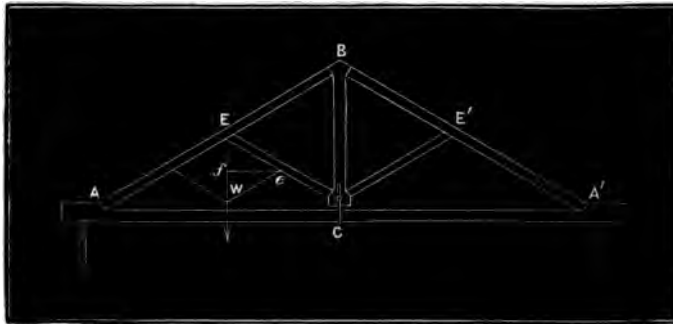


king-post, into the head of which the two rafters are framed (fig. 41); by this means the transverse strain on the tie-beam is reduced to one-fourth of what it is when

the king-post is absent, so that its dimensions may be reduced accordingly; the vertical strain on the king-post is *half* the weight of the tie-beam, and its scantling may be determined from the rule given for tensile strength (47), allowing about 1 ton per square inch of section as the safe strain.

The next step is to strengthen the rafters by means of struts CE and CE' framed into the foot of the king-post, and supporting the centre of each rafter. The pressure at E of the load on the rafter may be considered as *half* the entire load laid on the rafter. Let EW represent the vertical load at E; draw We parallel to AB and ef horizontal. Then Ee represents the compression on the strut, which can be resolved into its vertical and horizontal components Ef and ef, the former of which represents the *additional* vertical strain produced by *each* strut on the king-post; and the latter is counterbalanced by the horizontal thrust arising from the opposite strut CE'.

The tie-beam may be sustained in two places by means of queen-posts BC, B'C' (fig. 42), into the heads of which

Fig. 42.

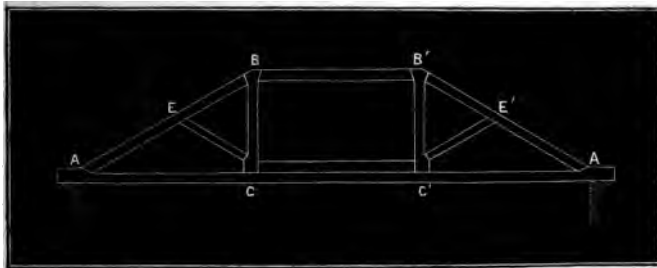

the rafters are framed, and their reaction transmitted by the straining-piece BB', which is *compressed* by the force F, represented by *de* (fig. 39). Each queen-post sustains

one-fourth the weight of the tie-beam, by means of an iron strap passed round the tie-beam and bolted to the foot of the queen-post; and the tie-beam will be able to bear nine times as great a transverse strain as it would if supported only at the ends. Each queen-post has also to sustain the vertical component of the thrust from *one* of the struts, the horizontal components being counter-balanced by means of a straining-piece inserted between the feet of the queen-posts.

To find the strains upon the rafter AB (fig. 39), resolve the resultant R into its two components perpendicular and parallel to AB; these will be represented by the lines Eh and dh ; then Eh represents the transverse strain at the centre, and dh the longitudinal compression. It will be seen from the figure that the horizontal thrust is greater for a low pitch than for a high one; putting R for the force Ed , acting down EA , and F for the horizontal thrust ed , we find when the angle BAC is 26° that $F = W$, and $R = 1.4W$; for $BAC = 30^\circ$, $F = .87W$, and $R = 1.3W$; for 45° pitch, we find $F = \frac{1}{2}W$, $R = 1.12W$; when $BAC = 60^\circ$, $F = .3W$, $R = 1.04W$. With a pitch of 26° we also find the transverse strain eh on the rafter to be $.444W$, and the compression hd down the rafter is $1.33W$; for a pitch of 30° these are $.423W$ and $1.23W$ respectively; for a pitch of 45° , they are $.355W$ and $1.052W$; and for 60° they are $.25W$ and $1.01W$.

The various strains to which the different timbers in a truss are subjected may also be determined graphically by Maxwell's diagram of strains (3), and an example of its application to a king-post roof will be found worked out in detail in the author's treatise on Carpentry and Joinery in Weale's Series* (page 108).

* Lockwood & Co.

50. SCANTLINGS.—In order to be able to determine the scantlings that must be given to the timbers of a roof, we must know what weight it will have to carry. Tredgold gives the weight of a slated roof with the timbers as 26 lbs. per square foot of surface, to which he adds 40 lbs. per foot for the action of “wind and other occasional forces;” this is probably sufficient to allow for the pressure of the wind on a roof of moderate pitch; but as recent experiments have shown that the force of a high wind sometimes amounts to 50 lbs. per square foot on a plane surface exposed to its direct action, we must add as much as this where the roof is of high pitch. For low-pitched roofs we may therefore consider 66 lbs. per foot as the total pressure to be sustained, and in roofs of high pitch 76 lbs. per foot must be taken as the load; and the total load W sustained by the rafter AB of a trussed roof will be found by multiplying its length by the distance apart of the trusses, and the product by 66 or 76 according to the pitch of the roof.

The following rules are given by Tredgold for determining the scantlings of the several timbers of a trussed roof of *fir*. Let b be the breadth in inches, d the depth in inches, and l the length in feet of any beam:—

1. King-post, $b \times d = \cdot 12 l \times s =$ area of section, where s is the span in feet.

2. Queen-post, $b \times d = \cdot 27 l \times s =$ area of section, where s is the length of the part of the tie-beam which each post sustains in feet.

3. Tie-beam; s being the length in feet of the longest unsupported part; $d = 1\cdot47 \frac{s}{\sqrt[3]{b}}$, in inches.

4. Principal rafters having a king-post; $d = \cdot 96 \times$

$\frac{l^2 \times s}{b^2}$, in inches, s being the span in feet. When there are two queens, the multiplier is .155 instead of .06.

5. Straining-beam between heads of queen-posts, where $d : b = 10 : 7$, or $b = .7 d$; then $d = .9 \sqrt{l \sqrt{s}}$; s being the span in feet.

6. Struts and braces supporting rafters, of which s is the length unsupported in feet; where $d : b = 10 : 6$, or $b = .6 d$; then $d = .8 \sqrt{b \sqrt{s}}$.


7. Purlins; s being their distance apart in feet, where $b = .6 d$; then $d = \sqrt[3]{s.l}$.

8. Common rafters, where l is the bearing in feet, $d = .72 \frac{l}{\sqrt[3]{b}}$.

51. HAMMER-BEAM ROOF.—In this kind of roof-truss the tie-beam is omitted, and the portion of the rafter which rests on the wall is made rigid by being framed into four pieces of timber, as A D C K (fig. 43); a horizontal *hammer-beam* A C rests at one end on the wall and has the foot of the rafter framed into it as into a tie-beam; the outer end C supports a vertical *strut* C D, which is framed into the rafter at D; and the end C is also supported by a bracket or strut C K framed into a vertical wall-piece A K. We have, therefore, only to consider the thrust arising from the load in the portion of the rafter D B, the weight W of which may be supposed to act at H, and we determine the relation of the forces as before (fig. 39), by drawing the horizontal line B E to meet the vertical through H, and if Ee represents the weight W, the line E D will represent the pressure at D, and De the horizontal thrust F acting at D. By

means of the rigid piece of framing D K this thrust is brought down to the point K, and the lower this point is down the wall the less will be the tendency of the thrust to overturn it. The force F at K has a moment $F \times KS$ about the outer edge S of the wall, which is counteracted by the moments of the weight of the half truss and of the wall itself. If W is the weight of the upper part of the roof above D, w that of the frame D K, and R the weight of the wall itself, we may consider all these forces as acting down the middle of the wall; and in order that the structure may have stability we must have

Fig. 43.

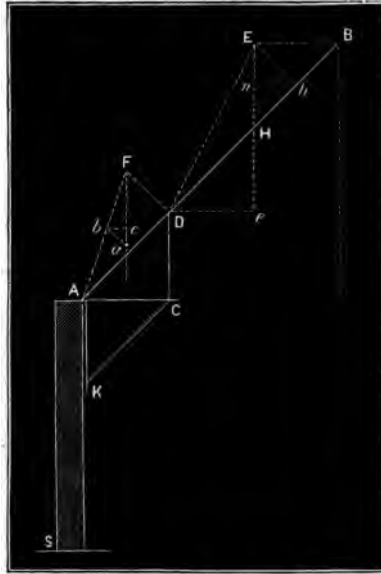


$$(W + m + Q) \frac{t}{2} > F \times K S.$$

The strains in the pieces A C, C K, may be determined as previously shown (2) in the case of a bracket. To find the compression down the strut D C, draw Eh perpendicular to B D, and hn horizontal, then En will represent the vertical pressure at D from the rafter D B. To find the pressure arising from A D, draw D F perpendicular to A D, meeting the vertical through the middle point of

A D at F; draw F A; let Fa represent the weight of the rafter A D, draw ab parallel to D F, and ab will be the reaction at D of A D; draw bc horizontal, and ac will represent the pressure down D C arising from A D; so that $En + ac$ will be the compression in D C. The line Fc is the vertical pressure arising from A D upon the wall at A. In this manner the strains upon any part of the framing can be compared with the weight of the load upon the rafter.

52. ARCHED ROOF.—Ribs or rafters of a semi-circular

Fig. 44.

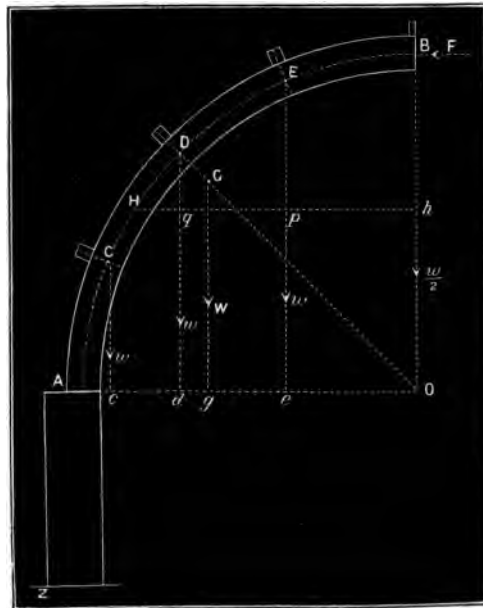

form are constructed of planks bolted together side by side, three or more thicknesses being used in their con-

struction. Let A B (fig. 44) represent the half of such a rib, carrying the load of a roof by means of purlins at C, D, E, and B, and resting on a pier at A. Let W be the weight of the rib itself, acting at G, its centre of gravity, O G being $\cdot 9$ O D by the table in the section on "centre of gravity" (6), the line B E D C passing through the centre of the rib; let w be the load on each purlin, acting at B, E, D, and C. At B only $\frac{1}{2} w$ must be taken. Then if F is the horizontal pressure, at B of the other half rib, we have to take the moment of F about A as equal to the sum of the moments of the weights; therefore the equation

$$F \times B O = W \times A g + w (\frac{1}{2} O A + A e + A d + A c)$$

determines the horizontal thrust F, which we can now consider as acting at the base A of the rib, and tending to overturn the pier about its outer edge Z. To resist this thrust we have Q the weight of the pier and $W + \frac{7}{2} w$, the weight of the roof acting down the centre of the pier; so that its thickness t that will suffice to produce equilibrium may be found from the equation,

$$(Q + W + \frac{7}{2} w) \frac{t}{2} = F \times A Z$$

If the pier is thicker than the dimension found by this equation, the structure will be in a condition of stability.

In order to determine the strength of the rib itself, we take moments of the loads at D, E, and B about H, where the strain is greatest, H being the middle point between C and D; and equate the sum of these moments with the *moment of resistance* of the section of the rib, namely,

$$w (\frac{1}{2} H h + H p + H q) = S \frac{b d^2}{6}$$

When fir is used for the rib we have (42), $\frac{1}{8}S = 15$ for safe-load; b and d being in inches, and the other dimensions in feet; w being in lbs. As an example, let the rib have an internal radius of 10 ft., and an external one of 11 ft., its depth and breadth being 12 in.; let $W = 500$ lbs., $w = 2,000$ lbs.; then we find $Ag = 4.3$, $Ad = 3.6$, $Ac = 1.3$, $Ae = 7$, $OB = 10.5$, $OA = 11$. Therefore the first equation becomes,

$$F \times 10.5 = 500 \times 4.3 + 2000 (5.5 + 7 + 3.6 + 1.3) \\ \text{or } F = 3520 \text{ lbs.}$$

Let $AZ = 10$ feet, and the weight of a cubic foot of the pier be 120 lbs. Then if Q is the weight of a pier 1 ft. broad, we have $Q = 1200 t$; and the second equation becomes,

$$1200 \frac{t^2}{2} + 7500 \frac{t}{2} = 35200 \\ \text{or } 12t^2 + 75t - 704 = 0 \\ \therefore t = 5.2 \text{ feet.}$$

In order to obtain stability the thickness of the pier must exceed 5.2 feet, when the length is 1 foot. If we suppose the ribs to be 10 feet apart, and each to be supported by a continuous wall 10 feet long, the equation becomes,

$$120 t^2 + 75t - 704 = 0,$$

which gives $t = 2.125$ feet for equilibrium; the quantity of walling, however, is in this case 4 times as great as in the former. For the strength of the rib at the point H, we find the *moment of strain*, when $w = 2,000$ lbs., to be 20,250, while the *moment of resistance* of the rib from the expression $M = 15 bd^2$, is 25,920; so that in this

case the rib is stronger than necessary in about the ratio of 13 : 10. If we require to know the amount w that can safely be laid on such a rib, we obtain it from the equation


$$w = \frac{25920}{10 \cdot 125} = 2,530 \text{ lbs.}$$

To determine b when $w = 2,000$ lbs. and $d = 12$ in., we have,

$$b = \frac{2000 \times 10 \cdot 125}{15 \times 144} = 9\frac{1}{4} \text{ in.}$$

53. SHORING.—The object of a *shore*, when fixed obliquely against a vertical wall, as DC against the wall AB (fig. 45), is to prevent its being overturned by the pressure of some horizontal force F acting at the summit. The *raking-shore* DC supports the wall by means of a piece of timber called a *needle* driven through it at D, against which the shore is firmly fixed by wedges at its base C, so that it cannot be overturned without lifting up the portion of the wall above D. If W is the weight of the wall acting vertically through its centre of gravity, t its thickness supposed to be uniform, H its height; when the wall is about to turn over about its base B without the shore, we have $F \times H = W \times \frac{t}{2}$.

Fig. 45.

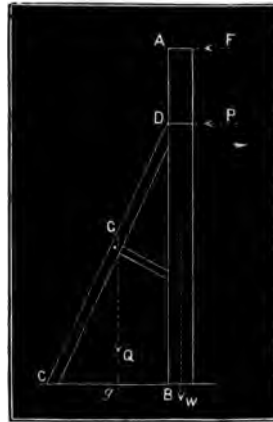

The shore being fixed firmly at D at a height h above B, it produces a horizontal pressure P against the wall to counteract that of F ; so that

$$P \times h = F \times H = W \frac{t}{2},$$

$$\text{or, } P = \frac{1}{2} W \frac{t}{h}.$$

The shore must be prevented from turning over about its base C by the weight w of the part of the wall AD, together with its own weight Q acting at its centre G. We can therefore determine what weight w will suffice to produce equilibrium by taking moments of these forces about C; so that

$$w \left(\frac{t}{2} + BC \right) + Q \times Cg = P \cdot h = W \frac{t}{2},$$

$$\text{or, } w = \frac{W \cdot t}{t + 2BC}$$

For example, let $H = 30$ ft., $t = 1.5$ ft., $BC = 5$ ft., and suppose the wall to have a frontage of 12 ft., and to weigh 1 cwt. per cubic foot; then $W = 30 \times 1.5 \times 12 = 540$ cwts.: let $Q = 4$ cwts., then we find $w = 70$ cwts., so that AD is 4 ft., which is the minimum amount of walling above D that will suffice to prevent the force F from overturning it.

The compression down the shore is the resolved part of the forces w and P , which is

$$w \frac{BD}{CD} + P \frac{BC}{CD}$$

or, substituting for P its value, $\frac{1}{2} W \frac{t}{BD}$, we have

$$\text{Compression down the shore} = \frac{1}{CD} \left(w \times BD + \frac{W \cdot t \cdot BC}{2BD} \right)$$

Apply this to the above example, where $BD = 26$, $BC = 5$, $t = 1.5$, and $CD = 26.5$, $w = 70$, $W = 540$, $CD = 26.5$; then we find the compression down the shore to be $= 71.6$ cwts. To find the necessary strength of the shore we use the formula for long pillars (45), where the safe-load in cwts. for a pillar of fir is

$$.8 \times 20 \frac{d^4}{l^3},$$

from which we can get the value of d when $l = 26.5$, and

$$\text{the load is } 71.6, \text{ namely, } d = \sqrt[4]{\frac{71.6}{.8} \times 702} = 7.5 \text{ ins.,}$$

supposing the shore to be die-square.

There is also a strain on the shore at right angles to its length, which is equivalent to a load at the centre of a horizontal beam, namely

$$\frac{1}{2CD} \left\{ \frac{1}{2} W \cdot t + (Q + w) BC \right\}$$

which, in the foregoing example, amounts to 14.6 cwts., or 1635 lbs. Now, the safe load in a beam of fir is (43)

$$62 \frac{bd^3}{l}$$

in lbs., where l is in feet, b and d in inches. In this case we have to determine b when $d = 7.5$ ins., $l = 26.5$ ft., from the equation

$$1635 = 62 \frac{bd^3}{l}$$

$$\text{or, } b = \frac{1635}{62} \frac{l}{d^2} = 12.4 \text{ inches.}$$

If the breadth $b = 7.5$, then d will be found from the same formula to be 9.6 inches.

If a strut is fixed at G it will prevent the bending of the shore, and will increase its transverse strength four-fold. The compression down the strut will be the load at the centre of the shore, or, in this case, 14.6 cwts.

54. CENTERINGS for arches are structures of timber, temporarily erected for the purpose of sustaining the voussoirs until the arch is completed and is able to sustain itself. On account of the friction of their surfaces, the voussoirs do not begin to press upon the centering until the joints make an angle of 30° with the horizontal; the pressure then increases slowly up to 45° , when it amounts to one-fourth the entire weight of the voussoir. After the angle of 45° is passed the pressure of each stone increases more rapidly, being about one-third the weight of the voussoir at 50° , and at 60° rather more than half the weight of the voussoir. After this the stones soon press with their whole weight on the centering; and any voussoir in which a vertical line dropt from its centre of gravity, falls outside its lower joint, may be considered as pressing with its full weight on the centering. This variation in the pressures of the stones upon the centering is the chief matter to be considered in designing a centre, as greater strength and support must be given to the parts near the crown than to those at the haunches. The laying of the voussoirs must also be proceeded with uniformly on both sides of the arch after the angle of 30° is passed, so as to prevent the frame-work from being distorted by unequal pressure on the two sides.

When the depth of a voussoir is double its thickness, it will rest its whole weight on the centre at an angle of 60° ; if less than double, then its full weight will come on the centre at a lower angle; and if greater, at a higher angle than 60° ; so that with short voussoirs the pressure on the centering is greater than with long ones.

CHAPTER VI.

IRON.

55. IRON is a metal that is always found in nature combined with other substances, such as oxygen, carbon, phosphorus, sulphur, silica, alumina, and other earthy matters, from which it has to be separated by exposing the ore, or *ironstone*, to a very high degree of temperature. The ironstone is first roasted by heating with small coal to drive off its moisture and render it more easy of reduction to the metallic state in the smelting furnace, where it is heated by means of a strong blast with limestone and coal, the former of which combines with the silica and alumina, while the oxygen of the iron-oxide unites with the carbon of the fuel, leaving the molten metal at the bottom of the furnace, which is run off into blocks called "pigs," containing from 88 to 96 per cent. of pure iron, combined with from $2\frac{1}{2}$ to 5 per cent. of carbon, and other matters as sulphur, phosphorus, manganese and silica, in smaller proportions. The carbon adds considerably to the strength of the iron, if in moderate proportion, but the other substances are a source of weakness, and should be got rid of as much as possible. Iron is employed for structural purposes, under three different forms, namely:—(1) Cast-iron; (2) Wrought-iron; (3) Steel.

56. CAST-IRON is the name applied to the metal that has been run into moulds when in a liquid state, and is

made from the "pig" by heating with coke in a cupola furnace, where a portion of the carbon and other impurities are removed, and the metal is poured into moulds made of a peculiar kind of sand mixed with charred oak in fine powder. The temperature of the molten iron is about 2,700° Fahr. Cast-iron is brittle, and readily broken by a sudden blow, the fracture generally presenting a crystalline appearance; its brittleness is increased by the addition of carbon. It also flies into fragments if cold water is applied to it when in a heated state; hence its use must be avoided in buildings intended to resist the action of fire, or where it would be subjected to sudden jars or changes of load.

The ultimate crushing strength of cast-iron being six times as great as the resistance to stretching, it becomes a valuable material for columns which have to sustain a vertical pressure.


When beams are formed of cast-iron they require to be carefully tested before being fixed, as this material is liable to flaws from carelessness in the casting, or from being allowed to cool too rapidly, whereby it becomes honeycombed in the middle.

The material known as "malleable cast-iron" may be made by covering up a casting with clay, heating to redness and then allowing it to cool slowly, whereby the metal loses much of its brittleness, and becomes annealed. Another method is to heat it with such substances as powdered charcoal, bone-ash, forge scales, red iron-oxide, or manganese oxide, by which much of the carbon is oxidized and removed from combination with the metal.

57. CAST-IRON BEAM.—The strongest form of cast-iron beam of given *weight* and *depth* was determined by Hodgkinson, after numerous experiments, to be that in

which the top and bottom flanges are to one another in the inverse proportion of the resistance to stretching to the resistance to crushing, or as six to one; since the top flange is subjected to compression while the bottom is subjected to extension. The section of the beam in the centre is that of (fig. 46), two-thirds of the metal being contained in the lower flange.

Fig. 46.

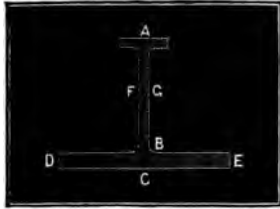

An approximate rule for the strength of such a beam is,

$$W = 2.2 \frac{A d}{l} = \text{breaking-weight in tons at the centre ;}$$

where A is the area in square inches of the section of bottom flange in the middle, d the total depth $A C$ of the beam in inches, l the span in feet. This rule is formed on the supposition that the strength of the flanges is so great that the resistance of the middle part is small in comparison, and may be neglected.* As an example, let $A = 4.4$, $d = 5\frac{1}{8} = \frac{41}{8}$, $l = 54$; then

$$W = 2.2 \frac{4.4 \times 41}{8 \times 54} = 10.86 \text{ tons.}$$

The permanent load on a cast-iron beam should never exceed one-sixth of the breaking weight. When a cast-iron beam is heated to redness it is found to have only two-thirds of the strength that it has when cool.

Another approximate rule for the strength of such a beam is given by Hodgkinson, in which the effect of the vertical part or web is taken into consideration, and the

* Hodgkinson, *On Cast Iron*.

operation of the top flange of a beam, when strained, is supposed to be that of a fulcrum on which to break the bottom flange and web. Putting d for the total depth AC, d_1 for the depth AB to the top of the lower flange, b the breadth DE of lower flange, b' the thickness FG of the web (all in inches), and l being the length of bearing in feet, the breaking-weight in the centre, in tons, is

$$W = \frac{2}{3 d \cdot l} \left\{ b \cdot d^3 - (b - b') d_1^3 \right\}.$$

This formula depends on two suppositions: 1st, that all the particles, except those in the top flange of a bent beam, are in a state of tension; 2nd, that the resistance of each particle is proportional to its distance from the top of the beam.

When the depth of a cast-iron beam is uniform throughout, it would be a great waste of metal to have the lower flange of the same width at the ends as at the middle, and in order to obtain a beam of uniform strength at every part, the plan of the lower flange should be in the form of a double parabola, or flat segment of a circle (fig. 47); for the strength varies as the breadth de at any part, and also the strain is, by (8), as the product

Fig. 47.



of $Ae \times Be$, and in the parabola de varies as $Ae \times Be$. If, on the other hand, the lower flange is kept of the same

Fig. 48.



width throughout, a beam of uniform strength may be

obtained by making the depth vary, so as to form an ellipse (fig. 48); for the strength at any part is as the square of DC , and also the strain is as $AC \times BC$, which expresses the relation between the co-ordinates of the ellipse. [Methods of drawing these curves will be found in the author's Practical Geometry.]

The *safe load* on a beam of this form can be calculated for any given strain per square inch in the manner previously employed for beams of wood (43), the centre of gravity G (fig. 11, page 15) being determined by the process described in (6). Taking f for the resistance per square inch at a distance of 1 inch from G , which we suppose to coincide with the neutral axis, we have $f \times GB$ for the resistance per inch at the bottom of the beam, and $f \times GA$ for the resistance at the top. And the *moment of resistance* of the upper flange, whose breadth is b , will be

$$f \frac{b}{3} (GA^3 - GC^3),$$

the moment of resistance of the lower flange, whose breadth is B , is

$$f \frac{B}{3} (GB^3 - GD^3),$$

and the moment of resistance of the web CD , whose breadth is t , is

$$f \frac{t}{3} (GC^3 + GD^3).$$

The *moment of the strain* W at the middle of the beam, whose length of bearing is l , supported at each end, is $\frac{1}{4} W \cdot l$, which must equal the sum of all the moments of resistance above given. Therefore we have the formula

$$W = \frac{4f}{3l} \{ B \cdot GB^3 + b \cdot GA^3 - (b-t) GC^3 - (B-t) GD^3 \}.$$

Since the utmost tensile strain that cast iron will bear with safety is about 2 tons per square inch of section, we must put $f \times GB = 2$, and substitute $\frac{2}{GB}$ for f in the

above formula; all the dimensions to be expressed in inches. As an example we will take the beam whose centre of gravity was determined above (6), where $B = 8$, $b = 3$, $t = 1$, $GB = \frac{4}{9}$ or 2.86 , $GA = 5.64$, $GD = 1.36$, $GC = 4.64$, $f = .7$; putting $l = 100$ inches, we find

$$W = \frac{4}{3} \times \frac{7}{10} \times \frac{350}{100} = 3.27 \text{ tons.}$$

If we invert the beam, putting the larger flange at the top, we have $f = .35$ or half what it was before, consequently the strength will be one-half of the above.

58. CAST-IRON COLUMNS.—The strength of columns of cast-iron has been largely tested by Mr. Hodgkinson, whose researches thereon are detailed in the "Philosophical Transactions" for 1840 and 1857. The power of a column to sustain a vertical pressure depends much upon the proportion which the diameter bears to the length. When the length is not less than 30 times the diameter, the column will only be broken by bending, and the resistance of the material to crushing will not come into play. In long hollow columns of circular section, and having flat ends, the breaking-weight in tons for iron of average quality is

$$W = 42 \frac{D^{2.5} - d^{2.5}}{l^{1.75}},$$

D being the external and d the internal diameter in inches, and l the length in feet. This formula also applies to solid columns, by making $d = 0$.

In order to calculate the strength of a column by this formula, use must be made of a table of logarithms; thus, for a solid column, take out of the table the logarithm of the diameter, and multiply by 3.5; multiply the logarithm of the length by 1.63, and subtract the product from the former quantity; to the difference add the logarithm of 42, and the result is the logarithm of the breaking-weight, which will be found on reference to the logarithmic table. The table of powers of numbers given in the Appendix will facilitate the calculation, which can then be made without the use of logarithms.

This formula was based on the one obtained by Euler from theoretical considerations, namely, that the strength was as the 4th power of the diameter and inversely as the square of the length.

Example.—To find the breaking-weight of a hollow column 10 ft. long, whose external diameter is 4 in. and internal diameter 3 in., by means of the table in the Appendix.

$$W = 42 \frac{4^{3.5} - 3^{3.5}}{10^{1.63}} = 42 \frac{128 - 46.8}{42.7} = 80 \text{ tons, nearly.}$$

The *constant* 42 was obtained as the mean of the experiments on thirteen specimens of different kinds of iron, in which the number varied from 33.6 to 49.9; so that by using 42, we have the value of *W* less than the breaking-weight for the best iron, and more than the breaking-weight for inferior qualities. The same formula can be used for finding the strength of pillars of square section by multiplying the above value of *W* by $\frac{7}{6}$.

Mr. Hodgkinson found that in solid cast-iron columns of small diameter, the outside was harder and stronger than the inside; in one specimen, $2\frac{1}{2}$ in. diameter, the

crushing strength of a piece cut out of the centre was found to be 29·65 tons per square inch; that of the intermediate part 34·59 tons; while the external ring, half-an-inch thick, of a hollow cylinder 4 in. diameter, of which the outer crust had been removed, had a crushing strength of 39·06 tons; and thinner rings of the same iron had a crushing-strength of 49·2 to 51·78 tons per square inch. Hence it is advantageous to employ hollow columns as thin as practicable in preference to solid ones. He found, however, in his later experiments on *large* castings, that the difference of hardness between the external and internal parts was much less than in *small* castings, and may generally be neglected.* Also that three solid pillars, whose sections were circular, square, and triangular, and whose area of section was the same, had their strength in the proportion of

$$55299 : 51537 : 61056;$$

the triangular section giving the greatest strength, and the square one the least.

59. SHORT COLUMNS.—When the length of a column is much less than thirty diameters, the resistance to crushing comes into action before it can be broken by bending. In such columns the above formula requires to be modified in the following manner:—Let c be the crushing-strength of the section, or the area of the section multiplied by the crushing-strength per square inch, which we may put at 49 tons for hollow columns. First calculate the strength by the previous formula for long pillars, and let b be the breaking-weight thus obtained, then the true breaking-weight will be,

* *Philosophical Transactions*, 1857.

$$W = \frac{b \cdot c}{b + \frac{3}{4}c}.$$

Take the last example, and let the length be 5 ft. instead of 10 ft.; then we have,

$$b = 42 \frac{128 - 46.8}{13.8} = 247 \text{ tons};$$

$$c = 49 \times \frac{22}{7} \{2^2 - (\frac{3}{2})^2\} = 269 \text{ tons};$$

$$W = \frac{247 \times 269}{247 + 202} = 148 \text{ tons}.$$

When a column is less than 10 diameters in length, it may be considered as breaking only by crushing and not by bending, so that only the crushing-strength of the section has to be taken into account; this is found by multiplying the area of section by the crushing-strength of the metal per square inch, which is about 49 tons for hollow columns, and 39 tons for solid columns.

If a hollow column is not of uniform thickness of metal throughout, its real strength will be only that of the *thinnest* part.

The above formulæ are for columns without discs at top and bottom; when the ends are expanded in the form of discs so as to distribute the pressure over a greater surface, the strength is somewhat greater than that obtained by these rules.

If an iron column is not set perfectly upright it loses a considerable portion of its strength, which will also be the case if it should be thrust out of the perpendicular by any settlement of the building. When a long column is so much out of perpendicular that the diagonal has

become vertical instead of the axis, it is found to have lost two-thirds of its strength.

The permanent safe load supported by a cast-iron column must never exceed one-fourth of the breaking-weight.

It is found that hollow columns of cast-iron are much more liable to fracture when exposed to great heat than solid columns.

60. WROUGHT-IRON.—When pig-iron is slowly melted in a reverberatory furnace, together with a quantity of iron-oxide, and the mass well stirred or “puddled,” much of the carbon is removed, as well as some of the other impurities; the metal thus becomes purer and assumes a semi-fluid state; it is then squeezed between rollers and comes out in the form of *wrought-iron*. In order to purify it still further, it is heated to redness, and again rolled, which increases its strength. Its melting point is much higher than that of cast-iron, being about 4,000° Fahr.

Wrought, or malleable iron, possesses a fibrous and non-crystalline texture, and contains very little carbon, not more than 1 part in 300; so that it is tough, and will bear heavy blows without fracture; it will bend considerably before breaking, and withstands the action of fire much better than cast-iron does; the resistance to compression varies from about two-thirds to four-fifths of the resistance to extension. Wrought-iron is not so generally used for columns as cast-iron, but for very long columns the breaking-weight is considerably more in wrought-iron than (with the same dimensions) in cast-iron; the breaking-weight for pillars with flat ends being found by Hodgkinson* to be,

* *Philosophical Transactions*, 1840.

$$W = 134 \frac{d^{3.55}}{l^2}, \text{ in tons.}$$

d being the diameter in inches, l the length in feet. The values of $d^{3.55}$ and l^2 are given in the Table of powers of numbers in the Appendix. For example, to find the breaking-weight of a solid wrought-iron pillar, 4 ins. diameter and 10 ft. long; here we have,

$$W = 134 \frac{4^{3.55}}{10^2} = 134 \frac{137.2}{100} = 194 \text{ tons.}$$

The breaking-weight of the same column in cast-iron is

$$W = 42 \frac{4^{3.5}}{10^{1.63}} = 42 \frac{128}{42.7} = 126 \text{ tons.}$$

The constant 134 was obtained from only a small number of experiments, and is probably much too high for the average qualities of wrought-iron.

Rankine* gives the following formula for the breaking-weight in lbs. of long pillars of wrought-iron flat at both ends;

$$W = \frac{36000 \times A}{1 + \frac{1}{3000} \left(\frac{l}{d} \right)^2}$$

where A is the area of section, l the length, and d the diameter of the pillar, all in inches.

For short columns, in which the resistance to crushing comes into action, cast-iron has the advantage over wrought-iron. The same formula can be employed in finding the strength of wrought-iron columns whose length is less than 30 diameters, as was used for short

* *Applied Mechanics.*

cast pillars, only 16 tons must be taken as the crushing-strength per square inch instead of 49, as in cast-iron. If, then, b is the breaking-weight as calculated by the above formula for long pillars, c the crushing-strength of the section, or the area of section multiplied by 16, then the true breaking-weight of a short wrought-iron pillar, in tons, is

$$W = \frac{b \times c}{b + \frac{3}{4}c}.$$

Taking the last example, 5 feet long, we have

$$b = 134 \frac{137.2}{25} = 776 \text{ tons;}]$$

$$c = \frac{22}{7} \times 4 \times 16 = 201;$$

$$W = \frac{776 \times 201}{776 + 150} = 168\frac{1}{2} \text{ tons.}$$

The strength of the same column in cast-iron is 282 tons.

61. BEAMS.—Wrought-iron is extensively employed in the construction of beams of various forms and sizes. For small beams, as joists, or light girders of moderate length, it is generally rolled in one piece, of an I or T form of section, according to requirements.

To find the strength of a rolled joist of I section, let I be the moment of inertia of the section, d its total depth; then, as before shown (12) the *moment of resistance* at any section is

$$M = S \frac{I}{\frac{1}{2}d},$$

S being the *coefficient of strength* or strain per square inch of section to be determined by experiment. If d_1 is the

depth of the web, or part between the top and bottom flanges; b the breadth of each flange, t the thickness of the web, we have from (12),

$$I = \frac{1}{12} (bd^3 - (b-t)d_1^3).$$

When the beam of length l is loaded in the middle with a weight W , and supported at the ends, we have by (8), the moment of the strain equal to $\frac{1}{4}W \cdot l$. Equating this with the above value of M , we get

$$W = \frac{3}{8}S \frac{bd^3 - (b-t)d_1^3}{d \cdot l}.$$

To determine the value of S we take an example tested by Barlow,* in which $d = 5$ in., $d_1 = 2.5$, $l = 54$, $b = 2.125$, $t = .85$. This beam bore $8\frac{1}{2}$ tons without the elasticity being injured, so that we may take 4 tons as the *safe permanent load*. Substituting these values in the formula, we get,

$$S = \frac{3}{8} \frac{W \cdot d \cdot l}{bd^3 - (b-t)d_1^3} = \frac{3}{8} \frac{8960 \times 5 \times 54}{285.6 - 20} = 14769 \text{ lbs.}$$

or 7 tons per square inch, which is about one-third of the breaking-weight.

Therefore the *safe permanent load* (W) of a rolled joist of I section may be found from the formula,

$$W = 9846 \frac{b \cdot d^3 - (b-t)d_1^3}{d \cdot l}.$$

In the foregoing formula all the dimensions are expressed in inches, and the weight in pounds.

Large beams are made by riveting rolled plates together by means of angle-iron, either in the I form of section (fig. 49), or in the box form (figs. 50, 51). The

* Barlow. *On Strength of Materials*. (Lockwood and Co.)

box-girder is found by Fairbairn to be stronger than that having the I form and of the same weight, in the proportion of 100 to 93. If we put b as the breadth of the top

Fig. 49.

Fig. 50.

Fig. 51.



and bottom plate, d the total depth of the beam in the middle, d_1 the depth between the top and bottom plates, and t the total thickness of the plates forming the web or vertical part; l being the span; (all the dimensions in inches); then the formula for the breaking-weight in the middle is obtained in a similar manner to that for rolled joists, namely:

$$W = 12 \frac{bd^3 - (b-t)d_1^3}{d \cdot l}, \text{ in tons.}$$

The multiplier 12 is derived from an average of the results of Hodgkinson's experiments, as given in the "Report of the Commissioners on the Application of Iron to Railway Purposes." The strength of an I-girder is rather less for the same weight of metal than that of the box-girder, and may be found by multiplying the value of W obtained above by .93.

Some authorities recommend that the top plate should be somewhat thicker than the bottom, as the resistance

of wrought-iron to extension is rather more than its resistance to compression. But if we compare the results of experiments, we find that no appreciable advantage is obtained in a beam whose top is thicker than its bottom flange, over another beam having equal flanges, where the weights of the two beams are the same.

Let us apply the formula to a box-girder having $b = 24$, $d = 36$, $l = 540$, $t = 2 \times .214 = .428$, $b - t = 23.572$, thickness of top plate = .5625, thickness of bottom plate = .397, $d_1 = 35.0405$; then we have the breaking-weight,

$$W = 12 \frac{24 \times 36^3 - 23.572 (35.0405)^3}{36 \times 540} = 63.94 \text{ tons.}$$

The *permanent safe load* should in no case exceed one-third the breaking-weight.

The line NA is the *neutral-axis* passing through the centre of gravity G of the sections, and about which line the moment of inertia is taken.

If the load is uniformly distributed, the beam will bear twice as much as when the weight is concentrated at the centre, as previously shown (8). Also when a beam is fixed at one end and loaded at the other, the breaking-weight is one-fourth of that obtained by the formula just given for a beam supported at each end.

It will be seen from the formula that if all the dimensions of a beam are doubled, the value of W is increased four times; if they are trebled, the value of W is increased nine times; and so on. Hence it appears that if the proportions of a beam remain the same, and the actual dimensions are increased, the strength is increased as the second power, or *square*, of the lineal dimensions. This is very nearly borne out by experiments; the aver-

age of which gives 1.9 rather than 2 as the power according to which the strength increases.

In wrought-iron girders the flanges or "*booms*," as they are termed in large beams, are the only parts that have to resist flexure; whilst the web has to resist the *shearing* force (9). The resistance to shearing may be considered as equivalent to the resistance to tension. The top flange will be subjected to a compressive force, and the bottom flange to an extending force; now since the resistance to compression is less in wrought-iron than the resistance to extension, it would appear that the area of the upper flange should be greater than that of the lower one in like proportion.

For wrought-iron beams of very large size, such as are required for bridges, the "lattice" principle is generally used. The beams so called are made of section shown in figs. 49, 50, 51, but with the vertical plates replaced by cross-bars of angle and tee-iron riveted to bars of flat iron at their intersections, and also to narrow vertical plates which are themselves riveted to the top and bottom flange, forming the *booms*. Consequently almost the whole of the forces of compression and extension are confined to the booms, as the lattice bars only imperfectly represent the web of solid plates used in the box-girder. Fairbairn considers the strength of this beam to be to that of the box-girder in the proportion of 84 to 100, the weights being equal. The foregoing formula for box-girders may be applied to find the strength of a lattice-girder, by first ascertaining the thickness of vertical plate which would have the same weight as the lattice bars, and calculating the strength of such a box-beam; then the strength of the lattice-beam is found by multiplying the result by .84. The lattice-girder has an advantage in

exposing a smaller surface to the wind than a solid box-beam, and is therefore preferable for railway bridges. A very full investigation into the strains in lattice-girders will be found in Stoney's "Theory of Strains;" Unwin's "Lectures on Roofs and Bridges;" and in Humber's "Handybook of Strains."

The method of calculating with greater accuracy the strength of large tubular-girders is given in the Report of the Commissioners on the use of Iron for Railway Purposes; also in Tait's "Treatise on the Strength of Materials."

In order that a wrought-iron girder, whose breadth is the same throughout, may have a uniform strength in every part, when the load is equally distributed, the depth must diminish from the centre towards the two ends in the ratio of the ordinates of an ellipse (fig. 48).*

62. SAFE-LOAD.—The same method for determining the load that will produce a given strain per square inch of section at the top or bottom of a wrought-iron beam, may be employed as in the case of a cast-iron beam (57, page 136), only here we have $GA = GB$ (fig. 11),† the top and bottom flanges being equal, and $GC = GD$, so that the moment of strain for a beam loaded at the middle becomes

$$M = \frac{l}{4} W = \frac{f}{12} \{ b \cdot D^3 - (b - t) d^3 \}$$

where $D = AB$, $d = CD$, b = breadth of top or bottom flange, t the thickness of the web; and for wrought-iron

we may put $f \times \frac{D}{2} = 5$ tons, for the utmost strain that

* Page 135.

† Page 15.

the beam will bear with safety per square inch of section at the bottom or top : or $\frac{10}{D}$ is to be substituted for f in the above formula. In the case of a *box-girder* (figs. 50, 51), t will be the sum of the thicknesses of the two vertical plates forming the web.

In beams which are formed of plates riveted together, the strength of the angle-irons which join the flanges to the web has to be taken into account. Let a be the sum of the areas of section of all the angle-irons, then their resistance w is

$$w = \frac{f \cdot a \cdot d^2}{l},$$

which is to be added to the above value of W , to get the true amount that the beam will bear in safety at the middle, all the dimensions being taken in inches, and the load in tons. In the example above given (61) of a box-beam, we find from this formula that the load at the middle which produces a strain of 5 tons per inch on the flanges is 19 tons without reckoning the resistance of the angle-irons ; if the area of section of the four angle-irons is 12 square inches, they will increase the resistance by $7\frac{1}{2}$ tons, making a total of $26\frac{1}{2}$ tons as the safe-load at the centre of the beam.

We can also apply this method to beams of Γ section in which there is only one flange. The position of the centre of gravity n (fig. 11) is determined in such a figure at (page 15), g being the centre of the web, m that of

the flange, $ng = \frac{a}{a + b} \times mg$, where a is the area of the flange, b that of the web.

Then from the formulæ in (57) we have for the moment of the flange whose breadth is b ,

$$f \frac{b}{3} (An^3 - Cn^3),$$

and for that of the web whose breadth is t ,

$$f \frac{t}{3} (Cn^3 + Dn^3),$$

and the sum of these is equal to $\frac{1}{4} W \cdot l$; f being determined from the equation

$$f \times An = 5, \text{ or } f = \frac{5}{An}.$$

Taking the example of which the centre of gravity was found (page 16), we have $mg = 3\frac{1}{2}$, $ng = \frac{7}{8}$, $An = \frac{1}{8}$, $Dn = \frac{25}{8}$, $Cn = \frac{11}{8}$, $b = 3$, $t = 1$, $l = 120$ inches, the total depth being 7 inches, and the thickness of metal 1 inch: also, $f = \frac{40}{17}$, therefore

$$\begin{aligned} W &= \frac{30}{17} \cdot \frac{4}{360} \left\{ 3 \left(\frac{17^3 - 11^3}{6^3} \right) + \frac{11^3 + 25^3}{6^3} \right\} \\ &= 2.5 \text{ tons,} \end{aligned}$$

as the load at the middle that will produce a strain of 5 tons per square inch at the flange, when the length of the beam is 10 feet.

The following Table shows the safe-load that rolled beams of I section will sustain at the centre, as calculated from the previous formula (page 148), all of them being taken as 10 feet long; and for any other length l , in feet, the safe-load can be determined by multiplying these values of W by $\frac{10}{l}$.

l	b	D	d	t	W
120 ins.	3 ins.	5 ins.	4 ins.	$\frac{3}{8}$ in.	1.15 tons.
"	4 "	$6\frac{1}{2}$ "	$4\frac{3}{4}$ "	$\frac{1}{2}$ "	2.5 "
"	4 "	8 "	$6\frac{1}{2}$ "	$\frac{5}{8}$ "	3.6 "
"	5 "	10 "	$8\frac{3}{4}$ "	$\frac{3}{4}$ "	5.8 "
"	6 "	12 "	$10\frac{1}{4}$ "	$\frac{7}{8}$ "	11.0 "

63. ELASTICITY.—When wrought-iron in the form of bars is subjected to a longitudinal stretching-force, it will sustain a weight of 25 tons for every square inch of section before being torn asunder. This amount may therefore be taken as the breaking-weight of wrought-iron bars which are subjected to no other strain but that of extension in the direction of their length. The extent to which a vertical rod of iron will be stretched by a given weight W (expressed in pounds), suspended from one end is,

$$l = \frac{W \times L}{E \times A},$$

where E is the *modulus of elasticity* (11), which, according to Rankine,* is 29,000,000; L being the original length of the bar; and A the area of section.

From this formula it appears that the elongation is directly proportional to the stretching-force, which is, however, only true within certain limits, and will not be true if W exceeds the *limit of elasticity*, or is more than the bar will bear without its elasticity being injured. The elongation is also *directly* proportional to the original length of the bar, and is *inversely* as its area of section. For example, let us find how much an iron rod, 1 inch square and 36 inches long, will be stretched by a weight

* *Applied Mechanics.*

of 10 tons suspended from one end; in this case we have,

$$l = \frac{10 \times 2240 \times 36}{29,000,000 \times 1} = .0278 \text{ inch.}$$

The experiments which have been made on wrought-iron show that its tensile strength per square inch in round or square *bars* is from 23 to 27 tons; in flat bars from 22 to 26 tons, and, in the form of angle, or tee iron, 21 to 25 tons; in plate iron the strength when the strain is in the direction of the fibres is from 20 to 24 tons, but, if the strain is at right angles to them, it is 17 to 21 tons.

64. DEFLEXION.—When a wrought-iron beam supported at each end is loaded in the middle, the deflexion produced will be proportional to the amount of the load, so long as it does not exceed one-half the breaking-weight of the beam; but beyond that limit the deflexion increases more rapidly as the load approaches the breaking-weight, in consequence of the elasticity being impaired. It is shown by writers on the strength of materials, that where the beam has equal top and bottom flanges, the deflexion is expressed by the formula,

$$D = \frac{W}{48 E} \times \frac{l^3}{I} = \frac{W}{4 E} \times \frac{l^3}{bd^3 - (b - t) d_1^3}$$

in which D is the deflection, l the span, W the load, I the moment of inertia of the section about the neutral axis NA (figs. 49, 50, 51).* To obtain the value of E we take a specimen of a rolled iron joist experimented upon by Barlow, the dimensions of which are given in

* Page 145.

page 144. This was found to deflect .016 in. for every ton of load, so that we can find E in this case from the equation,

$$E = \frac{W \times l^3}{48 D \times I} = \frac{W \cdot l^3}{4 D (ba^3 - (b-t)d_1^3)} = 10,030,$$

all the dimensions being in inches, and W in tons. Let us apply this formula to find the deflexion of the box-girder whose breaking-weight we found above (page 146); and let the load in the centre be 33 tons; then,

$$D = \frac{33 \times (540)^3}{40120 \times 105627} = 1.23 \text{ inch.}$$

With half this load, or $16\frac{1}{2}$ tons, the deflexion in the middle will be .615 inch, which amounts to no more than the $\frac{1}{16}$ th part of the span; a deflexion which would be quite invisible to the eye; so that we may consider that a permanent load of at least 16 tons may be safely laid on the centre of this beam; and this is about one-fourth of its breaking-weight.

The value of the *modulus* E varies according to the *quality* of the iron used, and can readily be found from experiment, by using the formula given above (63).

When the load is uniformly distributed over the entire length of the beam, the deflexion is five-eighths of that produced by the same load placed at the middle. So that the deflexion due to the weight of the beam itself is five-eighths of that which would be produced if its whole weight were concentrated at the middle and the beam itself supposed without weight. Also, in calculating the deflexion of a beam by a given load, we must add five-eighths of the beam's own weight to the load laid on the middle, to get the true strain. In the last example, the

weight of the beam is not considered ; but as this amounts to 3 tons, the true deflexion will be that due to $33 + \frac{1}{2} 3$, or nearly 35 tons. The true value of D is therefore 1·3 inch.

65. EFFECT OF HEAT.—When a mass of iron is exposed to alterations of temperature, it continually changes its dimensions, being larger at a high temperature than at a low one ; that is to say, it expands in dimensions as the temperature increases. When the temperature rises from 32° Fahrenheit to 212°, cast-iron expands the 900th part of each dimension, its relative proportions remaining the same. Thus a bar of cast-iron 100 feet long will expand 1·36 inch in length while passing from 32° to 212°, or through 180° of temperature ; a bar the same length of wrought-iron expands 1·46 in., one of untempered steel expands 1·3 in., and of tempered steel 1·49 in. When iron is used in construction it is exposed in this country to a variation of about 90° during the year, so that a wrought-iron beam 75 feet long will alter above half an inch in length between summer and winter. In cases where it is exposed to the full force of the sun in summer, and the greatest degree of cold in winter, the variation will be considerably more. The actual force developed in expanding a bar of iron by 1·46 inch will be the same as would be required to compress it by that amount, or about 15 tons on the square inch. The cubical expansion is three times the linear expansion. It therefore is absolutely necessary that all large masses of iron should have a certain amount of *play* allowed them, as the expansion and contraction are irresistible forces, and will tear asunder or thrust over any structure that may oppose.

This property of expansion and contraction has been employed for the purpose of drawing together walls which

parallel to CB; then C_o is the compression down AC produced by the rod CD. Take sX (fig. 53) equal to C_o ; then the line OX represents the total compression down AC on the same scale that C_c represents $\frac{1}{2} W$. Draw the perpendicular YX (fig. 53), then OY represents the horizontal strain on the tie-rod.


By this means the strains on the several pieces of the framework can be readily found by measuring with a scale.

One half the weight of the tie-rod is sustained by the five vertical rods, so that each has one-tenth of the weight of the tie-rod added to the other strains. This is, however, generally of but small amount.

The analytical methods of finding the strains on the several parts of a roof, will be found in Fenwick's "Mechanics of Construction," and Rankine's "Applied Mechanics."

67. Professor Maxwell's method of diagrams, which

Fig. 54.

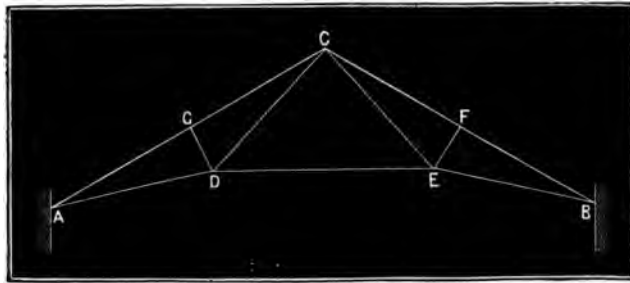

has been previously described (3), enables us readily to find the relative strains on the different parts of an iron roof. The following is an example of its application to a common form of roof (fig. 54). Let W

equals $\frac{1}{4} W$; dd' the vertical pressure at C, and equals $\frac{1}{4} W$; ab the strain down AG or BF; dc the strain down CG or CF; bc the strain along EF or GD; bf the strain along BE or AD; ec the strain along EC or DC; fe the strain along DE. Several examples of the application of this method will be found in Unwin's "Lectures on Iron Roofs and Bridges."

68. CIRCULAR ROOF.—Semi-circular ribs of wrought-iron are frequently used to carry the load in cases of roofs of wide span; and for the investigation of their thrust and strength we can use the same method as we adopted for ribs of wood (52). Supposing as before that the rib is loaded by means of seven purlins, one of which is at the crown of the arch, we take w as the load at each purlin, and W the weight of the half-rib acting at its centre of gravity G (fig. 44, page 124), F being the horizontal thrust at the crown from the other half-rib, we have to find its value by taking moments of all the forces about the point A at the springing; so that we have,

$$F \times OB = W \times Ag + w \left(\frac{1}{2} OA + Ae + Ad + Ac \right).$$

We can now consider F as the thrust of the rib acting horizontally at A; and, in order to prevent F from overturning the wall AZ on which the roof rests, the moment of F about Z must not exceed the sum of the moments of the weight of the roof and of the wall taken about the same point. If Q is the weight, and t the thickness of the wall, we can determine the value of t that will produce equilibrium between the moments, from the equation

$$\left(Q + W + \frac{7}{2} w \right) \frac{t}{2} = F \times AZ.$$

In order to find the strength of the rib, we have to take

moments about the point H, where the strain is greatest ;
the moment of the strain at H is

$$M = w \left(\frac{1}{2} Hh + Hp + Hq \right),$$

and from (62) we have for a beam of I section

$$M = \frac{5}{8D} \left\{ b \cdot D^3 - (b - t) d^3 \right\} \times 2240$$

the loads being expressed in lbs., and the strain at the flanges being 5 tons per square inch.

As an example, we take a rib having a span of 40 feet, its depth being 12 inches, and breadth 6 inches, the section being that of the last example given in the Table (62, page 151), its weight being 56 lbs. per lineal foot, so that $W = 1804$ lbs. ; also let $w = 4000$ lbs. Then we have from the figure (page 124), $OG = 18.45$, $Og = 13$, $Ag = 8$, $OA = 21$, $Ae = 13.15$, $Ad = 6.5$, $Ac = 2$, $OB = 20.5$; hence we find by putting these values in the first equation, $F = 6977$ lbs. Suppose the wall to be 12 feet long, and 20 feet high, its weight per cubic foot being 120 lbs. ; then $Q = 28800$ *t*, and the second equation becomes

$$28800 \frac{t^2}{2} + 15804 \frac{t}{2} = 6977 \times 20$$

from which we find that $t = 4$ feet, which is the thickness of the wall for equilibrium only. If the wall is only 1 foot long, then we find $t = 8$ feet, but the quantity of walling is one-sixth of what it was in the former case.

The moment of the strain at H is

$$\begin{aligned} w \times l &= 4000 (8.5 + 9.15 + 2.5) \times 12 \\ &= 967200, \end{aligned}$$

and the moment of resistance of the section is

$$M = \frac{5}{72} \times 4714 \times 2240 = 732945$$

which is less than the moment of strain in the proportion of 3 : 4, so that for safety we must increase the strength at H by one-third, or else reduce the load w to 3000 lbs. The strain, however, at H, is about double that at the crown under this mode of loading the beam, so that we may reduce the strength at the crown to half that at the haunches. The breadth b of the beam at H for any given value of D , d , t and w , can be determined from the equation

$$b = \frac{\frac{7}{8} w \cdot l - t \cdot d^2}{D^2 - d^2}$$

w being in tons, and all the dimensions in inches.

In the above example where $w = 4000$ lbs. we find that with a depth of 12 inches the breadth of the flanges for safety should be 8·3 inches.

69. STEEL.—Where great strength combined with lightness is required, steel is the material which is most useful. The strength of steel depends on the proportion of pure carbon which it contains, varying in different qualities from three-eighths to one-and-a-half per cent. In wrought-iron the quantity of carbon is from one-eighth to one-half per cent; and in cast-iron from two-and-a-half to five per cent.

From experiments made by Mr. Vickers of Sheffield,* it appears that the *tensile* strength of steel is increased by the addition of carbon until the proportion reaches $1\frac{1}{4}$ per

* Paper read at Institution of Mechanical Engineers, 1861.

cent., the breaking strain being then as high as 69 tons per square inch. Beyond this degree of carbonization, the steel becomes gradually weaker until it reaches the form of cast-iron, and will sustain a tensile strain of only 6 or $6\frac{1}{2}$ tons per square inch.

For sustaining blows, however, it is found that the steel cannot contain too little carbon; any increase in the quantity of carbon being accompanied by an increase of brittleness. It is therefore necessary in practice to obtain a material which shall combine the power of resisting a tolerably high tensile as well as transverse strain; and these qualities are found in steel that contains five-eighths to three-fourths per cent. of carbon, and in which the tensile strength is from 45 to 50 tons per square inch of section; the specific gravity being 7.85.

Experiments by Major Wade (U.S. Army) on small cast-steel cylinders, whose length was about $2\frac{1}{2}$ diameters, gave the crushing strength of steel, not hardened, at 89 tons per square inch of section; and for hardened steel of "mean temper," 175 tons per inch. The crushing strength of steel of "high" or of "low" temper was rather less than that of the "mean."

A large number of experiments were made by Fairbairn on steel of various qualities and from several different manufacturers.* The *modulus of elasticity* from thirty of the best specimens averaged 31,000,000; whilst in some of the inferior qualities it was only two-thirds of that value. The average tensile strength of thirty of the best specimens was found to be 47.7 tons per square inch, or about double that of hammered iron. The resistance to compression was about double the resistance to extension.

* *Report of British Association, 1867.*

Hence it follows that a horizontal steel beam having a top and bottom flange, and being strained transversely, should have the area of section of the bottom flange made double that of the top flange.

It is found that when a steel beam is subjected to a transverse strain, the strain corresponding to the *elastic limit* approaches more nearly the breaking-weight than it does in iron ; and consequently that a steel beam may be over-loaded with greater safety than an iron one.

Numerous experiments on the strength of steel of various kinds when subjected to a pulling, thrusting, shearing, or bending strain, have been made by Mr. Kirkaldy, some of which are described in his work on the "Results of Experimental Inquiry into the Mechanical Properties of Steel." From these it appears that Swedish steel has a tensile strength varying from 28 to 50 tons per square inch, and a crushing strength varying from 45 to 82 tons per square inch.

The strength of a long steel pillar may be approximately found from the equation

$$W = 100 \frac{d^4}{l^3}$$

where W is the breaking-weight in tons, d the diameter in inches, l the length in feet.

70. PRESERVATION OF IRON from rust is a matter of great importance, as the strong affinity which it has for oxygen renders it peculiarly liable to rapid decay when exposed to damp air, especially when combined with high temperature, which greatly accelerates corrosion. Freshly-made castings are protected for a time from rust by being coated with linseed oil, then smoked over a wood fire,

and afterwards dipped in turpentine. Paints of various kinds are employed to preserve iron from rust, these being compounded either of some metallic oxide or carbonate with oil and turpentine, or else in the form of a varnish composed of a resinous gum with either oil, turpentine, or some other spirit. The surface of the iron must be thoroughly cleansed from all rust before the paint is applied, otherwise it will oxidise under the paint, and throw off the coating. All these coatings, however, only act temporarily, and require to be frequently renewed, and therefore cannot be looked upon as permanent protections. The process called "galvanising" has been extensively used for the protection of iron, and consists in giving it a thin coating of zinc, the iron being placed in a bath of melted zinc, the surface of which is covered with sal-ammoniac, by which the zinc-oxide is dissolved. The zinc becomes alloyed with the iron, and, although itself soon oxidised by contact with air, yet the oxide thus formed protects the zinc from further corrosion, and the iron is protected by the zinc as long as that lasts, which may be for several years. Another mode of protecting iron is by forming an *enamel* on its surface, which, after being well cleaned with sand and dilute oil of vitriol, is brushed over with a compound of silica, borax, feldspar, kaolin, and water; dry feldspar, soda, borax, and a metallic oxide, are then sprinkled over it in a finely-divided state, and the iron is then heated until these materials are melted into an enamel which firmly adheres to the surface.

Another process of recent discovery, and one which appears to give a more permanent protection to iron than any of the foregoing, is the formation of the black or magnetic oxide on the surface by passing superheated

steam over the metal for several hours when red-hot; the oxide thus formed is harder than the metal itself, and adheres firmly to the surface, which it renders black, but, at the same time, prevents the formation of rust on the surface which is thus oxidised.

CHAPTER VII.

FLUIDS AT REST AND IN MOTION.

71. A FLUID may be defined as a substance which can be divided in any direction, and the particles of which can be moved about amongst each other by the least conceivable force; the particles of a fluid transmitting pressures to each other equally in all directions.

Fluids are divided into two great classes, namely, *liquids* and *gases*; the former, of which water is a type, being called incompressible or inelastic fluids; and the latter, of which air may be taken as the type, being called elastic fluids. In liquids there is an attraction between the particles which causes them to collect in the form of drops; but with gases there is a repulsion between the particles which gives them a tendency to expand to an almost indefinite extent. While gases can be readily compressed to any amount that may be required, liquids require an enormous force to reduce their volume in any perceptible degree; thus the effect of the pressure of 15 lbs. on the square inch on water enclosed in a vessel is only to compress it by less than $\frac{1}{40000}$ of its volume, so that for all practical purposes we may consider water as incompressible.

The condition in which bodies exist, whether as solids, liquids, or gases, depends to a great extent on temperature. Thus we find water as a solid in the form of ice at

or below 32° Fahr., as a liquid between 32° and 212°, and in the gaseous form of steam above the temperature of 212°. The same may be said of the metals, which are solid at ordinary temperatures, but which by the application of sufficient heat can be liquefied, and by greater heat still can be converted into gases. Many substances, also, which are gaseous at ordinary temperatures, can by the combined action of intense cold and heavy pressure be brought to the liquid or even solid condition. The only fluids, however, which we shall consider in this chapter are *Water* and *Air*.

72. WATER.—This substance was formerly considered as an *element*, but is now known to be a chemical combination of the gases oxygen and hydrogen, and to this composition is owing the power it possesses of acting upon metals and other solid bodies, which decompose it and absorb the oxygen. This process is familiar to us in the corrosion of iron by exposure to moisture, the action being facilitated by rise of temperature. Water, as before mentioned, can be obtained either in the solid, liquid, or gaseous state, simply by a change of temperature; and it is the only substance to which we give a different name in each of these conditions, although its chemical composition remains unaltered. Water possesses the peculiar property, found also in a few other substances, of being heavier or denser in the liquid state than in the solid when the temperatures are nearly the same, so that the solid water or ice floats on the surface of the liquid. The highest temperature to which liquid water can be raised in an open vessel is about 212° Fahr. with the barometer at 30 inches, which is called its boiling point, and is also that of its minimum density as a liquid. As the temperature falls below 212° the

density increases and the liquid contracts in volume until it arrives at the temperature of 39.2° Fahr. when it has attained its maximum density, 1,000 cubic inches at 212° , having contracted to 958 inches at 39.2° . If the temperature is lowered still further it begins to increase in volume, its density decreasing, until it reaches 32° Fahr., when it suddenly expands by one-tenth of its bulk and solidifies in the form of ice, a force of many tons per square inch being exerted in the expansion upon the sides of any vessel in which it is contained. This is the cause of the bursting of water pipes which are full of water when a sudden frost occurs, pieces of ice being often forced through the opening made in a lead pipe by the expansive force developed; such pipes being generally made to withstand a pressure from within of not more than 150 lbs. per square inch of surface. Blocks of stone which have been newly quarried are also readily split by the freezing of the moisture which they contain.

73. WATER IN TANKS.—The pressure of water on the surface of any part of a vessel which contains it, is a weight equal to that of a column of water whose base is the area of the surface immersed, and whose height is the depth of its centre of gravity below the top of the water. Thus, for example, the pressure on the bottom (supposed to be level) of a tank full of water is the weight of a column of water whose base is the area of the bottom, and height the depth of the tank; and it is independent of the form of the tank, being the same whether the sides are sloping or vertical. Thus, in the three tanks A, B, and C (fig. 56), having equal bases and the same depth, the pressure on the bottom will be the same in all when filled with water. The pressure of the water on the *side* of a full tank, whether vertical or inclined, is found

by multiplying the area in feet of its surface by the depth of its centre of gravity below the top of the tank, also in feet, and the result by the weight of a cubic foot of water, or $62\frac{1}{2}$ lbs. If the side is rectangular, the centre of

Fig. 56.



gravity is at a depth equal to half that of the tank ; so that the pressure on each side of a cubical vessel is half that on its bottom. If l and d are the length and depth of a side in feet, and P the pressure in lbs. on the side, we have

$$P = 31.25ld^2.$$

In the case of a cubical tank 9 ft. each way, filled with water, P will be 10 tons.

The pressure on the *side* of a tank is also quite independent of the area of surface which the *bottom* of the tank covers, being the same for a narrow vessel as for one of unlimited extent ; provided only that the area of the side itself and the *depth* of the water remain unaltered.

When a tank has sloping sides, which are wider at the top than at the bottom, the position of the centre of gravity of any side must be determined as in (6). Let d be the vertical depth of the tank, h the height of a side measured on the slope, a the breadth at top, b the breadth at bottom ; then the pressure on the side, when the tank is full, is that of a column of water whose base is $\frac{1}{2}(a + b)h$, and whose height is $\frac{d}{3} \times \frac{a + 2b}{a + b}$.

74. CENTRE OF PRESSURE.—When a rigid plane is pressed upon by water in which it is immersed, there is one point in that plane at which the resultant of all the pressures acts; and this point is called the “centre of pressure.” If, therefore, a force equal to the resultant is applied at the *centre of pressure*, all the pressures will be counterbalanced, and the plane will be in equilibrium.

The position of the centre of pressure can only be obtained by help of the higher mathematics, the methods of which will be found in any analytical treatise on hydrostatics. The position of the *centre of pressure* in a rectangular plane immersed in water is shown to be at one-third of its height from the base, measured up the centre-line. Hence it follows that when a tie-rod is placed across from side to side of a tank having vertical sides and filled with water, its position must be in the middle of the side at one-third of its depth from the bottom. In the case of the cubical tank above mentioned having sides 9 ft. each way, the centre of pressure will be 3 ft. from the bottom, and the iron tie-rod placed across should have a section of 2 inches to allow a strain of not more than 5 tons per inch.


In a plane surface of which the top and bottom are parallel, but of different widths, where a is the width at top, b that at bottom, and h the height or distance between the top and bottom, the distance of the *centre of pressure* from the top is

$$\frac{h}{2} \times \frac{a + 3b}{a + 2b};$$

and if $a = 2b$, the distance of the centre of pressure from the top is $\frac{2}{3}h$; the distance being in all cases measured *on the centre line* at right angles to the base.

Let ABC (fig. 57) be the section of the wall of a reservoir full of water; F the pressure of the water acting perpendicularly to AB at P , the *centre of pressure*. Let W be the weight of the wall acting vertically at G , its centre of gravity. Draw EC perpendicular to the direction of the force F ; then, in order that the wall may not be overthrown, we must have $F \times EC$ less than $W \times DC$.

Fig. 57.

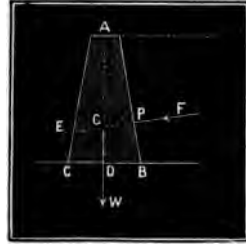

If the section of the wall is rectangular, and the face next the water vertical, we can determine the thickness t which must be given to it in order to insure its stability, as in the case of retaining walls (Chap. II.), by taking moments about a point S (fig. 24, page 36), at a distance $\frac{1}{3}t$ within the outer edge C of the wall. Putting h for the height of the wall, w for the weight of a cubic foot of water, W the weight of a piece of wall one foot in length, whose weight per cubic foot is w' ; we have

$$F = \frac{1}{2} w h^2$$

$$W \times DS = \frac{3}{8} w' h t^2$$

$$F \times EC = \frac{1}{6} w h^3$$

Equating these moments, we obtain t , the thickness of the wall, or


$$t = \frac{2}{3} \sqrt{\frac{w}{w'}} \cdot h$$

Let the wall be of solid concrete, where $w' = 140$ lbs., then since $w = 62.5$ lbs., we get, in this case,

$$t = .445 h.$$

75. HYDROSTATIC PRESSURE.—When vessels of different sizes are placed on the same level, and made to communicate by a pipe at the bottom, water poured into one vessel will rise to the same level in all. Thus, let the small vessel (fig. 58) AB be filled up to A, the water will rise in the larger one CD to C, and the line AC will be horizontal; so that the weight of the small quantity of water in AB balances that of the larger quantity in CD. Suppose the vessel CD be closed tightly by a plug at any point F, and let AB be filled up to A with water. Draw

Fig. 58.

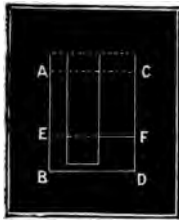

the horizontal line EF; then the column of water AE exerts a pressure upwards on the underside of the plug at F. If A is the area of section in square inches of the larger vessel, a that of the smaller, p the pressure per square inch of the column AE; then $p \times a$ is the pressure at E of the column AE, and $p \times A$ the pressure upwards of the plug at F; or the pressure at F is to that at E as $p \cdot A$ to $p \cdot a$, or as A to a . Therefore the pressure on the underside of the plug at F = $\frac{A}{a} \times$ weight of column AE.

The column of water AE is called the *head of water* due to the height EA above the plug at F. Hence we see that the pressure upwards on the plug is increased by increasing A, the area of the larger vessel, or by diminishing the area a of the smaller one, provided that the height of the column AE is increased in proportion as a is diminished; so that a very small quantity of water may produce a very great pressure on a large surface. This principle is applied to the construction of *hydraulic lifts*; a piston being substituted for the plug in

the larger vessel, which is raised by the pressure of water from a small tube carried up to a tank in the highest part of the building. If the area of the piston is 50 times that of the section of the tube, the pressure upwards upon it will equal 50 times the weight of the column AE; so that it will not only be made to ascend, but will also be capable of raising a heavy weight with it, until equilibrium is established by the gradual decrease of the head of water, or of the height AE.

The pressure on the piston A at F is, however, independent of the area a of the tube, for if h is the height AE, we have pressure at F = $\frac{A}{a} \times$ weight of column AE,

$$= \frac{A}{a} \pi h a = A \pi h$$
, which is increased by increase of A and h .

We have a familiar example of the practical application of the above principle in the means adopted for the supply of hot water throughout every story of a house from a boiler in the basement. A cold water tank C is provided at the top of the house, and a pipe therefrom conveys water to a small closed boiler in the lowest story, in which it is heated, and passes by another pipe from the boiler to any other part of the house, owing to the *head of water* which is due to the height of C above the boiler. It is usual, however, to provide a second tank H for hot water, and this must be entirely closed-in to prevent the pressure from C causing the water to overflow and escape. The tank H may be placed in any convenient part of the house, but it is best to have it as near the boiler as possible so as to avoid the risk of its being frozen up in winter. The object of having the tank H is to obviate the necessity of having a large boiler, and to

contain a reserve of hot water ready for use ; it should be provided with a safety-valve, which must, however, be weighted with a greater pressure than that due to the head of water from C, which will be 15 lbs. per square inch for every 34 feet of height, so as to prevent an escape of water from the valve : the object of such a valve being to prevent an undue accumulation of steam, and to prevent the bursting of the boiler in case the pipe from C should happen to become stopped up.

76. SPECIFIC GRAVITY.—When a heavy substance is placed in one scale of a pair of balances, it is said to have the same weight as another heavy body placed in the opposite scale, when they exactly balance. If the heavy substance, instead of being placed in the scale, is suspended from the bottom of it in a vessel of water, it is now found that the body in the opposite scale more than balances it, and that it has lost a certain amount of weight. This loss of weight is due to the upward pressure of the water upon the body, which is equal to the weight of water the body displaces, or to a quantity of water equal in bulk to that of the heavy body. Let w be the weight of the body in air, w' its weight in water ; then $w - w'$ is the weight of an equal bulk of water. The proportion which the weight of any body bears to the weight of an equal bulk of water is called its “specific gravity.” The *specific gravity*, therefore, of a body is represented by the ratio

$$\frac{w}{w - w'}$$

the value of which has been carefully determined for nearly all known substances by different experimenters, and a copious Table is given in the Appendix of the

specific gravity (that of water being taken as 1000) and weight per cubic foot of most of those employed for building purposes, it being often a very useful guide as to the quality of a material to know its specific gravity, since the density or compactness is in proportion thereto. In selecting a building stone from several specimens whose chemical composition may be similar, it will generally be found that the stone having the highest specific gravity is the best able to resist the action of weather.

If we take the weight of a cubic foot of water as 1,000 oz. or $62\frac{1}{2}$ lbs., we have only to multiply the specific gravity of a body by $62\frac{1}{2}$ lbs. and we find the weight per cubic foot of that substance. We are also enabled to detect any unsoundness in a mass of cast metal which may appear externally to be perfect, but, from cooling too rapidly, has become honey-combed in the interior, as its specific gravity will in that case be less than for a solid mass of the same metal. The impurities and adulterations of metals and other materials can be detected by finding their specific gravity; and also the proportion in which the two metals in any alloy are mixed can be determined. Brass, being a mixture of copper and tin, has a specific gravity between those of the two metals; the specific gravity of copper is 8.9, and of tin, 7.29; that of brass varies from 7.8 to 8.4, according to the proportions in which these metals are mixed. The specific gravity of an alloy of two metals may be found when we know the specific gravities S and s of its constituents, and the volumes V and v of each, for we have

$$\text{Specific gravity of alloy} = \frac{VS + vs}{V + v}$$

To find the specific gravity of wood, or of any substance lighter than water, let it be made to sink by attaching a heavy body whose weight in water is w_1 ; and let w' be the weight of the two bodies in water, then the specific-gravity required is

$$\frac{w}{w + w_1 - w'}.$$

It often happens that a baulk of timber is rotten in the middle, from the pith having decayed (40), by which its value when cut up is much diminished; this can be at once detected by finding the specific gravity of the baulk and comparing it with that of a piece of the solid wood.

77. WATER IN MOTION.—When water is allowed to flow out of a tank through a small orifice at the bottom, the height (h) of the water in the tank being kept at a constant level, the velocity V of the efflux in feet per second is expressed by the formula

$$V = \sqrt{2g} \cdot \sqrt{h} = 8 \sqrt{h},$$

where g is the force of gravity, say 32 feet per second, as explained in Chapter I. (1), and h is the height in feet *due* to the velocity V . The quantity h is also called the *head of water*, and the velocities of efflux for different *heads* are to one another as the *square roots* of their respective heads. If the tank is allowed to empty itself through the orifice, no fresh water being supplied to make up for the loss, the velocity will gradually diminish with the decrease of *head*, so that the time of emptying the tank will be twice as great as that required for discharging an equal volume of water when it was kept full.

The quantity of water discharged per second can easily be calculated from the formula for V when the area of

the orifice is known ; allowance, however, has to be made for the contraction of the stream in passing through the orifice, its actual, or *effective*, area of section being only about $\cdot 6$ or $\frac{2}{3}$ ths of that of the orifice. Putting a for the *effective* area of the stream at the orifice in square feet, Q the volume in cubic feet of water discharged per second, we have

$$Q = V \cdot a = 8a \sqrt{h}$$

and if we multiply Q by $6\frac{1}{4}$ we obtain the number of gallons discharged in every second of time.

78. WATER IN PIPES.—When water is conveyed from the bottom of a reservoir by means of a long horizontal pipe, it is found that the surface of the pipe offers a certain resistance to the passage of the water, thereby retarding its velocity, so that the effect of the *head* of water is diminished, and the discharge is therefore much less than that obtained above. It has been shown by experiment that this resistance is independent of the height of the *head* or the pressure of the water on the sides of the pipe, but is nearly as the square of the velocity at which the water is passing along the pipe, and is also proportional to the surface of the pipe itself which is exposed to the action of the water ; so that as the surface of a circular cylinder is the smallest for a given area of section, it is advisable to make pipes and channels for conveying water as nearly circular as possible, in order to reduce their resistance to a minimum. The term friction is usually applied to this resistance, but it is very different to the friction of solids as described in section (13).

If we call f the co-efficient of friction which is determined by experiment, l the length and d the diameter of the pipe, in feet ; v the velocity in feet per second ; q the

force of gravity, or 32.2 in this latitude; then δ , the *loss of head*, is found to be nearly,

$$\begin{aligned}\delta &= f \frac{l}{d} \cdot \frac{v^2}{2g}, \text{ in feet,} \\ &= \frac{f}{2g} \cdot \frac{l}{d} \cdot v^2 \\ &= .0004 \frac{l}{d} v^2, \text{ nearly.}\end{aligned}$$

The value of f is not, however, quite constant, being greater for low than for high velocities; its value has been calculated by different experimenters whose results show considerable divergence, but the following is the value given by Weisbach in his "Mechanics of Engineering"—

$$f = .01439 + \frac{.017155}{\sqrt{v}}.$$

From this we find that when

$v = 1$ ft. per sec.,	$f = .0315,$	$\frac{2g}{f} = 2032,$	$\sqrt{\frac{2g}{f}} = 45$
$v = 2$,,	$f = .0265,$,, = 2421,	,, = 49
$v = 3$,,	$f = .0243,$,, = 2640,	,, = 51
$v = 6$,,	$f = .0214,$,, = 3009,	,, = 55
$v = 12$,,	$f = .0193,$,, = 3337,	,, = 58
$v = 20$,,	$f = .0182,$,, = 3538,	,, = 59

For example, suppose a pipe, 8 in. diameter and 2,000 ft. long, conveys water at a velocity of 3 ft. per second; the *loss of head* will be,

$$\delta = .0243 \frac{2000}{\frac{8}{12}} \cdot \frac{9}{64 \cdot 4} = 10.23 \text{ feet.}$$

It appears from the formula that in order to obtain the least possible *loss of head* in leading a quantity of water, the pipe must be made as wide as possible and not unnecessarily long.

If Q is the discharge, F the transverse section of the pipe $= \pi \frac{d^2}{4}$, or, $.7854d^2$, when the section is a circle,

$$\text{then, } v = \frac{Q}{F} = \frac{4Q}{\pi d^2} = 1.273 \frac{Q}{d^2}$$

Substitute this value for v in the formula for *loss of head*, and we have,

$$\delta = \frac{f}{2g} \left(\frac{4}{\pi} \right)^2 \frac{l \cdot Q^2}{d^5};$$

from which it is seen that if all the other quantities remain unaltered, and $2d$ is put for d , then the value of δ must be divided by 2^5 or 32.

This last formula tells us how much *fall* we must give to a pipe, in order that it may convey a given quantity Q from one place to another. In the previous example, if a *fall* of 10.23 feet is required to convey a given quantity in a pipe of 8 inches diameter, then a *fall* of only $\frac{10.23}{32}$,

or .32 feet, is required to produce the same discharge from a tube 16 inches diameter.

To find the velocity v , in feet per second, of the discharge of water from long tubes, where h is the *head* in feet, we have

$$v = \sqrt{\frac{2g \cdot h \cdot d}{f \cdot l}} = \sqrt{\frac{2g}{f}} \sqrt{\frac{d}{l}} \sqrt{h} = 50 \sqrt{\frac{d}{l}} \sqrt{h},$$

nearly,

$$\begin{aligned}\text{and, } Q &= F \cdot v = \frac{\pi d^2}{4} v \\ &= .7854 d^2 \cdot v.\end{aligned}$$

In all cases the pipes are supposed to be running full.

Let us compare this value of v with that of V obtained above (77) for water issuing from an orifice at the bottom of a tank; let $d = \frac{2}{3}$, $l = 2000$; then we have

$$\begin{aligned}V &= 8 \sqrt{h} \\ v &= \frac{10}{11} \sqrt{h} \\ V : v &:: 88 : 10\end{aligned}$$

and the values of Q , or the volumes discharged in a given time will be in the same ratio.

79. BENDS AND ELBOWS.—A considerable loss of head may be produced by changes in the size and direction of a pipe conveying water. Any sudden enlargement or contraction of the diameter produces a sudden change of velocity and a consequent loss of head; but this loss may be reduced to a very small amount if the change in the size of the pipe is made gradually. The greatest loss of head is occasioned by sudden turns in the direction of the pipe, in the case of a sharp elbow the loss depends on the angle of deviation, and can be expressed by the formula,

$$\delta = k \frac{v^2}{2g}$$

k being the co-efficient of resistance to be determined by experiment for different angles of deviation from the straight line. By experiments on a pipe $1\frac{1}{4}$ inch in diameter, Weisbach found that when the angle of deviation was 20° , $k = .046$; for the angle of 40° , $k = .139$; for 60° , $k = .364$; for 90° , $k = .984$; so that with an

elbow forming a right angle, the loss of head is nearly as much as the height due to the velocity. With pipes of smaller diameter the value of k was found to be much greater.

Bends formed by arcs of circles cause much less resistance to the passage of water than elbows do, but they also cause a partial contraction of the diameter of the stream which reduces the head; but this loss may be reduced by gradually enlarging the cross section of the pipe at the middle of the bend. The co-efficient of resistance k in this case depends on the ratio of the radius of the section of the pipe to the radius of curvature of the bend. Thus, in pipes of circular section having a for the radius of the pipe, and r for that of the bend, Weisbach obtained the following values of k from which the loss of head δ can be calculated in the formula,

$$\delta = k \frac{v^2}{2g}$$

$\frac{a}{r} =$	·1,	$k =$	·131
„	= ·2,	„	= ·138
„	= ·3,	„	= ·158
„	= ·4,	„	= ·206
„	= ·5,	„	= ·294
„	= ·6,	„	= ·440
„	= ·7,	„	= ·661
„	= ·8,	„	= ·977
„	= ·9,	„	= 1·408
„	= 1·0,	„	= 1·978

In drain-pipes for the conveyance of sewage-water, elbows and bends are frequently the cause of their being choked up, as the stoppage or reduction of the velocity at

those points causes a deposit of the solid matters which are being carried along to take place, whereby the transverse section is reduced, and a still further obstruction is caused which in time results in a complete blocking up of the pipe.

80. STRENGTH OF WATER-PIPES.—Pipes for conveying water should be capable of sustaining a pressure equal to not less than 10 atmospheres, or 150 lbs. on every square inch of surface, which is equivalent to a head of water 340 feet high. The thickness therefore of similar pipes must be proportional to their diameters, as well as to the head of water or pressure per unit of surface. For pipes of diameter d , the following are the values of t , the thickness of the pipe for a pressure of 10 atmospheres, as found by Weisbach's experiments on pipes of different materials:

Sheet-iron, $t = .0086 d + .12$, inches.

Cast-iron, $t = .0238 d + .34$, ,,

Lead, $t = .0507 d + .21$, ,,

81. AIR.—The atmosphere surrounding the earth is found to consist of a mixture of the two gases, oxygen and nitrogen, the proportions of which are very nearly the same, whether the air is on the top of a mountain or down in a valley. 100 parts by weight of air contain 23 parts of oxygen and 77 of nitrogen, and as the former is the heavier of the two in the ratio of 16 to 14, the proportion of the gases in 100 volumes is about 21 to 79. The air on the sea-shore and open heaths of Scotland is found to contain 21 volumes of oxygen in 100 of air, and on the top of the hills 20.98; in a suburb of Manchester it is 20.96 to 20.98; at Paris the mean quantity of oxygen for one year was 20.96; at St. John's, Antigua, it was

20·95; but in some hot climates it has been found as low as 20·3.

Besides these two principal ingredients, air also contains a small but perceptible proportion of *carbonic acid* gas, which is a chemical union of carbon with oxygen, and is $1\frac{1}{2}$ times as heavy as air. This gas is found in the air of the open country to be in the proportion of 3·36 volumes to 10,000 of air, while in towns where much coal smoke is produced, it varies from 4 to 6 or 7 volumes. Experiments show that when the quantity of this gas in 10,000 volumes of air exceeds 6 volumes, ill effects are produced on persons who breathe it; and as 15 cubic feet of carbonic acid are given off by every person in 24 hours, or nearly two-thirds of a cubic foot per hour, it is clear that the air in a room which is closely shut up must soon become poisonous to those who occupy it, and that it will require to be frequently changed. The burning of two sperm candles produces the same amount of this gas as one man does, or one candle yields ·3 cubic feet per hour. A gas burner consuming 3 feet of gas per hour produces 6 cubic feet of carbonic acid in the same time.

Another gas, which is found in minute quantities in air, is called *ozone*, the amount of which is very variable, more being found in country air than in the air of towns, and its proportion is greatest in spring and least in winter. The presence of ozone can generally be detected by delicate chemical tests on rainy days and during great atmospheric disturbances, but its maximum proportion is only one in 700,000 volumes of air. It is believed to be a condensed form of oxygen, possessing greatly increased chemical activity surpassing that of oxygen as much as oxygen surpasses air; 3 volumes of oxygen become condensed by electrical action into 2 of ozone, which can

again be expanded by heat to 3 volumes of oxygen. Atmospheric electricity is apparently a great generator of ozone. It has the power of destroying bad smells and the germs of contagion, by its rapid oxidization of organic matter.

82. DIFFUSION.—If a vessel is partly filled with water, and then a lighter liquid, such as oil, is poured on the top, it will be seen that the two liquids do not mix, but remain as perfectly distinct as if they were in separate vessels. When, however, we do the same with two gases of different density, they are found to *diffuse* through each other in a very short time, the heavier one rising into the lighter and the lighter one sinking into the heavier, until a uniform mixture is produced; the only difference being, that the velocity of diffusion of a heavy gas into a light one is less than that of a light gas into a heavy one, the rate of diffusion of gases into one another being inversely as the square roots of their relative densities. It is by diffusion that smells are rapidly conveyed in the air, and it is chiefly owing to this phenomenon that its composition remains nearly the same in all parts of the world.

If a tube closed at one end by a plug of plaster of Paris is filled with a gas, it will be found to pass out through the plaster (when quite dry) and mix with the surrounding air, and at the same time the air will pass into the tube through the plaster, so that the whole contents of the tube will soon be changed. In this way the external walls of a building assist in the ventilation of the rooms, it having been found by experiment that, with a difference of 4° Fahr. between the temperatures of the air inside and outside, from 5 to 6 cubic feet of air pass through a square yard of dry stone wall per hour, and about 8 feet through a brick wall; so that the larger the

external surface the better will be the ventilation. Wet walls are, however, impervious to the diffusion of air, and consequently we find newly-built houses to be less healthy than older ones, which have had time to dry. Mortar, when dry, is very porous to air. Diffusion through walls takes place more rapidly in winter than in summer.

83. VENTILATION.—The effect of heat on air and gases is to cause their expansion by $\frac{1}{273}$ of their bulk for each degree of the Fahrenheit scale. The amount of heat given off from the body and breath of an adult in a single hour is sufficient to produce a rise of 173° Fahr. in a chamber containing 150 cubic feet of air, provided that none of the heat is carried away by conduction. When the air at the bottom of a room is heated it becomes lighter in weight, and consequently ascends to the ceiling, parting with some of its heat to the colder air through which it passes. If there is an inlet at the bottom and an outlet at the top, a regular current will thus be produced by the cold air coming in below, to supply the place of the warm air which is ascending and passing out at the top. The object of ventilation of rooms is the removal of the superabundance of carbonic-acid, which has been generated therein by the persons occupying it and by the lights burning. Now, in order to prevent the proportion of this gas from exceeding 6 parts in 10,000, it is necessary that 3,000 cubic feet per hour of pure air should be supplied to each person in the room, so that if there is one person to every 500 cubic feet of space, it will be necessary to change the air of it six times per hour; 50 cubic feet per minute, or $\frac{5}{6}$ of a cubic foot per second, must then be passed into the room, so that, with an opening of $\frac{5}{6}$ of a square foot, or 120 square inches, the air must enter at a velocity of 1 foot per second, or 682 mile per hour; with an inlet of half

this size, the velocity must be double; with one of 30 square inches, the velocity must be 4 feet per second, or 2·728 miles per hour; and if the inlet is 24 square inches, the velocity must be 5 feet per second, or 3·41 miles per hour, which is as great as can be endured with comfort by most persons without the sensation of a draught.

The pressure of the air on the surface of the earth being on an average about 15 lbs. per square inch, is equivalent to that of a column of air of uniform density 5 miles in height; consequently from the formula $v = 8 \sqrt{h}$, (77) we find that air would rush into a vacuum with a velocity *due* to the height of 5 miles, or

$$v = 8 \sqrt{26400} = 1300 \text{ ft. per second.}$$

The expansion of gases by heat being $\frac{1}{491}$ of their volume for every degree Fahr. that the temperature is raised, it follows that they have less density, or are lighter at high than at low temperatures, so that an upward current will set in when the air at the bottom of a room is warmed; and if there is an outlet at the top as well as an inlet of the same size at the bottom, the current will flow at a rate depending on the difference of temperature between the external and internal air, and on the height of the orifice of exit above the inlet; if h is this height, and a° the difference of temperature, then the expansion due to a° is $\frac{a}{491}$, and the height due to the velocity v , at which

the cold air enters, is $h \times \frac{a}{491}$, so that we have,

$$v = 8 \sqrt{h \frac{a}{491}}$$

For example, if the height of exit is 25 feet above the

inlet, and the temperature of the air in the room 10° higher than that outside, we find

$$v = 8 \sqrt{\frac{25 \times 10}{491}} = 5.7 \text{ feet per second.}$$

The quantity of air which enters will be v into the area of the opening in feet. Let the room be a cube of 25 feet, it is required to find the area of inlet in order that sufficient air may be admitted at the above velocity to change the air of the room six times in one hour. Here, the cubical contents being 15625 feet, we have to supply six times this quantity in the hour, or 26 cubic feet in every second, at a velocity of 5.7 feet; therefore, the inlet must have an area of $\frac{26}{5.7}$, or, 4.56 square feet.

Where the air has to be admitted through pipes the velocity is diminished by the resistance of their surface, in the same way as in the case of water flowing through pipes (78), and the same coefficient of friction must be used. Bends and elbows also produce a reduction of velocity in the same proportion as we found in the case of water (79).

The value of h can be greatly increased without raising the height of the room, by connecting the outlet with a flue which may be carried up to any required height, and h will be the height of the top of this flue above the inlet; but, in order to prevent a down draught in the flue, which would disturb the arrangements for ventilation, it is sometimes necessary to heat the air at the bottom of the flue by means of a furnace or gas burners, so as to cause a constantly ascending current in the flue, and we must then take α° as the difference between the temperature in the flue and that of the entering air. An increase

of velocity may also be produced by means of a revolving cowl or fan, which creates a partial vacuum in the flue.

It is a mistake to suppose that because carbonic acid gas is much denser than air it will necessarily be found in greater quantities near the floor of a room than at the top, for the law of the *diffusion* of gases (82) shows us that it mixes rapidly with the rest of the air, which becomes nearly uniform in composition; in fact, it is often found in crowded theatres that the proportion of carbonic acid is greater in the upper than the lower strata of the air, owing to the high temperature at which it is exhaled from the lungs of the audience.

84. PRESSURE OF WIND.—In discussing the question of strains upon roofs (50) the pressure arising from the action of wind on their exposed surface was taken at nearly double that of the whole structure itself, so that this becomes a very important element in the erection of buildings, and one that is too often ignored, with the natural result of the destruction of lofty chimney-stacks, towers, spires, and roofs, by heavy gales of wind. In exposed situations, and at a considerable elevation from the ground, the velocity of the wind is much greater than where there are obstacles to its progress, such as trees, and the friction offered by the surface of the ground.

When the wind blows against a plane surface at right angles to its direction, the pressure it produces is proportional to the area of the plane and to the square of its velocity; so that, if we can determine accurately the pressure for any known velocity, we are able to find it for any other velocity. It was ascertained by Smeaton that a current of air moving with a velocity of 35 miles an hour, or 51 feet per second, produced a pressure of 6 lbs. per square foot on a plane at right angles to its direction,

so that, when the velocity is 70 miles an hour, or 102 feet per second, the pressure by the above law will be 24 lbs. per square foot. If we put p for the pressure per square foot on a plane at right angles to the direction of the wind moving with a velocity v , we have

$$\frac{p}{24} = \left(\frac{v}{70}\right)^2, \text{ or } p = \frac{v^2}{204}$$

we can thus obtain the pressure p for any velocity v , as shown in the following Table.

v.		p.
Miles per Hour.	Feet per Second.	Lbs. per Foot.
20	29	1.96
30	44	4.41
40	58	7.84
50	73	12.25
60	88	17.64
70	103	24.00
80	117	31.36
90	132	40.00

When the wind strikes on a plane inclined at an angle to its direction, the pressure per square foot will be less according to the angle of inclination; and by the principle of the composition of velocities, the velocity perpendicular to a plane making an angle α with its direction, is $v \cdot \sin \alpha$, which we must substitute for v in the above expression for p ; or if p' is the pressure on the plane at the angle α , p that perpendicular to its direction, we have

$$p' = \frac{v^2 \cdot \sin^2 \alpha}{204} = p \cdot \sin^2 \alpha$$

Dr. Hutton obtained an empirical formula for the pressure on inclined surfaces from experiments with a

small plane made to move at different angles of inclination, but the results which it gives appear to be at variance with the principles of mechanics, since it makes the pressure on a plane inclined at 57° the same as on one that is vertical, the discrepancy being probably due to the creation of a partial vacuum behind the moving plane, which would not occur with such a large surface as a roof exposed to the pressure of the wind.

The pressure on a foot of surface of a plane inclined to the direction of the wind's motion at any angle α can be determined by multiplying the value of p found in the above Table by the value of $\sin \alpha$ given in the following one. The highest pitch of roof is about 60° , and, with the wind moving horizontally at 80 miles an hour, the pressure on a square foot would be $\cdot 75 \times 31\cdot 36$, or $23\frac{1}{2}$ lbs., which may be considered as the greatest ever likely to be put upon a roof in this country.

α°	$\text{Sin. } \alpha$
60°	$\cdot 750$
$52\frac{1}{2}^\circ$	$\cdot 630$
45°	$\cdot 500$
$37\frac{1}{2}^\circ$	$\cdot 370$
30°	$\cdot 125$
$22\frac{1}{2}^\circ$	$\cdot 146$
15°	$\cdot 067$

In calculating the strains, however, produced by wind upon a roof, it must be remembered that the pressure is not uniform over the whole roof, but only upon one side at a time, so that a racking strain is put upon it, which exerts a far greater effect on the framework than the mere addition of the same amount of pressure all over the roof. The mode of drawing the diagram of stress for the wind on

one side of a roof is shown with an example in the present author's treatise on "Carpentry" (Weale's Series), page 110, and also in the Appendix to his "Practical Geometry," 2nd. edit.; but it is evident that when the angle a does not exceed 30° the effect of the wind when blowing horizontally upon the roof is but slight, the actual pressure being, by the Table, only one-sixth of the pressure on a roof of 60° , or, $p' = 4$ lbs. The current of wind, however, does not always move horizontally, but is often in high gales directed obliquely downwards, in which case it might produce a greatly increased pressure upon a roof of low pitch.

In Chapter I. (7) we have shown how the effect of wind on a wall or chimney can be calculated; in the same manner we can determine the thickness to be given to a wall which stands alone, such as a chimney-stack rising high above a roof, in order that a pressure say of 40 lbs. per foot shall not overturn it. Let h be its height, t its thickness, δ the weight of a cubic foot; then the weight of 1 foot length of the wall is $\delta \cdot h \cdot t$, and the pressure on the surface is $40 h$. Equating the moments of these forces about the bottom edge of the wall, we have

$$\delta \cdot h \frac{t^2}{2} = 40 \frac{h^2}{2}$$

$$\text{or, } t = \sqrt{\frac{40 h}{\delta}}$$

when the wall is just about to turn over; so that, for stability, t must be greater than this equation gives.

For example, let $h = 27$ feet, $\delta = 120$ lbs., then we have

$$t = \sqrt{\frac{40 \times 27}{120}} = 3 \text{ feet.}$$

The pressure of the wind upon a circular tower is less than on a square one of the same diameter, as we may suppose its surface to consist of a number of small planes whose angles of inclination with the direction of the wind increase from the middle towards the outside, so that the pressure decreases according to the law above stated. By means of the Integral Calculus we find that the pressure on the surface of a circular cylinder is two-thirds of that on a square prism of same diameter.

CHAPTER VIII.

LIGHTNING-CONDUCTORS.

85. LIGHTNING-CONDUCTORS are rods of metal attached to the highest parts of a building to convey the electric fluid (as it is popularly called) from the clouds to the earth, and thereby prevent it from striking and damaging the structure. The identity of the lightning-flash with the electricity of the Leyden jar was established by Dr. Franklin and other philosophers about the middle of the last century, and we are thus enabled by experiments in the laboratory to determine the best means of protecting buildings from the destructive effects of lightning.

If we rub a glass rod with a piece of dry silk and then hold it near a pith ball suspended by a silken thread, the ball is at first attracted, but, if allowed to touch the glass, it is immediately repelled. If we now rub a stick of sealing-wax with a piece of dry flannel and bring it near the pith ball just repelled by the glass, it will be attracted to the sealing-wax. In this experiment the glass is said to be charged with positive and the sealing-wax with negative electricity; and it is found that bodies charged with the same kind of electricity, whether positive or negative, repel one another, while those charged with opposite kinds attract each other. It is also found that only that part of the rod which was rubbed is electrified, the opposite end being quite free from electricity, and

that those substances which produce it when rubbed, do not conduct it, or at least in a very imperfect degree. On the other hand the metals, unless "insulated," will not produce electricity when rubbed, but, if it is communicated to one end of a metallic rod, it is immediately conveyed to the other end. Hence it is that metals have been called "non-electrics," or "conductors," while glass, silk, flannel, and sealing-wax, have been termed "electrics," or "non-conductors." No substances, however, are perfect conductors or non-conductors, as all offer more or less resistance to the passage of electricity, and even glass, which is one of the worst conductors at an ordinary temperature, is a moderately good one when heated to redness. Water is a conductor at ordinary temperatures, but, when converted into ice, it conducts very badly. All metals are good conductors, although some much better than others, copper and silver being the best, while zinc offers three times as much resistance as copper does, iron seven times as much, and lead twelve times as much. When a conducting body is supported on a non-conducting substance it is said to be "insulated," so that the electricity it contains cannot be carried off to the earth.

If we take an insulated brass cylinder with spherical ends and bring it near the prime conductor of an electrical machine charged with electricity, we find that its natural electricity is at once decomposed so that the end next the charged conductor becomes charged with the opposite kind of electricity, while the further end is charged with the same kind as that in the conductor. The action which here takes place is called "Induction," and, wherever one kind of electricity is produced in any body by any means, the opposite kind will be found to be *induced* in neighbouring bodies. Thus, when a glass rod

is rubbed with silk, the glass becomes charged with positive and the silk with negative electricity in equal quantities.

If now we connect the brass cylinder with the earth by a metallic chain, and move it near the charged conductor, a flash will pass from the positively electrified body to the one negatively electrified, the length of the spark depending partly on the quantity of electricity which one contains more than the other, or, as it is termed by electricians, on the "difference of potential," and partly upon the density of the intervening fluid or "dielectric," rarified air offering a much less resistance to its passage than air of a denser kind. If, however, the cylinder presented to the conductor is terminated by a sharp metallic point, no sudden flash will pass, but the electricity of the cylinder will be concentrated on the point at a high degree of tension, and will fly off to the conductor until an equilibrium is established between the two kinds of electricity in a gradual manner by what is called the "brush discharge."

It is upon the phenomena of Induction and brush discharge above described that the principle of the lightning-conductor depends. A thunder-cloud may be regarded as an enormous electrical conductor usually charged with positive electricity, which as it approaches any object on the earth decomposes the electricity it contains, inducing negative electricity to collect upon it; and as soon as the "potential" of the cloud is sufficient to overcome the resistance of the air a discharge will take place between the cloud and the nearest object, and if that happens to offer great resistance to its passage, or is a bad conductor, it will be shattered by the shock. If, on the other hand, it is a good conductor, or is provided with a continuous

rod of a good conducting substance, the charge will be conveyed in safety to the earth, and the equilibrium between the two kinds of electricity will be restored. By providing this conductor with a point or points the lightning is prevented from striking, and a brush discharge of negative electricity takes place which relieves the cloud of its superabundance of positive electricity, and restores the equilibrium which was disturbed. In comparing however the action of points on a lightning-conductor with their effect in the laboratory with an ordinary electrical machine, it must be remembered that the thunder-cloud is infinitely larger, and contains an infinitely greater amount of electricity than the charged conductor of the most powerful machine, so that a ball even as large as that on the top of St. Paul's would be but a point in comparison to the size of the cloud. It seems therefore quite unnecessary to make the lightning-conductor terminate with a sharp point in order to obtain a brush discharge, where the amount of electricity we have to deal with is so enormous.

The best mode of protecting buildings from being struck is to connect together all the external metal work throughout, and also with the ground, taking especial care that the highest parts are connected with the rest by good metallic conductors. For example, a church having a lead-covered spire terminated by a metal vane, and also having its roof covered with lead, and communicating with the ground by means of metal rain-water pipes, will be effectually protected if the lead on the spire is connected by a metallic rod with that on the roof. In the case of stone towers, spires, or chimney-stacks, a stout rod of metal must be attached having one end carried up a few feet above the top of the masonry, and the lower

end buried in the ground to a sufficient depth to insure its being always in a moist soil, or else into a well of water if one is near at hand. It is advisable to surround the end in the ground with wood ashes or coke, which act as conductors, and also serve to protect the metal. The action of the conductor is to neutralise the positive electricity of the air and clouds, to prevent the accumulation of negative electricity on the earth's surface, as well as to restore the clouds to their condition of electrical equilibrium, and thus prevent the danger arising from the discharge of flashes of lightning.

86. As regards the material of which a lightning-conductor should be formed, it is evident that the metal which offers the least resistance to the passage of electricity is the best for this purpose, and, as it is usually placed on the outside of a building, and is much exposed to the weather, the metal should be one not liable to corrosion. Rods of iron have been used, but the rapid decay of this metal renders it an undesirable material, as, in case of any part of the rod being broken, or reduced in sectional area, much damage might be occasioned to the building if struck by lightning. As copper offers less resistance than iron, and is not so liable to corrode, this metal is now universally employed in place of iron for lightning-conductors.

The sectional area of the conductor must depend, to some extent, on the height of the building on which it is placed, as the resistance is directly as the length of the conductor, and inversely as its area of section. It has been found by experience that a copper rod $\frac{3}{4}$ inch square will effectually protect the loftiest building, so that for those of ordinary height a smaller one will suffice, but should never be less than $\frac{1}{2}$ inch diameter. Sir W. Snow

Harris, who paid great attention to the subject, recommended that the rod should be of copper tubing from 1 inch to 2 inches diameter, and $\frac{1}{4}$ inch thick, put together in lengths of 10 feet by being screwed into intermediate pieces of thick tube 2 inches long. There is, however, a difficulty in adapting such a rod to the irregularities in the outline of most buildings, and since the invention of rope made of copper wires twisted together, this material has been generally employed both from its being continuous throughout, and being easily bent over any projections, so that it can be carried over any part of the building much more easily than a solid rod or hollow tube.

The conductor should not merely be carried straight down from the highest point of a building to the ground, but should also be connected with all the metal-work of the roofs, otherwise there is danger of lateral discharges which may inflict serious damage. The rod should be placed in close contact with the wall, and all attempts at insulation by means of glass or porcelain sockets should be avoided, as they are both useless and disadvantageous; for the electricity will naturally choose the path that offers least resistance, and, even if anything occurred to cause it to leave the rod, it is evident that a flash of lightning which will pass through several hundreds of yards of air will not be affected by a few inches of an insulator.

The extent of building which a single conductor will defend is a matter on which there are diversities of opinion. Some French authorities have asserted that a rod whose height is h , will protect a circular area whose radius is $2h$; so that a rod 100 feet high should protect a space around it of 200 feet radius. Such a rule probably holds good when lightning is discharged vertically from a

cloud, but, as it is often discharged in an oblique direction, it may strike a lower portion of a building at a distance from the conductor. For instance, a tree was struck although only 52 feet from a conductor erected upon a house, while the house was untouched; in another case a house was struck at a point only 40 feet from a conductor. Several other cases have occurred which seem to show that very little reliance can be placed on this rule, and that where we have large ranges of straggling buildings it is necessary to distribute connected conductors through them, and to unite these with pointed rods placed at the most prominent parts of the buildings.

Much information as to the value and importance of lightning-conductors will be found in a treatise published in 1843 by Sir W. Snow Harris on the means of protecting buildings from the destructive effects of lightning.



APPENDIX.

TABLE I.

Specific Gravity and Weight of Building Materials.

The following is a Table of the specific gravity and weight per cubic foot of some of the principal materials used for building purposes :—

Materials.	Spec. grav. & weight in ozs. of 1 cub. ft.	Weight of 1 cub. ft. in lbs. av.
Water	1000	62·50
Beech, dry	690	43·12
Elm, seasoned	553	34·56
Fir (Norway spruce)	512	32·00
„ (white American spruce)	465	29·06
„ (Memel), dry	544	34·00
„ (Riga), dry	466	29·12
Fine (American), dry	368	23·00
„ (American pitch), dry	936	58·50
„ („), seasoned	741	46·31
Mahogany (Spanish), dry	852	53·30
„ (Honduras), dry	560	35·00
Oak (Old English), dry	625	39·06
„ (English), seasoned	777	48·56
„ (Riga), dry	688	43·00
„ (Dantzic), seasoned	755	47·24
„ (American), red	752	47·00
„ („), white	840	52·50
Teak, dry	745	46·56
„ seasoned	657	41·06
Granite (Guernsey)	2999	187·47
„ (Aberdeen)	2664	166·50
„ (Cornish)	2624	164·00
„ (Dublin)	2713	169·57
Slate (Welsh)	2388	150·50

Materials.	Spec. grav. & weight in ozs. of 1 cub. ft.	Weight of 1 cub. ft. in lbs. av.
Slate (Westmoreland)	2768	173·00
„ (Cornwall)	2512	157·00
SANDSTONES :—		
Abercarne (Monmouth)	2688	167·93
Pyotdykes (Dundee)	2601	162·57
Glamis (Forfar)	2578	161·20
Munlochy (Ross)	2569	160·60
Mylnefield (Dundee)	2561	160·07
Auchray (ditto)	2542	158·90
Lochee (ditto)	2538	158·70
Scotgate-head (Huddersfield)	2528	158·00
Colford (Gloster)	2491	155·72
Longwood (Huddersfield)	2455	153·44
Elland (Halifax)	2452	153·28
Park-spring (Leeds)	2418	151·11
Talacre (Flint)	2403	150·27
Mansfield, red	2378	148·66
„ white	2344	146·51
Darley-dale, Derby	2372	148·25
New Leeds (Yorkshire)	2360	147·50
Chepstow (Monmouth)	2348	146·78
Bewdley (Salop)	2336	146·00
Kenton (Northumberland)	2320	145·00
Giffneuk (Glasgow)	2303	143·90
Hookstone (Harrogate, Yorkshire)	2282	142·62
Stainton (Durham)	2280	142·53
Bramley-fall (Leeds)	2276	142·23
Catcraig (Linlithgow)	2267	141·70
Cragleith (Edinboro')	2266	141·63
Humbie („)	2244	140·23
Meanwood (Leeds)	2238	139·88
Redgate (Durham)	2234	139·62
Hunger-hill (Belper)	2175	135·95
Gatherley (Yorkshire)	2173	135·82
Pensher (Durham)	2148	134·35
Hollington (Stafford)	2129	133·10
Duffield (Derby)	2127	132·90
Longannet (Perth)	2108	131·73
Heddon (Northumberland)	2092	130·73
Morley-moor (Derby)	2089	130·54
Whitby (Yorkshire)	2027	126·70
Tixall (Stafford)	1993	124·56
Calverley (Kent)	1889	118·06
Tisbury (Wilts)	1778	111·13
Gatton (Reigate)	1650	103·10

Materials.	Spec. grav. & weight in ozs. of 1 cub. ft.	Weight of 1 cub. ft. in lbs. av.
MAGNESIAN LIMESTONES :—		
Bolsover (Derby)	2427	151·69
Anston (Yorkshire)	2304	144·00
Roche-abbey (Bawtry, Yorkshire)	2228	139·20
Huddleston (Sherburne ")	2205	137·83
Park-nook (Doncaster ")	2198	137·20
Brodsworth (" ")	2138	133·66
Cadeby (" ")	2026	126·60
OOLITES :—		
Wass (Thirsk, Yorkshire), hard	2600	162·50
" ("), soft	2267	141·68
Aubigny (France)	2400	150·00
Ancaster (Lincoln)	2229	139·30
Barnack (Stamford, Lincoln)	2188	136·78
Taynton (Oxon)	2175	135·93
Windrush (Gloster), hard	2175	135·93
" ("), soft	1891	118·18
Portland (Waycroft)	2169	135·56
" (Roach)	2028	126·80
Doulting (Wilts)	2147	134·25
Haydor (Lincoln)	2135	133·48
Ketton (Rutland)	2045	127·81
Caen (France), average	2000	125·00
Box (Bath)	1968	123·00
Coombe-down (Bath)	1856	116·00
LIMESTONES :—		
Kentish-rag (Maidstone)	2666	166·60
Hopton-wood (Derby)	2535	158·45
Chilmark (Wilts), hard	2518	157·38
" ("), soft	2426	151·60
Blue-lias	2467	154·18
Seacombe (Purbeck)	2416	151·03
Chalk	2315	144·68
Hamhill (Somerset)	2268	141·75
Hildenley (Malton, Yorkshire)	2202	137·65
Barnack (Lincoln)	2188	136·76
Sutton (Glamorgan)	2176	136·00
Beer (Devon)	2108	131·75
Totternhoe (Beds)	1864	116·50
Earth, loamy		
" common	2016	126·00
" clay	1984	124·00
" gravel	1919	119·93
" loose	1749	109·32
" loose	1520	95·00

Materials.	Spec. grav. & weight in ozs. of 1 cub. ft.	Weight of 1 cub. ft. in lbs. av.
Concrete	2240	140·00
Brickwork	1792	112·00
Mortar	1744	109·00
Iron, wrought	7680	480·00
„ cast	7120	444·00
Steel	7840	490·00
Lead, milled	11,407	712·93
Copper, sheet	8785	549·06
Brass, cast	8100	506·25
Bell-metal	8760	547·50
Zinc	7028	439·25
Glass, plate	2760	172·50
„ crown	2520	157·50
Brick, stock	1841	115·06
„ red	2168	135·50
Tile, plain	1815	113·43

TABLE II.

Powers of Numbers.

a	$a^{1.03}$	a^2	a^3	$a^{3.5}$	$a^{3.55}$	a^4
1	1·0	1·0	1·0	1·0	1·0	1·0
1·25	1·4	1·6	1·95	2·2	2·2	2·4
1·5	1·9	2·3	3·38	4·1	4·2	5·1
1·75	2·5	3·1	5·4	7·1	7·3	9·4
2	3·1	4	8	11·3	11·7	16
2·25	3·8	5·1	11·4	17·1	17·8	25·6
2·5	4·5	6·3	15·6	24·7	25·8	39·1
2·75	5·2	7·6	20·8	34·5	36·3	57·2
3	6·0	9	27	46·8	49·4	81·0
3·25	6·8	10·6	34·3	60·5	65·6	111·6
3·5	7·7	12·3	42·9	80·2	85·4	150·1
3·75	8·6	14·1	52·7	102·1	109·1	197·8
4	9·6	16	64	128·0	137·2	256·0
4·25	10·6	18·1	77	158·3	170·1	326·3
4·5	11·6	20·3	91	193·3	213·3	410·1
4·75	12·7	22·6	105	233·6	252·5	509·1
5	13·8	25	125	279·0	303·6	625·0
5·25	14·9	27·6	145	331·6	360·2	759·7
5·5	16·1	30·3	166	390·2	424·9	915

a	$a^{1.53}$	a^2	a^3	$a^{3.5}$	$a^{3.55}$	a^4
5.75	17.3	33.1	190	455.9	497.5	1093
6	18.6	36	216	529.0	578.8	1296
6.25	19.8	39.1	244	610.4	668.9	1526
6.5	21.1	42.3	275	700.2	768.9	1785
6.75	22.5	45.6	308	799.0	879.1	2076
7	23.9	49	343	907.5	1000	2401
7.25	25.3	52.6	381	1026.1	1133	2763
7.5	26.7	56.3	422	1155.3	1278	3164
7.75	28.2	60.1	465	1295.8	1436	3607
8	29.7	64	512	1448.2	1607	4096
8.25	31.2	68.1	562	1612.8	1792	4632
8.5	32.7	72.3	614	1790.5	1993	5220
8.75	34.3	76.6	670	1981.7	2209	5862
9	35.9	81	729	2237.9	2441	6561
9.25	37.6	85.6	791	2407	2690	7321
9.5	39.2	90.3	857	2643	2957	7959
9.75	40.9	95.1	927	2894	3243	9037
10	42.7	100	1000	3162	3548	10000
10.5	46.2	110.3	1158	3751	4219	12155
11	49.8	121	1331	4414	4977	14641
11.5	53.6	133	1521	5158	5828	17490
12	57.4	144	1728	5986	6778	20736
12.5	61.4	156	1953	6905	7835	24415
13	65.4	169	2197	7921	9005	28561
13.5	69.6	183	2460	9040	10296	33214
14	73.8	196	2744	10267	11716	38416
14.5	78.2	210	3049	11610	13270	44206
15	82.6	225	3355	13071	14967	50325
15.5	81.2	241	3724	14661	16814	57719
16	91.8	256	4096	16384	18820	65536
16.5	96.5	272	4492	18243	20992	74116
17	101.3	284	4913	20257	23340	83521
17.5	106.2	307	5360	22420	25870	93790
18	111.2	324	5832	24743	28590	104976
18.5	116.3	342	6332	27233	31510	117133
19	121.4	361	6859	29897	34640	130321
19.5	126.7	381	7415	32742	37985	144583
20	132.0	400	8000	35778	41558	160000
20.5	137.5	420	8615	39006	45365	176608
21	143.0	441	9261	42439	49418	194481
21.5	148.5	462	9939	46083	53723	213689
22	154.2	484	10648	49942	58290	234256
22.5	160.0	506	11391	54030	63130	256298
23	165.8	529	12167	58353	68257	279841
23.5	171.7	552	12978	62914	73672	304983
24	177.7	576	13724	67723	79387	329376
24.5	183.8	600	14707	72795	85420	360322
25	190.0	625	15625	78125	91768	390625
25.5	196.2	650	16585	83732	98450	429375



INDEX.

-
- | | |
|--|--|
| <p> ABSORBENT POWER OF STONE, 89
 Abutments, strength of, 45
 Air, composition of, 182
 — pressure of, 186
 Albumen in trees, 98
 Alumina, 79
 Ancaster stone, 87
 Angle-irons, strength of, 149
 Angle of obliquity, 66
 Angle of repose, 33, 36
 Anston stone, 89
 Arc of circle, centre of gravity of, 16
 Arches, 42
 Arched roof of wood, 124
 — — iron, 159

 BARK OF A TREE, 96
 Bath stone, 87
 Beams of wood, strength of, 100
 — cast-iron, strength of, 134
 — wrought-iron, strength of, 143
 Bending, resistance to, 110
 Bends in pipes, 180
 Binders, strength of, 115
 Boiling-point of water, 167
 Bolsover stone, 89
 Booms of girders, 147
 Bracket, strains in, 6
 Browning's varnish, 94
 Brush discharge of electricity, 195
 Building stones, 78
 Buttress, 21 </p> | <p> CARBONATE OF LIME, 78
 Carbonic acid, 183
 Carboniferous rocks, 84
 Cast-iron, nature of, 132
 — beams, 133
 — columns, 137
 Cement, 92
 Centering, 130
 Centre of gravity, 11
 — pressure, 170
 — resistance, 42
 Chalk formation, 86
 Chilmark stone, 86
 Chimney, pressure of wind on, 19
 Circular arch, 43
 — roof of iron, 159
 — — wood, 124
 Cleavage of slate, 83
 Co-efficient of friction in solids, 33
 — — in fluids, 177
 — stability, 47
 Cohesion, 34
 Columns of cast-iron, 137
 — wrought-iron, 142
 Components of a force, 4
 Conductors, lightning, 193
 Cone, centre of gravity of, 15
 Conical domes, 73
 Corbelling, 19
 Cosine of an angle, 4
 Couples, 9
 Creasote, 99
 Crushing strength of wood, 113 </p> |
|--|--|

Crushing strength of iron, 139
— — stone, 90

Cupolas, 68

DEAD KNOTS, 97

Decay of wood, 98

Deflexion of beams of iron, 152
— — wood, 107

Devonian formation, 87

Dielectric, 195

Diffusion of gases, 184

Dolomite, 89

Domes of stone and brick, 68
— iron, 76

Doubling stone, 88

Drain-pipes, 181

Drum of a dome, 68

EARTH, PRESSURE OF, 36

Efflux of water, 176

Elasticity, 29

— modulus of, 29
— limit of, 29

Elbows in pipes, 180

Electricity, 193

Electrical induction, 194

Electrics, 194

Ellipse, 136

Elliptic arch, 61

Enamelling iron, 164

Equation of equilibrium, 47
— stability, 47

Equilibrium of forces, 1
— equation of, 47

Euler's formula for pillars, 110

Exogens, 96

Extrados of an arch, 43

FAT LIMES, 92

Feldspar, 81

Fir, strength of, 113

Flat-arch, 58

Floors of timber, 114

Fluid, definition of, 166

Fluids at rest and in motion, 166

Force, definition of, 1

— of gravity, 2
— moment of, 7

Forces, resolution of, 3

Frame diagram, 7

Friction of solids, 32

— fluids, 177

Fungi, 99

GALVANIZING IRON, 164

Gases, 166

Girders of wood, 115

— iron, 145

Gothic arch, 59

— vaulting, 61

Granite, 80

Gravity, centre of, 11

— force of, 2

Grits, 84

Growth of timber, 96

HAMMER-BEAM ROOF, 122

Head of water, 172

— — loss of, 178

Heart-wood, 97

Heat, effect of, on iron, 154

Hemisphere, centre of gravity of, 15

Hodgkinson's cast-iron beam, 133
— formula for pillars, 110,
137, 142

Hornblende, 81

Hot water supply, 173

Hydraulic lime, 92

Hydrostatic pressure, 172

INDUCTION, ELECTRICAL, 194

Inertia, moment of, 30

Intrados of an arch, 43

Iron, nature of, 132

— beams, 133, 143

— columns, 137, 142

- Iron domes, 76
- Ironstone, 132
- JOINT OF RUPTURE, 46
- Joists, scantling of, 114
- KENTISH RAG, 86
- King-Post Roof, 118
- LATTICE BEAMS, 147
- Lever, principle of, 8
- Lias formation, 87
- Lightning conductors, 193
- Lime, 71, 91
- Limestones, 86
- Limit of elasticity, 29
- Line of pressures, 42
- Liquids, 166
- Load on a beam, 23
- Long columns of cast-iron, 137
 - — wrought-iron, 142
 - — wood, 109
- Loss of head of water, 178
- Lune of a dome, 69
- MAGNESIA, 79
- Magnetic oxide of iron, 164
- Magnesian limestone, 89
- Mansfield stone, 84
- Mass, unit of, 3
- Maxwell's diagram of strains, 6
- Mechanics, science of, 1
- Medullary rays, 97
- Melting point of iron, 133
- Metamorphic rocks, 80
- Metropolitan Building Act, 20
- Mica, 81
- Modulus of elasticity, 29
- Moment of a force, 7
 - inertia, 30
 - strain, 22
 - resistance, 31
- Momentum, 1
- Mortar, 91
- NATURAL BED OF STONE, 84
- Natural slope of earth, 36
- Needle of a shore, 127
- Neutral axis, 28
- New red sandstone, 84
- Nitrogen, 182
- OAK, STRENGTH OF, 113
- Oblique arch, 66
- Octagon, arches arranged in, 54
- Oolites, 87
- Oxide of iron, 79
- Oxygen, 167
- Ozone, 183
- PARABOLA, 26
- Parallelogram of forces, 4
- Perfect elasticity, 29
- Permanent load, 103, 110
- Pig iron, 132
- Pillars of wood, strength of, 109
 - iron, strength of, 137
- Pith of a tree, 96
- Pitch of a roof, 120
 - an arch, 59
- Polygon, arches arranged in, 53
- Poor limes, 92
- Porosity of stone, 89
- Portland cement, 93
 - stone, 87
- Potash, 78
- Potential, 195
- Powers of numbers, Table of, 204
- Preservation of iron, 163
 - wood, 99
 - stone, 93
- Pressure of earth, 36
 - water, 168
- Propped beam, 104
- Protection from lightning, 197
- Pyramid, centre of gravity of, 15
- QUARTZ, 81
- Queen-post roof, 119

Quick-lime, 78, 91

RAFTERS, 117

Raking-shore, 127

Rankine's principle, 41

Ransome's concrete stone, 94

Reaction, 1

Reciprocal figures, 7

Resolution of forces, 3

Resultant of forces, 3

Retaining walls, 36

Ribs of arched roofs of timber, 124

— — iron, 159

Rolled iron, strength of, 152

Roman cement, 93

Roofs of iron, 155

— wood, 117

Rupture, joint of, 44

SAFE-LOAD ON CAST-IRON BEAMS,
136

Safe-load on wrought-iron beams,
148

Safe-load on timber beams, 105

Sapwood, 98

Sandstones, 83

Scantlings of roof timbers, 121

Seasoning timber, 98

Sector, centre of gravity of, 17

Segmental arch, 55

Selenitic mortar, 92

Serpentine, 82

Shearing strain, 26

Shoring, 127

Short columns of cast-iron, 139

— — wrought-iron, 142

— — wood, 111

Silica, 78

Sine of an angle, 4

Skew arch, 66

Slacked lime, 78, 92

Slate, 82

Specific gravity, 174

— Table of, 201

Spires, 73

Stability of structures, 18

— arches, 47

— domes, 71

Steel, 161

Strains in beams, 21

Strength of timber beams, 100

— cast-iron beams, 133

— wrought-iron beams, 143

— wooden pillars, 110

— cast-iron pillars, 137

— wrought-iron pillars,

142

Strength of water pipes, 182

— stone, 90

Stress diagram, 7

Sulphate of lime, 79

Surcharge of an arch, 43

Syenite, 81

TANGENT OF AN ANGLE, 4

Tanks, water in, 168

Tannin, 98

Tensile strength of wood, 113

— — cast-iron, 133

Tensile strength of wrought-iron,
152

Thickness of abutments, 49

— retaining walls, 40

Thrust of an arch, 44

Tie-beam, 117

Timber framing, 116

— , growth of, 96

Trapezium, centre of gravity of, 13

Triangle, centre of gravity of, 12

Triangle of forces, 3

Turpentine, 98

ULTIMATE STRENGTH OF TIMBER,
113

Unit of mass, 3

— weight, 1

VAULTING, THRUST OF, 63
Velocity of wind, 188
Ventilation of rooms, 185
Vienna dome, 77
Voussoirs of an arch, 42

WATER, NATURE OF, 167
 — in motion, 176
 — in pipes, 177
 — in tanks, 168
Wealden formation, 83

Whitbed Portland, 88
 Wind pressure on walls, 188
 — — roofs, 190
 Wrought-iron, nature of, 141
 — beams, 143
 — columns, 142
 — , deflexion of, 152
 — , elasticity of, 151

 YEOVIL LIAS LIMESTONE, 87
 York Stone, 85

STANDARD WORKS IN BUILDING, ETC.

PORTLAND CEMENT FOR USERS. By HENRY FAIJA, A-M.
Inst. C.E. With Illustrations. Crown 8vo, 3s. 6d. cloth.

"A useful compendium of results for the practical builder and architect."—*Building News*

A BOOK ON BUILDING, CIVIL AND ECCLESIASTICAL,
Including CHURCH RESTORATION. By Sir EDMUND BECKETT, Bart.,
LL.D., Q.C., F.R.A.S., Chancellor and Vicar-General of York, Author of
"Clocks and Watches and Bells," &c. Second Edition, 12mo, 5s. cloth
boards.

"We commend the book to the thoughtful consideration of all who are interested in the
building art."—*Builder*.

THE HANDBOOK OF SPECIFICATIONS ; or, Practical Guide to
the Architect, Engineer, Surveyor, and Builder, in drawing up Specifica-
tions and Contracts for Works and Constructions. Illustrated by Prece-
dents of Buildings actually executed by eminent Architects and Engineers.
By Professor THOMAS L. DONALDSON, M.R.I.B.A. New Edition, in One
large volume, 8vo, with upwards of 1000 pages of text, and 33 plates,
cloth, 17. 11s. 6d.

"In this work forty-four specifications of executed works are given. . . . Donaldson"
Handbook of Specifications must be bought by all architects."—*Builder*.

SPECIFICATIONS FOR PRACTICAL ARCHITECTURE: A
Guide to the Architect, Engineer, Surveyor, and Builder ; with an Essay
on the Structure and Science of Modern Buildings. By FREDERICK
ROGERS, Architect. 8vo, 15s. cloth.

*. A volume of specifications of a practical character being greatly required, and the old
standard work of Alfred Bartholomew being out of print, the author, on the basis of that
work, has produced the above.—*Extract from Preface*.

HINTS TO YOUNG ARCHITECTS. By GEORGE WIGHTWICK,
Architect. New Edition, revised and enlarged. By G. HUSKISSON
GUILLAUME, Architect. 12mo, cloth boards, 4s.

"Will be found an acquisition to pupils, and a copy ought to be considered as necessary a
purchase as a box of instruments."—*Architect*.

THE ARCHITECT'S GUIDE: Being a Text Book of Useful Infor-
mation for Architects, Engineers, Surveyors, Contractors, Clerks of
Works, &c. By FREDERICK ROGERS. Author of "Specifications for
Practical Architecture," &c. Crown 8vo, 6s. cloth.

"As a text-book of useful information for architects, engineers, surveyors, &c., it would
be hard to find a handier or more complete little volume."—*Standard*.

LOCKWOOD & CO.'S BUILDER'S AND CONTRACTOR'S PRICE
BOOK, containing the latest prices of all kinds of Builders' Materials
and Labour, and of all Trades connected with Building, &c., &c. The
whole revised and edited by F. T. W. MILLER, A.R.I.B.A. Fcap. half-
bound, 4s.

"An elaborate collection of memoranda for technical use."—*Athenæum*.

CROSBY LOCKWOOD & CO., 7, STATIONERS' HALL COURT, E.C.

LONDON, May, 1881.

A Catalogue of Books

INCLUDING MANY NEW AND STANDARD WORKS IN
**ENGINEERING, ARCHITECTURE, AGRICULTURE,
MATHEMATICS, MECHANICS, SCIENCE, ETC.**

PUBLISHED BY

CROSBY LOCKWOOD & CO.,
7, STATIONERS'-HALL COURT, LUDGATE HILL, E.C.

ENGINEERING, SURVEYING, ETC.

Humber's New Work on Water-Supply.

A COMPREHENSIVE TREATISE on the WATER-SUPPLY of CITIES and TOWNS. By WILLIAM HUMBER, A-M. Inst. C.E., and M. Inst. M.E. Illustrated with 50 Double Plates, 1 Single Plate, Coloured Frontispiece, and upwards of 250 Woodcuts, and containing 400 pages of Text, Imp. 4to, 6s. 6d. elegantly and substantially half-bound in morocco.

List of Contents:—

I. Historical Sketch of some of the means that have been adopted for the Supply of Water to Cities and Towns.—II. Water and the Foreign Matter usually associated with it.—III. Rainfall and Evaporation.—IV. Springs and the water-bearing formations of various districts.—V. Measurement and Estimation of the Flow of Water.—VI. On the Selection of the Source of Supply.—VII. Wells.—VIII. Reservoirs.—IX. The Purification of Water.—X. Pumps.—XI. Pumping Machinery.—XII. Conduits.—XIII. Distribution of Water.—XIV. Meters, Service Pipes, and House Fittings.—XV. The Law and Economy of Water Works.—XVI. Constant and Intermittent Supply.—XVII. Description of Plates.—Appendices, giving Tables of Rates of Supply, Velocities, &c. &c., together with Specifications of several Works illustrated, among which will be found:—Aberdeen, Bideford, Canterbury, Dundee, Halifax, Lambeth, Rotherham, Dublin, and others.

"The most systematic and valuable work upon water supply hitherto produced in English, or in any other language . . . Mr. Humber's work is characterised almost throughout by an exhaustiveness much more distinctive of French and German than of English technical treatises."—*Engineer*.

Humber's Great Work on Bridge Construction.

A COMPLETE and PRACTICAL TREATISE on CAST and WROUGHT-IRON BRIDGE CONSTRUCTION, including Iron Foundations. In Three Parts—Theoretical, Practical, and Descriptive. By WILLIAM HUMBER, A-M. Inst. C.E., and M. Inst. M.E. Third Edition, with 115 Double Plates. In 2 vols. imp. 4to, 6s. 16s. 6d. half-bound in morocco.

"A book—and particularly a large and costly treatise like Mr. Humber's—which has reached its third edition may certainly be said to have established its own reputation."—*Engineering*.

Humber's Modern Engineering.

A RECORD of the PROGRESS of MODERN ENGINEERING. First Series. Comprising Civil, Mechanical, Marine, Hydraulic, Railway, Bridge, and other Engineering Works, &c. By WILLIAM HUMBER, A.M. Inst. C.E., &c. Imp. 4to, with 36 Double Plates, drawn to a large scale, and Portrait of John Hawkshaw C.E., F.R.S., &c., and descriptive Letter-press, Specifications, &c. 3*l.* 3*s.* half morocco.

List of the Plates and Diagrams.

Victoria Station and Roof, L. B. & S. C. R. (8 plates); Southport Pier (2 plates); Victoria Station and Roof, L. C. & D. and G. W. R. (6 plates); Roof of Cremorne Music Hall; Bridge over G. N. Railway; Roof of Station, Dutch Rhenish Rail (2 plates); Bridge over the Thames, West London Extension Railway (5 plates); Armour Plates; Suspension Bridge, Thames (4 plates); The Allen Engine; Suspension Bridge, Avon (3 plates); Underground Railway (3 plates).

"Handsomely lithographed and printed. It will find favour with many who desire to preserve in a permanent form copies of the plans and specifications prepared for the guidance of the contractors for many important engineering works."—*Engineer*.

HUMBER'S RECORD OF MODERN ENGINEERING. Second Series. Imp. 4to, with 36 Double Plates, Portrait of Robert Stephenson, C.E., &c., and descriptive Letterpress, Specifications, &c. 3*l.* 3*s.* half morocco.

List of the Plates and Diagrams.

Birkenhead Docks, Low Water Basin (15 plates); Charing Cross Station Roof, C. C. Railway (3 plates); Digswell Viaduct, G. N. Railway; Robbery Wood Viaduct, G. N. Railway; Iron Permanent Way; Clydach Viaduct, Merthyr, Tredegar, and Abergavenny Railway; Ebbw Viaduct, Merthyr, Tredegar, and Abergavenny Railway (5 plates); College Wood Viaduct, Cornwall Railway; Dublin Winter Palace Roof (3 plates); Bridge over the Thames, L. C. and D. Railway (6 plates); Albert Harbour, Greenock (4 plates).

HUMBER'S RECORD OF MODERN ENGINEERING. Third Series. Imp. 4to, with 40 Double Plates, Portrait of J. R. M'Clean, Esq., late Pres. Inst. C.E., and descriptive Letterpress, Specifications, &c. 3*l.* 3*s.* half morocco.

List of the Plates and Diagrams.

MAIN DRAINAGE, METROPOLIS.—*North Side*.—Map showing Interception of Sewers; Middle Level Sewer (2 plates); Outfall Sewer, Bridge over River Lea (3 plates); Outfall Sewer, Bridge over Marsh Lane, North Woolwich Railway, and Bow and Barking Railway Junction; Outfall Sewer, Bridge over Bow and Barking Railway (3 plates); Outfall Sewer, Bridge over East London Waterworks' Feeder (2 plates); Outfall Sewer, Reservoir (2 plates); Outfall Sewer, Tumbling Bay and Outlet; Outfall Sewer, Penstocks. *South Side*.—Outfall Sewer, Bermondsey Branch (2 plates); Outfall Sewer, Reservoir and Outlet (4 plates); Outfall Sewer, Filth Hoist; Sections of Sewers (North and South Sides).

THAMES EMBANKMENT.—Section of River Wall; Steamboat Pier, Westminster (2 plates); Landing Stairs between Charing Cross and Waterloo Bridges; York Gate (2 plates); Overflow and Outlet at Savoy Street Sewer (3 plates); Steamboat Pier, Waterloo Bridge (3 plates); Junction of Sewers, Plans and Sections; Gullies, Plans and Sections; Rolling Stock; Granite and Iron Forts.

HUMBER'S RECORD OF MODERN ENGINEERING. Fourth Series. Imp. 4to, with 36 Double Plates, Portrait of John Fowler, Esq., late Pres. Inst. C.E., and descriptive Letterpress, Specifications, &c. 3*l.* 3*s.* half morocco.

List of the Plates and Diagrams.

Abbey Mills Pumping Station, Main Drainage, Metropolis (4 plates); Barrow Docks (5 plates); Manquis Viaduct, Santiago and Valparaiso Railway (2 plates); Adam's Locomotive, St. Helen's Canal Railway (2 plates); Cannon Street Station Roof, Charing Cross Railway (3 plates); Road Bridge over the River Moka (2 plates). Telegraphic Apparatus for Mesopotamia; Viaduct over the River Wye, Midland Railway (3 plates); St. German's Viaduct, Cornwall Railway (2 plates); Wrought-Iron Cylinder for Diving Bell; Millwall Docks (6 plates); Milroy's Patent Excavator, Metropolitan District Railway (6 plates); Harbours, Ports, and Breakwaters (3 plates).

Strains, Formulae & Diagrams for Calculation of.

A HANDY BOOK for the CALCULATION of STRAINS in GIRDERS and SIMILAR STRUCTURES, and their STRENGTH; consisting of Formulae and Corresponding Diagrams, with numerous Details for Practical Application, &c. By WILLIAM HUMBER, A.M. Inst. C.E., &c. Third Edition. With nearly 100 Woodcuts and 3 Plates, Crown 8vo, 7s. 6d. cloth.

"The arrangement of the matter in this little volume is as convenient as it well could be. . . . The system of employing diagrams as a substitute for complex computations is one justly coming into great favour, and in that respect Mr. Humber's volume is fully up to the times."—*Engineering*.

"The formulæ are neatly expressed, and the diagrams good."—*Athenæum*.

Strains.

THE STRAINS ON STRUCTURES OF IRONWORK; with Practical Remarks on Iron Construction. By F. W. SHEILDS, M. Inst. C.E. Second Edition, with 5 Plates. Royal 8vo, 5s. cloth.

"The student cannot find a better little book on this subject than that written by Mr. Shields."—*Engineer*.

Barlow on the Strength of Materials, enlarged.

A TREATISE ON THE STRENGTH OF MATERIALS, with Rules for application in Architecture, the Construction of Suspension Bridges, Railways, &c.; and an Appendix on the Power of Locomotive Engines, and the effect of Inclined Planes and Gradients. By PETER BARLOW, F.R.S. A New Edition, revised by his Sons, P. W. BARLOW, F.R.S., and W. H. BARLOW, F.R.S. The whole arranged and edited by W. HUMBER, A.M. Inst. C.E. 8vo, 400 pp., with 19 large Plates, 18s. cloth.

"The best book on the subject which has yet appeared. . . . We know of no work that so completely fulfils its mission."—*English Mechanic*.

"The standard treatise upon this particular subject."—*Engineer*.

Strength of Cast Iron, &c.

A PRACTICAL ESSAY on the STRENGTH of CAST IRON and OTHER METALS. By THOMAS TREDGOLD, C.E. Fifth Edition. To which are added, Experimental Researches on the Strength and other Properties of Cast Iron, by E. HODGKINSON, F.R.S. With 9 Engravings and numerous Woodcuts. 8vo, 12s. cloth. * * HODGKINSON'S RESEARCHES, separate, price 6s.

Hydraulics.

HYDRAULIC TABLES, CO-EFFICIENTS, and FORMULÆ for finding the Discharge of Water from Orifices, Notches, Weirs, Pipes, and Rivers. With New Formulæ, Tables, and General Information on Rain-fall, Catchment-Basins, Drainage, Sewerage, Water Supply for Towns and Mill Power. By JOHN NEVILLE, Civil Engineer, M.R.I.A. Third Edition, carefully revised, with considerable Additions. Numerous Illustrations. Cr. 8vo, 14s. cloth.

"Undoubtedly an exceedingly useful and elaborate compilation."—*Iron*.

"Alike valuable to students and engineers in practice."—*Mining Journal*.

River Engineering.

RIVER BARS: Notes on the Causes of their Formation, and on their Treatment by 'Induced Tidal Scour,' with a Description of the Successful Reduction by this Method of the Bar at Dublin. By I. J. MANN, Assistant Engineer to the Dublin Port and Docks Board. With Illustrations. Royal 8vo. 7s. 6d. cloth. [*Just published.*]

Levelling.

A TREATISE on the PRINCIPLES and PRACTICE of LEVELLING; showing its Application to Purposes of Railway and Civil Engineering, in the Construction of Roads; with Mr. TELFORD's Rules for the same. By FREDERICK W. SIMMS, F.G.S., M. Inst. C.E. Sixth Edition, very carefully revised, with the addition of Mr. LAW's Practical Examples for Setting out Railway Curves, and Mr. TRAUTWINE's Field Practice of Laying out Circular Curves. With 7 Plates and numerous Woodcuts. 8vo, 8s. 6d. cloth.

* * TRAUTWINE on Curves, separate, 5s.

"The text-book on levelling in most of our engineering schools and colleges."
Engineer.

Practical Tunnelling.

PRACTICAL TUNNELLING: Explaining in detail the Setting out of the Works, Shaft-sinking and Heading-Driving, Ranging the Lines and Levelling under Ground, Sub-Excavating, Timbering, and the Construction of the Brickwork of Tunnels with the amount of labour required for, and the Cost of, the various portions of the work. By F. W. SIMMS, M. Inst. C.E. Third Edition, Revised and Extended. By D. KINNEAR CLARK, M.I.C.E. Imp. 8vo, with 21 Folding Plates and numerous Wood Engravings, 30s. cloth.

"It has been regarded from the first as a text-book of the subject. . . . Mr. Clark has added immensely to the value of the book."*—Engineer.*

Steam.

STEAM AND THE STEAM ENGINE, Stationary and Portable. Being an Extension of Sewell's Treatise on Steam. By D. KINNEAR CLARK, M.I.C.E. Second Edition. 12mo, 4s. cloth.

Civil and Hydraulic Engineering.

CIVIL ENGINEERING. By HENRY LAW, M. Inst. C.E. Including a Treatise on Hydraulic Engineering, by GEORGE R. BURNELL, M.I.C.E. Sixth Edition, Revised, with large additions on Recent Practice in Civil Engineering, by D. KINNEAR CLARK, M. Inst. C.E. 12mo, 7s. 6d., cloth.

[*Just published.*]

Gas-Lighting.

COMMON SENSE FOR GAS-USERS: a Catechism of Gas-Lighting for Householders, Gasfitters, Millowners, Architects, Engineers, &c. By R. WILSON, C.E. 2nd Edition. Cr. 8vo, 2s. 6d.

Bridge Construction in Masonry, Timber, & Iron.

EXAMPLES OF BRIDGE AND VIADUCT CONSTRUCTION OF MASONRY, TIMBER, AND IRON; consisting of 46 Plates from the Contract Drawings or Admeasurement of select Works. By W. DAVIS HASKOLL, C.E. Second Edition, with the addition of 554 Estimates, and the Practice of Setting out Works, with 6 pages of Diagrams. Imp. 4to, 2l. 12s. 6d. half-morocco.

"A work of the present nature by a man of Mr. Haskoll's experience, must prove invaluable. The tables of estimates considerably enhance its value."*—Engineering.*

Earthwork.

EARTHWORK TABLES, showing the Contents in Cubic Yards of Embankments, Cuttings, &c., of Heights or Depths up to an average of 80 feet. By JOSEPH BROADBENT, C.E., and FRANCIS CAMPIN, C.E. Cr. 8vo, oblong, 5s. cloth.

Tramways and their Working.

TRAMWAYS: their CONSTRUCTION and WORKING. Containing a Comprehensive History of the System; an exhaustive Analysis of the Various Modes of Traction, including Horse Power, Steam, Heated Water, and Compressed Air; a Description of the varieties of Rolling Stock; and ample Details of Cost and Working Expenses, with Special Reference to the Tramways of the United Kingdom. By D. KINNEAR CLARK, M. I. C. E., Author of 'Railway Machinery,' &c., in one vol. 8vo, with numerous Illustrations and thirteen folding Plates, 18s. cloth.

"All interested in tramways must refer to it, as all railway engineers have turned to the author's work 'Railway Machinery.'"—*The Engineer*.

"Mr. Clark's book is indispensable for the students of the subject."—*The Builder*.

Pioneer Engineering.

PIONEER ENGINEERING. A Treatise on the Engineering Operations connected with the Settlement of Waste Lands in New Countries. By EDWARD DOBSON, A.I.C.E. With Plates and Wood Engravings. Revised Edition. 12mo, 5s. cloth.

"A workmanlike production, and one without possession of which no man should start to encounter the duties of a pioneer engineer."—*Athenæum*.

Steam Engine.

TEXT-BOOK ON THE STEAM ENGINE. By T. M. GOODEVE, M.A., Barrister-at-Law, Author of "The Principles of Mechanics," "The Elements of Mechanism," &c. Third Edition. With numerous Illustrations. Crown 8vo, 6s. cloth.

"Professor Goodeve has given us a treatise on the steam engine, which will bear comparison with anything written by Huxley or Maxwell, and we can award it no higher praise."—*Engineer*.

"Mr. Goodeve's text-book is a work of which every young engineer should possess himself."—*Mining Journal*.

Steam.

THE SAFE USE OF STEAM: containing Rules for Unprofessional Steam Users. By an ENGINEER. 4th Edition. Sewed, 6d.

"If steam-users would but learn this little book by heart, boiler explosions would become sensations by their rarity."—*English Mechanic*.

Mechanical Engineering.

MECHANICAL ENGINEERING: a Practical Treatise on. Comprising Metallurgy, Moulding, Casting, Forging, Tools, Workshop Machinery, Mechanical Manipulation, Manufacture of the Steam Engine, &c. By FRANCIS CAMPIN, C.E., Author of "Materials and Construction," &c. With Numerous Illustrations. 12mo, 3s. cloth boards. [Just published,

Works of Construction.

MATERIALS AND CONSTRUCTION: a Theoretical and Practical Treatise on the Strains, Designing, and Erection of Works of Construction. By FRANCIS CAMPIN, C.E., Author of "A Practical Treatise on Mechanical Engineering, &c." 12mo, 3s. 6d. cloth boards.

Iron Bridges, Girders, Roofs, &c.

A TREATISE ON THE APPLICATION OF IRON TO THE CONSTRUCTION OF BRIDGES, GIRDERS, ROOFS, AND OTHER WORKS. By F. CAMPIN, C.E. 12mo, 3s.

Oblique Arches.

A PRACTICAL TREATISE ON THE CONSTRUCTION OF OBLIQUE ARCHES. By JOHN HART. 3rd Ed. Imp. 8vo, 8s. cloth.

Oblique Bridges.

A PRACTICAL and THEORETICAL ESSAY on OBLIQUE BRIDGES, with 13 large Plates. By the late GEO. WATSON BUCK, M.I.C.E. Third Edition, revised by his Son, J. H. WATSON BUCK, M.I.C.E.; and with the addition of Description to Diagrams for Facilitating the Construction of Oblique Bridges, by W. H. BARLOW, M.I.C.E. Royal 8vo, 12s. cloth.

"The standard text book for all engineers regarding skew arches is Mr. Buck's treatise and it would be impossible to consult a better."—*Engineer*.

Gas and Gasworks.

THE CONSTRUCTION OF GASWORKS AND THE MANUFACTURE AND DISTRIBUTION OF COAL-GAS. Originally written by SAMUEL HUGHES, C.E. Sixth Edition. Re-written and much Enlarged, by WILLIAM RICHARDS, C.E. With 72 Woodcuts. 12mo, 5s. cloth boards.

Waterworks for Cities and Towns.

WATERWORKS for the SUPPLY of CITIES and TOWNS, with a Description of the Principal Geological Formations of England as influencing Supplies of Water. By S. HUGHES. 4s. 6d. cloth.

Locomotive-Engine Driving.

LOCOMOTIVE-ENGINE DRIVING; a Practical Manual for Engineers in charge of Locomotive Engines. By MICHAEL REYNOLDS, M.S.E., formerly Locomotive Inspector L. B. and S. C. R. Fourth Edition, greatly enlarged. Comprising A KEY TO THE LOCOMOTIVE ENGINE. With Illustrations and Portrait of Author. Crown 8vo, 4s. 6d. cloth.

"Mr. Reynolds has supplied a want, and has supplied it well. We can confidently recommend the book not only to the practical driver, but to every one who takes an interest in the performance of locomotive engines."—*Engineer*.

The Engineer, Fireman, and Engine-Boy.

THE MODEL LOCOMOTIVE ENGINEER, FIREMAN, AND ENGINE-BOY: comprising a Historical Notice of the Pioneer Locomotive Engines and their Inventors, with a project for the establishment of Certificates of Qualification in the Running Service of Railways. By MICHAEL REYNOLDS, Author of "Locomotive-Engine Driving." Crown 8vo, 4s. 6d. cloth.

"From the technical knowledge of the author it will appeal to the railway man of o-day more forcibly than anything written by Dr. Smiles."—*English Mechanic*.

Stationary Engine Driving.

STATIONARY ENGINE DRIVING. A Practical Manual for Engineers in Charge of Stationary Engines. By MICHAEL REYNOLDS ("The Engine-Driver's Friend"), Author of "Locomotive-Engine Driving," &c. With Plates and Woodcuts, and Steel Portrait of James Watt. Crown 8vo, 4s. 6d. cloth.

Engine-Driving Life.

ENGINE-DRIVING LIFE; or Stirring Adventures and Incidents in the Lives of Locomotive Engine-Drivers. By MICHAEL REYNOLDS. Crown 8vo, 2s. cloth. *[Just published.]*

Construction of Iron Beams, Pillars, &c.

IRON AND HEAT ; exhibiting the Principles concerned in the construction of Iron Beams, Pillars, and Bridge Girders, and the Action of Heat in the Smelting Furnace. By J. ARMOUR, C.E. 3s.

Fire Engineering.

FIRES, FIRE-ENGINES, AND FIRE BRIGADES. With a History of Fire-Engines, their Construction, Use, and Management ; Remarks on Fire-Proof Buildings, and the Preservation of Life from Fire ; Statistics of the Fire Appliances in English Towns ; Foreign Fire Systems ; Hints on Fire Brigades, &c., &c. By CHARLES F. T. YOUNG, C.E. With numerous Illustrations, handsomely printed, 544 pp., demy 8vo, 1l. 4s. cloth.

"We can most heartily commend this book."—*Engineering*.

"Mr. Young's book on 'Fire Engines and Fire Brigades' contains a mass of information, which has been collected from a variety of sources. The subject is so intensely interesting and useful that it demands consideration."—*Building News*.

Trigonometrical Surveying.

AN OUTLINE OF THE METHOD OF CONDUCTING A TRIGONOMETRICAL SURVEY, for the Formation of Geographical and Topographical Maps and Plans, Military Reconnaissance, Levelling, &c., with the most useful Problems in Geodesy and Practical Astronomy. By LIEUT.-GEN. FROME, R.E., late Inspector-General of Fortifications. Fourth Edition, Enlarged, and partly Re-written. By CAPTAIN CHARLES WARREN, R.E. With 19 Plates and 115 Woodcuts, royal 8vo, 16s. cloth.

Tables of Curves.

TABLES OF TANGENTIAL ANGLES AND MULTIPLES for setting out Curves from 5 to 200 Radius. By ALEXANDER BRAZELEY, M. Inst. C.E. Second Edition. Printed on 48 Cards, and sold in a cloth box, waistcoat-pocket size, 3s. 6d.

"Each table is printed on a small card, which, being placed on the theodolite, leaves the hands free to manipulate the instrument."—*Engineer*.

"Very handy ; a man may know that all his day's work must fall on two of these cards, which he puts into his own card-case, and leaves the rest behind."—

[*Athenæum*].

Engineering Fieldwork.

THE PRACTICE OF ENGINEERING FIELDWORK, applied to Land and Hydraulic, Hydrographic, and Submarine Surveying and Levelling. Second Edition, revised, with considerable additions, and a Supplement on WATERWORKS, SEWERS, SEWAGE, and IRRIGATION. By W. DAVIS HASKOLL, C.E. Numerous folding Plates. In 1 Vol., demy 8vo, 1l. 5s., cl. boards.

Large Tunnel Shafts.

THE CONSTRUCTION OF LARGE TUNNEL SHAFTS. A Practical and Theoretical Essay. By J. H. WATSON BUCK, M. Inst. C.E., Resident Engineer, London and North-Western Railway. Illustrated with Folding Plates. Royal 8vo, 12s. cloth.

"Many of the methods given are of extreme practical value to the mason, and the observations on the form of arch, the rules for ordering the stone, and the construction of the templates, will be found of considerable use. We commend the book to the engineering profession, and to all who have to build similar shafts."—*Building News*.

"Will be regarded by civil engineers as of the utmost value, and calculated to save much time and obviate many mistakes."—*Colliery Guardian*.

Survey Practice.

AID TO SURVEY PRACTICE: for Reference in Surveying, Levelling, Setting-out and in Route Surveys of Travellers by Land and Sea. With Tables, Illustrations, and Records. By LOWIS D'A. JACKSON, A-M.I.C.E. Author of "Hydraulic Manual and Statistics," &c. Large crown, 8vo, 12s. 6d., cloth.

"Mr. Jackson has produced a valuable *vade-mecum* for the surveyor. We can recommend this book as containing an admirable supplement to the teaching of the accomplished surveyor."—*Athenæum*.

"A general text book was wanted, and we are able to speak with confidence of Mr. Jackson's treatise. . . . We cannot recommend to the student who knows something of the mathematical principles of the subject a better course than to fortify his practice in the field under a competent surveyor with a study of Mr. Jackson's useful manual. The field records illustrate every kind of survey, and will be found an essential aid to the student."—*Building News*.

"The author brings to his work a fortunate union of theory and practical experience which, aided by a clear and lucid style of writing, renders the book both a very useful one and very agreeable to read."—*Builder*.

Sanitary Work.

SANITARY WORK IN THE SMALLER TOWNS AND IN VILLAGES. Comprising:—1. Some of the more Common Forms of Nuisance and their Remedies; 2. Drainage; 3. Water Supply. By CHAS. SLAGG, Assoc. Inst. C.E. Crown 8vo, 3s. cloth.

"A very useful book, and may be safely recommended. The author has had practical experience in the works of which he treats."—*Builder*.

Locomotives.

LOCOMOTIVE ENGINES, A Rudimentary Treatise on. Comprising an Historical Sketch and Description of the Locomotive Engine. By G. D. DEMPSEY, C.E. With large additions treating of the MODERN LOCOMOTIVE, by D. KINNEAR CLARK, C.E., M.I.C.E., Author of "Tramways, their Construction and Working," &c., &c. With numerous Illustrations. 12mo. 3s. 6d. cloth boards.

"The student cannot fail to profit largely by adopting this as his preliminary text-book."—*Iron and Coal Trades Review*.

"Seems a model of what an elementary technical book should be."—*Academy*.

Fuels and their Economy.

FUEL, its Combustion and Economy; consisting of an Abridgment of "A Treatise on the Combustion of Coal and the Prevention of Smoke." By C. W. WILLIAMS, A.I.C.E. With extensive additions on Recent Practice in the Combustion and Economy of Fuel—Coal, Coke, Wood, Peat, Petroleum, &c.; by D. KINNEAR CLARK, C.E., M.I.C.E. Second Edition, revised. With numerous Illustrations. 12mo. 4s. cloth boards.

"Students should buy the book and read it, as one of the most complete and satisfactory treatises on the combustion and economy of fuel to be had."—*Engineer*.

Roads and Streets.

THE CONSTRUCTION OF ROADS AND STREETS. In Two Parts. I. The Art of Constructing Common Roads. By HENRY LAW, C.E. Revised and Condensed. II. Recent Practice in the Construction of Roads and Streets: including Pavements of Stone, Wood, and Asphalt. By D. KINNEAR CLARK, C.E., M.I.C.E. Second Edit., revised. 12mo, 5s. cloth.

"A book which every borough surveyor and engineer must possess, and which will be of considerable service to architects, builders, and property owners generally."—*Building News*.

Sewing Machine (The).

SEWING MACHINERY; being a Practical Manual of the Sewing Machine, comprising its History and Details of its Construction, with full Technical Directions for the Adjusting of Sewing Machines. By J. W. URQUHART, Author of "Electro Plating: a Practical Manual;" "Electric Light: its Production and Use." With Numerous Illustrations. 12mo, 2s. 6d. cloth boards.

Field-Book for Engineers.

THE ENGINEER'S, MINING SURVEYOR'S, and CONTRACTOR'S FIELD-BOOK. By W. DAVIS HASKOLL, C.E. Consisting of a Series of Tables, with Rules, Explanations of Systems, and Use of Theodolite for Traverse Surveying and Plotting the Work with minute accuracy by means of Straight Edge and Set Square only; Levelling with the Theodolite, Casting out and Reducing Levels to Datum, and Plotting Sections in the ordinary manner; Setting out Curves with the Theodolite by Tangential Angles and Multiples with Right and Left-hand Readings of the Instrument; Setting out Curves without Theodolite on the System of Tangential Angles by Sets of Tangents and Offsets; and Earthwork Tables to 80 feet deep, calculated for every 6 inches in depth. With numerous Woodcuts. 4th Edition, enlarged. Cr. 8vo. 12s. cloth.

"The book is very handy, and the author might have added that the separate tables of sines and tangents to every minute will make it useful for many other purposes, the genuine traverse tables existing all the same."—*Athenæum*.

"Cannot fail, from its portability and utility, to be extensively patronised by the engineering profession."—*Mining Journal*.

Earthwork, Measurement and Calculation of.

A MANUAL on EARTHWORK. By ALEX. J. S. GRAHAM, C.E., Resident Engineer, Forest of Dean Central Railway. With numerous Diagrams. 18mo, 2s. 6d. cloth.

"As a really handy book for reference, we know of no work equal to it; and the railway engineers and others employed in the measurement and calculation of earthwork will find a great amount of practical information very admirably arranged, and available for general or rough estimates, as well as for the more exact calculations required in the engineers' contractor's offices."—*Artisan*.

Drawing for Engineers, &c.

THE WORKMAN'S MANUAL OF ENGINEERING DRAWING. By JOHN MAXTON, Instructor in Engineering Drawing, Royal Naval College, Greenwich, formerly of R. S. N. A., South Kensington. Fourth Edition, carefully revised. With upwards of 300 Plates and Diagrams. 12mo, cloth, strongly bound, 4s.

"A copy of it should be kept for reference in every drawing office."—*Engineering*.

"Indispensable for teachers of engineering drawing."—*Mechanics' Magazine*.

Weale's Dictionary of Terms.

A DICTIONARY of TERMS used in ARCHITECTURE, BUILDING, ENGINEERING, MINING, METALLURGY, ARCHÆOLOGY, the FINE ARTS, &c. By JOHN WEALE. Fifth Edition, revised by ROBERT HUNT, F.R.S., Keeper of Mining Records, Editor of "Ure's Dictionary of Arts." 12mo, 6s. cl. bds.

"The best small technological dictionary in the language."—*Architect*.

"The absolute accuracy of a work of this character can only be judged of after extensive consultation, and from our examination it appears very correct and very complete."—*Mining Journal*.

MINING, METALLURGY, ETC.

Metalliferous Minerals and Mining.

A TREATISE ON METALLIFEROUS MINERALS AND MINING. By D. C. DAVIES, F.G.S., author of "A Treatise on Slate and Slate Quarrying." With numerous wood engravings. Second Edition, revised. Cr. 8vo. 12s. 6d. cloth.

"Without question, the most exhaustive and the most practically useful work we have seen; the amount of information given is enormous, and it is given concisely and intelligibly."—*Mining Journal*.

"The volume is one which no student of mineralogy should be without."—*Colliery Guardian*.

"The author has gathered together from all available sources a vast amount of really useful information. As a history of the present state of mining throughout the world this book has a real value, and it supplies an actual want, for no such information has hitherto been brought together within such limited space."—*Athenæum*.

Slate and Slate Quarrying.

A TREATISE ON SLATE AND SLATE QUARRYING, Scientific, Practical, and Commercial. By D. C. DAVIES, F.G.S., Mining Engineer, &c. With numerous Illustrations and Folding Plates. Second Edition, carefully revised. 12mo, 3s. 6d. cloth boards.

"Mr. Davies has written a useful and practical hand-book on an important industry, with all the conditions and details of which he appears familiar."—*Engineering*.

"The work is illustrated by actual practice, and is unusually thorough and lucid.

... Mr. Davies has completed his work with industry and skill."—*Builder*.

Metallurgy of Iron.

A TREATISE ON THE METALLURGY OF IRON: containing Outlines of the History of Iron Manufacture, Methods of Assay, and Analyses of Iron Ores, Processes of Manufacture of Iron and Steel, &c. By H. BAUERMAN, F.G.S., Associate of the Royal School of Mines. With numerous Illustrations. Fourth Edition, revised and much enlarged. 12mo, cloth boards, 5s.

"Has the merit of brevity and conciseness, as to less important points, while all material matters are very fully and thoroughly entered into."—*Standard*.

Manual of Mining Tools.

MINING TOOLS. For the use of Mine Managers, Agent Mining Students, &c. By WILLIAM MORGANS, Lecturer on Practical Mining at the Bristol School of Mines. Volume of Text. 12mo, 3s. With an Atlas of Plates, containing 235 Illustrations. 4to, 6s. Together, 9s. cloth boards.

"Students in the Science of Mining, and Overmen, Captains, Managers, and Viewers may gain practical knowledge and useful hints by the study of Mr Morgans' Manual."—*Colliery Guardian*.

Mining, Surveying and Valuing.

THE MINERAL SURVEYOR AND VALUER'S COMPLETE GUIDE, comprising a Treatise on Improved Mining Surveying, with new Traverse Tables; and Descriptions of Improved Instruments; also an Exposition of the Correct Principle of Laying out and Valuing Home and Foreign Iron and Coal Mineral Properties. By WILLIAM LINTERN, Mining and Civil Engineer. With four Plates of Diagrams, Plans, &c., 12mo, 4s. cloth.

"Contains much valuable information given in a small compass, and which, as far as we have tested it, is thoroughly trustworthy."—*Iron and Coal Trades Review*.

. The above, bound with THOMAN'S TABLES. (See page 20.) Price 7s. 6d. cloth.

Coal and Coal Mining.

COAL AND COAL MINING: a Rudimentary Treatise on. By WARINGTON W. SMYTH, M.A., F.R.S., &c., Chief Inspector of the Mines of the Crown. Fifth edition, revised and corrected. 12mo, with numerous Illustrations, 4s. cloth boards.

"Every portion of the volume appears to have been prepared with much care, and as an outline is given of every known coal-field in this and other countries, as well as of the two principal methods of working, the book will doubtless interest a very large number of readers."—*Mining Journal*.

Underground Pumping Machinery.

MINE DRAINAGE; being a Complete and Practical Treatise on Direct-Acting Underground Steam Pumping Machinery, with a Description of a large number of the best known Engines, their General Utility and the Special Sphere of their Action, the Mode of their Application, and their merits compared with other forms of Pumping Machinery. By STEPHEN MICHELL, Joint-Author of "The Cornish System of Mine Drainage." 8vo, 15s. cloth. [*Just published.*]

NAVAL ARCHITECTURE, NAVIGATION, ETC.

Pocket Book for Naval Architects & Shipbuilders.

THE NAVAL ARCHITECT'S AND SHIPBUILDER'S POCKET BOOK OF FORMULÆ, RULES, AND TABLES AND MARINE ENGINEER'S AND SURVEYOR'S HANDY BOOK OF REFERENCE. By CLEMENT MACKROW, M. Inst. N. A., Naval Draughtsman. With numerous Diagrams. Fcap., 12s. 6d., strongly bound in leather.

"Should be used by all who are engaged in the construction or design of vessels."—*Engineer*.

"There is scarcely a subject on which a naval architect or shipbuilder can require to refresh his memory which will not be found within the covers of Mr. Mackrow's book."—*English Mechanic*.

"Mr. Mackrow has compressed an extraordinary amount of information into this useful volume."—*Athenæum*.

Grantham's Iron Ship-Building.

ON IRON SHIP-BUILDING; with Practical Examples and Details. Fifth Edition. Imp. 4to, boards, enlarged from 24 to 40 Plates (21 quite new), including the latest Examples. Together with separate Text, also considerably enlarged, 12mo, cloth limp. By JOHN GRANTHAM, M. Inst. C.E., &c. 2l. 2s. complete.

"Mr. Grantham's work is of great interest. It will, we are confident, command an extensive circulation among shipbuilders in general. By order of the Board of Admiralty, the work will form the text-book on which the examination in iron ship-building of candidates for promotion in the dockyards will be mainly based."—*Engineering*.

Pocket-Book for Marine Engineers.

A POCKET-BOOK OF USEFUL TABLES AND FORMULÆ FOR MARINE ENGINEERS. By FRANK PROCTOR, A.I.N.A. Second Edition, revised and enlarged. Royal 32mo, leather, gilt edges, with strap, 4s.

"A most useful companion to all marine engineers."—*United Service Gazette*.

"Scarcely anything required by a naval engineer appears to have been forgotten."—*Iron*.

Light-Houses.

EUROPEAN LIGHT-HOUSE SYSTEMS; being a Report of a Tour of Inspection made in 1873. By Major GEORGE H. ELLIOT, Corps of Engineers, U.S.A. Illustrated by 51 Engravings and 31 Woodcuts in the Text. 8vo, 21s. cloth.

Surveying (Land and Marine).

LAND AND MARINE SURVEYING, in Reference to the Preparation of Plans for Roads and Railways, Canals, Rivers, Towns' Water Supplies, Docks and Harbours; with Description and Use of Surveying Instruments. By W. DAVIS HASKOLL, C.E. With 14 folding Plates, and numerous Woodcuts. 8vo, 12s. 6d. cloth.

"A most useful and well arranged book for the aid of a student."—*Builder*.

"Of the utmost practical utility, and may be safely recommended to all students who aspire to become clean and expert surveyors."—*Mining Journal*.

Storms.

STORMS: their Nature, Classification, and Laws, with the Means of Predicting them by their Embodiments, the Clouds. By WILLIAM BLASIUS. Crown 8vo, 10s. 6d. cloth boards.

Rudimentary Navigation.

THE SAILOR'S SEA-BOOK: a Rudimentary Treatise on Navigation. By JAMES GREENWOOD, B.A. New and enlarged edition. By W. H. ROSSER. 12mo, 3s. cloth boards.

Mathematical and Nautical Tables.

MATHEMATICAL TABLES, for Trigonometrical, Astronomical, and Nautical Calculations; to which is prefixed a Treatise on Logarithms. By HENRY LAW, C.E. Together with a Series of Tables for Navigation and Nautical Astronomy. By J. R. YOUNG, formerly Professor of Mathematics in Belfast College. New Edition. 12mo, 4s. cloth boards.

Navigation (Practical), with Tables.

PRACTICAL NAVIGATION: consisting of the Sailor's Sea-Book, by JAMES GREENWOOD and W. H. ROSSER; together with the requisite Mathematical and Nautical Tables for the Working of the Problems. By HENRY LAW, C.E., and Professor J. R. YOUNG. Illustrated with numerous Wood Engravings and Coloured Plates. 12mo, 7s. strongly half bound in leather.

WEALE'S RUDIMENTARY SERIES.

The following books in Naval Architecture, etc., are published in the above series.

MASTING, MAST-MAKING, AND RIGGING OF SHIPS. By

ROBERT KIPPING, N.A. Fourteenth Edition. 12mo, 2s. 6d. cloth.

SAILS AND SAIL-MAKING. Tenth Edition, enlarged. By ROBERT

KIPPING, N.A. Illustrated. 12mo, 3s. cloth boards.

NAVAL ARCHITECTURE. By JAMES PEAKE. Fourth Edition,

with Plates and Diagrams. 12mo, 4s. cloth boards.

MARINE ENGINES, AND STEAM VESSELS. By ROBERT

MURRAY, C.E. Seventh Edition. 12mo, 3s. 6d. cloth boards.

ARCHITECTURE, BUILDING, ETC.

Construction.

THE SCIENCE of BUILDING: An Elementary Treatise on the Principles of Construction. By E. WYNDHAM TARN, M.A., Architect. With 47 Wood Engravings. Demy 8vo, 8s. 6d. cloth.

"A very valuable book, which we strongly recommend to all students."—*Builder*.
 "No architectural student should be without this hand-book."—*Architect*.

Villa Architecture.

A HANDY BOOK of VILLA ARCHITECTURE; being a Series of Designs for Villa Residences in various Styles. With Detailed Specifications and Estimates. By C. WICKES, Architect, Author of "The Spires and Towers of the Mediæval Churches of England," &c. 31 Plates, 4to, half morocco, gilt edges, 1l. 1s.

* Also an Enlarged edition of the above. 61 Plates, with Detailed Specifications, Estimates, &c. 2l. 2s. half morocco.

"The whole of the designs bear evidence of their being the work of an artistic architect, and they will prove very valuable and suggestive."—*Building News*.

Useful Text-Book for Architects.

THE ARCHITECT'S GUIDE: Being a Text-book of Useful Information for Architects, Engineers, Surveyors, Contractors, Clerks of Works, &c. By FREDERICK ROGERS. Author of "Specifications for Practical Architecture," &c. Cr. 8vo, 6s. cloth.

"As a text-book of useful information for architects, engineers, surveyors, &c., it would be hard to find a handier or more complete little volume."—*Standard*.

Taylor and Cresy's Rome.

THE ARCHITECTURAL ANTIQUITIES OF ROME. By the late G. L. TAYLOR, Esq., F.S.A., and EDWARD CRESY, Esq. New Edition, thoroughly revised, and supplemented under the editorial care of the Rev. ALEXANDER TAYLOR, M.A. (son of the late G. L. Taylor, Esq.), Chaplain of Gray's Inn. This is the only book which gives on a large scale, and with the precision of architectural measurement, the principal Monuments of Ancient Rome in plan, elevation, and detail. Large folio, with 130 Plates, half-bound, 3l. 3s.

** Originally published in two volumes, folio, at 18l. 18s.

Vitruvius' Architecture.

THE ARCHITECTURE OF MARCUS VITRUVIUS POLLIO. Translated by JOSEPH GWILT, F.S.A., F.R.A.S. Numerous Plates. 12mo, cloth limp, 5s.

The Young Architect's Book.

HINTS TO YOUNG ARCHITECTS. By GEORGE WIGHTWICK, Architect. New Edition, revised and enlarged. By G. HUSKISSON GUILLAUME, Architect. 12mo, cloth boards, 4s.

"Will be found an acquisition to pupils, and a copy ought to be considered as necessary a purchase as a box of instruments."—*Architect*.

"A large amount of information, which young architects will do well to acquire, if they wish to succeed in the everyday work of their profession."—*English Mechanic*.

Drawing for Builders and Students.

PRACTICAL RULES ON DRAWING for the OPERATIVE BUILDER and YOUNG STUDENT in ARCHITECTURE. By GEORGE PYNE. With 14 Plates, 4to, 7s. 6d. boards.

The House-Owner's Estimator.

THE HOUSE-OWNER'S ESTIMATOR; or, What will it Cost to Build, Alter, or Repair? A Price-Book adapted to the Use of Unprofessional People as well as for the Architectural Surveyor and Builder. By the late JAMES D. SIMON, A.R.I.B.A. Edited and Revised by FRANCIS T. W. MILLER, A.R.I.B.A., Surveyor. Third Edition, carefully Revised. Crown 8vo, 3s. 6d., cloth.

[Just published.

"In two years it will repay its cost a hundred times over."—*Field*.
 "A very handy book for those who want to know what a house will cost to build, alter, or repair."—*English Mechanic*.

Boiler and Factory Chimneys.

BOILER AND FACTORY CHIMNEYS; their Draught-power and Stability, with a chapter on Lightning Conductors. By ROBERT WILSON, C.E., Author of "Treatise on Steam Boilers," &c., &c. Crown 8vo, 3s. 6d. cloth.

Civil and Ecclesiastical Building.

A BOOK ON BUILDING, CIVIL AND ECCLESIASTICAL, Including CHURCH RESTORATION. By Sir EDMUND BECKETT, Bart., LL.D., Q.C., F.R.A.S., Chancellor and Vicar-General of York. Author of "Clocks and Watches and Bells," &c. Second Edition, 12mo, 5s. cloth boards.

"A book which is always amusing and nearly always instructive. Sir E. Beckett will be read for the raciness of his style. We are able very cordially to recommend all persons to read it for themselves. The style throughout is in the highest degree condensed and epigrammatic."—*Times*.

"We commend the book to the thoughtful consideration of all who are interested in the building art."—*Builder*.

Architecture, Ancient and Modern.

RUDIMENTARY ARCHITECTURE, Ancient and Modern. Consisting of VITRUVIUS, translated by JOSEPH GWILT, F.S.A., &c., with 23 fine copper plates; GRECIAN ARCHITECTURE, by the EARL of ABERDEEN; the ORDERS of ARCHITECTURE, by W. H. LEEDS, Esq.; The STYLES of ARCHITECTURE of Various Countries, by T. TALBOT BURY; The PRINCIPLES of DESIGN in ARCHITECTURE, by E. L. GARBETT. In one volume, half-bound (pp. 1,100), copiously illustrated, 12s.

* * Sold separately, in two vols., as follows—

ANCIENT ARCHITECTURE. Containing Gwilt's Vitruvius and Aberdeen's Grecian Architecture. Price 6s. half-bound.

N.B.—This is the only edition of VITRUVIUS procurable at a moderate price.

MODERN ARCHITECTURE. Containing the Orders, by Leeds; The Styles, by Bury; and Design, by Garbett. 6s. half-bound.

House Painting.

HOUSE PAINTING, GRAINING, MARBLING, AND SIGN WRITING: a Practical Manual of. With 9 Coloured Plates of Woods and Marbles, and nearly 150 Wood Engravings. By ELLIS A. DAVIDSON, Author of "Building Construction," &c. Third Edition, carefully revised. 12mo, 6s. cloth boards.

"Contains a mass of information of use to the amateur and of value to the practical man."—*English Mechanic*.

Plumbing.

PLUMBING ; a Text-book to the Practice of the Art or Craft of the Plumber. With chapters upon House-drainage, embodying the latest Improvements. By W. P. BUCHAN, Sanitary Engineer. Second Edition, enlarged, with 300 illustrations, 12mo. 4s. cloth.

"The chapters on house-drainage may be usefully consulted, not only by plumbers, but also by engineers and all engaged or interested in house-building."—*Iron.*

Handbook of Specifications.

THE HANDBOOK OF SPECIFICATIONS ; or, Practical Guide to the Architect, Engineer, Surveyor, and Builder, in drawing up Specifications and Contracts for Works and Constructions. Illustrated by Precedents of Buildings actually executed by eminent Architects and Engineers. By Professor THOMAS L. DONALDSON, M.I.B.A. New Edition, in One large volume, 8vo, with upwards of 1000 pages of text, and 33 Plates, cloth, 11. 11s. 6d.

"In this work forty-four specifications of executed works are given. . . . Donaldson's Handbook of Specifications must be bought by all architects."—*Builder.*

Specifications for Practical Architecture.

SPECIFICATIONS FOR PRACTICAL ARCHITECTURE : A Guide to the Architect, Engineer, Surveyor, and Builder ; with an Essay on the Structure and Science of Modern Buildings. By FREDERICK ROGERS, Architect. 8vo, 15s. cloth.

*. A volume of specifications of a practical character being greatly required, and the old standard work of Alfred Bartholomew being out of print, the author, on the basis of that work, has produced the above.—*Extract from Preface.*

Designing, Measuring, and Valuing.

THE STUDENT'S GUIDE to the PRACTICE of MEASURING and VALUING ARTIFICERS' WORKS ; containing Directions for taking Dimensions, Abstracting the same, and bringing the Quantities into Bill, with Tables of Constants, and copious Memoranda for the Valuation of Labour and Materials in the respective Trades of Bricklayer and Slater, Carpenter and Joiner, Painter and Glazier, Paperhanger, &c. With 43 Plates and Woodcuts. Originally edited by EDWARD DOBSON, Architect. New Edition, re-written, with Additions on Mensuration and Construction, and useful Tables for facilitating Calculations and Measurements. By E. WYNDHAM TARN, M.A., 8vo, 10s. 6d. cloth.

"Well fulfils the promise of its title-page. Mr. Tarn's additions and revisions have much increased the usefulness of the work."—*Engineering.*

Beaton's Pocket Estimator.

THE POCKET ESTIMATOR FOR THE BUILDING TRADES, being an easy method of estimating the various parts of a Building collectively, more especially applied to Carpenters' and Joiners' work, priced according to the present value of material and labour. By A. C. BEATON, Author of "Quantities and Measurements." Second Edition. Waistcoat-pocket size, 1s. 6d.

Beaton's Builders' and Surveyors' Technical Guide.

THE POCKET TECHNICAL GUIDE AND MEASURER FOR BUILDERS AND SURVEYORS : containing a Complete Explanation of the Terms used in Building Construction, Memoranda for Reference, Technical Directions for Measuring Work in all the Building Trades, &c. By A. C. BEATON. 1s. 6d.

Builder's and Contractor's Price Book.

LOCKWOOD & CO.'S BUILDER'S AND CONTRACTOR'S PRICE BOOK, containing the latest prices of all kinds of Builders' Materials and Labour, and of all Trades connected with Building, &c., &c. The whole revised and edited by F. T. W. MILLEK, A.R.I.B.A. Fcap. half-bound, 4s.

CARPENTRY, TIMBER, ETC.

Tredgold's Carpentry, new and cheaper Edition.

THE ELEMENTARY PRINCIPLES OF CARPENTRY : a Treatise on the Pressure and Equilibrium of Timber Framing, the Resistance of Timber, and the Construction of Floors, Arches, Bridges, Roofs, Uniting Iron and Stone with Timber, &c. To which is added an Essay on the Nature and Properties of Timber, &c., with Descriptions of the Kinds of Wood used in Building ; also numerous Tables of the Scantlings of Timber for different purposes, the Specific Gravities of Materials, &c. By THOMAS TREDGOLD, C.E. Edited by PETER BARLOW, F.R.S. Fifth Edition, corrected and enlarged. With 64 Plates (11 of which now first appear in this edition), Portrait of the Author, and several Woodcuts. In 1 vol., 4to, published at 2l. 2s., reduced to 1l. 5s. cloth.

"Ought to be in every architect's and every builder's library, and those who do not already possess it ought to avail themselves of the new issue."—*Builder*.

"A work whose monumental excellence must commend it wherever skilful carpentry is concerned. The Author's principles are rather confirmed than impaired by time. The additional plates are of great intrinsic value."—*Building News*.

Grandy's Timber Tables.

THE TIMBER IMPORTER'S, TIMBER MERCHANT'S, and BUILDER'S STANDARD GUIDE. By RICHARD E. GRANDY. Comprising :—An Analysis of Deal Standards, Home and Foreign, with comparative Values and Tabular Arrangements for Fixing Nett Landed Cost on Baltic and North American Deals, including all intermediate Expenses, Freight, Insurance, &c., &c. ; together with Copious Information for the Retailer and Builder. 2nd Edition. Carefully revised and corrected. 12mo, 3s. 6d. cloth.

"Everything it pretends to be : built up gradually, it leads one from a forest to a treenail, and throws in, as a makeweight, a host of material concerning bricks, columns, cisterns, &c.—all that the class to whom it appeals requires."—*English Mechanic*.

Timber Freight Book.

THE TIMBER IMPORTERS' AND SHIPOWNERS' FREIGHT BOOK : Being a Comprehensive Series of Tables for the Use of Timber Importers, Captains of Ships, Shipbrokers, Builders, and all Dealers in Wood whatsoever. By WILLIAM RICHARDSON, Timber Broker. Crown 8vo, 6s. cloth.

Tables for Packing-Case Makers.

PACKING-CASE TABLES ; showing the number of Superficial Feet in Boxes or Packing-Cases, from six inches square and upwards. By W. RICHARDSON. Oblong 4to, 3s. 6d. cloth.

"Will save much labour and calculation to packing-case makers and those who use packing-cases."—*Grocer*. "Invaluable labour-saving tables."—*Ironmonger*.

Horton's Measurer.

THE COMPLETE MEASURER; setting forth the Measurement of Boards, Glass, &c.; Unequal-sided, Square-sided, Octagonal-sided, Round Timber and Stone, and Standing Timber. With just allowances for the bark in the respective species of trees, and proper deductions for the waste in hewing the trees, &c.; also a Table showing the solidity of hewn or eight-sided timber, or of any octagonal-sided column. By RICHARD HORTON. Third edition, with considerable and valuable additions, 12mo, strongly bound in leather, 5s.

Horton's Underwood and Woodland Tables.

TABLES FOR PLANTING AND VALUING UNDERWOOD AND WOODLAND; also Lineal, Superficial, Cubical, and Decimal Tables, &c. By R. HORTON. 12mo, 2s. leather.

Nicholson's Carpenter's Guide.

THE CARPENTER'S NEW GUIDE; or, BOOK of LINES for CARPENTERS: comprising all the Elementary Principles essential for acquiring a knowledge of Carpentry. Founded on the late PETER NICHOLSON's standard work. A new Edition, revised by ARTHUR ASHPITEL, F.S.A., together with Practical Rules on Drawing, by GEORGE PYNE. With 74 Plates, 4to, 1l. 1s. cloth.

Dowsing's Timber Merchant's Companion.

THE TIMBER MERCHANT'S AND BUILDER'S COMPANION; containing New and Copious Tables of the Reduced Weight and Measurement of Deals and Battens, of all sizes, from One to a Thousand Pieces, also the relative Price that each size bears per Lineal Foot to any given Price per Petersburg Standard Hundred, &c., &c. Also a variety of other valuable information. By WILLIAM DOWSING, Timber Merchant. Third Edition, Revised. Crown 8vo, 3s. cloth.

"Everything is as concise and clear as it can possibly be made. There can be no doubt that every timber merchant and builder ought to possess it."—*Hull Advertiser*.

Practical Timber Merchant.

THE PRACTICAL TIMBER MERCHANT, being a Guide for the use of Building Contractors, Surveyors, Builders, &c., comprising useful Tables for all purposes connected with the Timber Trade, Essay on the Strength of Timber, Remarks on the Growth of Timber, &c. By W. RICHARDSON. Fcap. 8vo, 3s. 6d. cl.

Woodworking Machinery.

WOODWORKING MACHINERY; its Rise, Progress, and Construction. With Hints on the Management of Saw Mills and the Economical Conversion of Timber. Illustrated with Examples of Recent Designs by leading English, French, and American Engineers. By M. POWIS BALE, M.I.M.E. Large crown 8vo, 12s. 6d. cloth.

"Mr. Bale is evidently an expert on the subject, and he has collected so much information that his book is all-sufficient for builders and others engaged in the conversion of timber."—*Architect*.

"The most comprehensive compendium of wood-working machinery we have seen. The author is a thorough master of his subject."—*Building News*.

"It should be in the office of every wood-working factory."—*English Mechanic*.

MECHANICS, ETC.

Turning.

LATHE-WORK: a Practical Treatise on the Tools, Appliances, and Processes employed in the Art of Turning. By PAUL N. HASLUCK. With numerous Illustrations drawn by the Author. Crown 8vo, 5s. cloth. [Just published.]

"Evidently written from personal experience, and gives a large amount of just that sort of information which beginners at the lathe require."—*Builder*.

"Expounds the art and mystery of the turner in an informative fashion."—*Scotsman*.

"Mr. Hasluck's book will be a boon to amateurs."—*Architect*.

Mechanic's Workshop Companion.

THE OPERATIVE MECHANIC'S WORKSHOP COMPANION, and THE SCIENTIFIC GENTLEMAN'S PRACTICAL ASSISTANT. By W. TEMPLETON. 12th Edit., with Mechanical Tables for Operative Smiths, Millwrights, Engineers, &c.; and an Extensive Table of Powers and Roots, 12mo, 5s. bound.

"Admirably adapted to the wants of a very large class. It has met with great success in the engineering workshop, as we can testify; and there are a great many men who, in a great measure, owe their rise in life to this little work."—*Building News*.

Engineer's and Machinist's Assistant.

THE ENGINEER'S, MILLWRIGHT'S, and MACHINIST'S PRACTICAL ASSISTANT; comprising a Collection of Useful Tables, Rules, and Data. By WM. TEMPLETON. 18mo, 2s. 6d.

"A more suitable present to an apprentice to any of the mechanical trades could not possibly be made."—*Building News*.

Superficial Measurement.

THE TRADESMAN'S GUIDE TO SUPERFICIAL MEASUREMENT. Tables calculated from 1 to 200 inches in length, by 1 to 108 inches in breadth. For the use of Architects, Engineers, Timber Merchants, Builders, &c. By J. HAWKINGS. Fcp. 3s. 6d. cl.

The High-Pressure Steam Engine.

THE HIGH-PRESSURE STEAM ENGINE; an Exposition of its Comparative Merits, and an Essay towards an Improved System of Construction, adapted especially to secure Safety and Economy. By Dr. ERNST ALBAN. Translated from the German, with Notes, by Dr. POLK, F.R.S. 8vo, 16s. 6d. cloth.

Steam Boilers.

A TREATISE ON STEAM BOILERS: their Strength, Construction, and Economical Working. By R. WILSON, C.E. Fifth Edition. 12mo, 6s. cloth.

"The best work on boilers which has come under our notice."—*Engineering*.

"The best treatise that has ever been published on steam boilers."—*Engineer*.

Power in Motion.

POWER IN MOTION: Horse Power, Toothed Wheel Gearing, Long and Short Driving Bands, Angular Forces, &c. By JAMES ARMOUR, C.E. With 73 Diagrams. 12mo, 3s., cloth.

Mechanics.

THE HANDBOOK OF MECHANICS. By DIONYSIUS LARDNER, D.C.L. New Edition, Edited and considerably enlarged, by BENJAMIN LOEWY, F.R.A.S., &c., post 8vo, 6s. cloth.

"Studiously popular . . . The application of the various branches of physics to the industrial arts is carefully shown."—*Mining Journal*.

MATHEMATICS, TABLES, ETC.

Gregory's Practical Mathematics.

MATHEMATICS for PRACTICAL MEN ; being a Common-place Book of Pure and Mixed Mathematics. Designed chiefly for the Use of Civil Engineers, Architects, and Surveyors. Part I. PURE MATHEMATICS—comprising Arithmetic, Algebra, Geometry, Mensuration, Trigonometry, Conic Sections, Properties of Curves. Part II. MIXED MATHEMATICS—comprising Mechanics in general, Statics, Dynamics, Hydrostatics, Hydrodynamics, Pneumatics, Mechanical Agents, Strength of Materials. With an Appendix of copious Logarithmic and other Tables. By OLINTHUS GREGORY, LL.D., F.R.A.S. Enlarged by HENRY LAW, C.E. 4th Edition, revised by Prof. J. R. YOUNG. With 13 Plates. 8vo, 1*l*. 1*s*. cloth.

"The engineer or architect will here find ready to his hand, rules for solving nearly every mathematical difficulty that may arise in his practice. The rules are in all cases explained by means of examples clearly worked out."—*Builder*.

The Metric System.

A SERIES OF METRIC TABLES, in which the British Standard Measures and Weights are compared with those of the Metric System at present in use on the Continent. By C. H. DOWLING, C.E. 2nd Edit., revised and enlarged. 8vo, 10*s*. 6*d*. cl.

"Their accuracy has been certified by Prof. Airy, Astronomer-Royal."—*Builder*.

Inwood's Tables, greatly enlarged and improved.

TABLES FOR THE PURCHASING OF ESTATES, Freehold, Copyhold, or Leasehold ; Annuities, Advowsons, &c., and for the Renewing of Leases held under Cathedral Churches, Colleges, or other corporate bodies ; for Terms of Years certain, and for Lives ; also for Valuing Reversionary Estates, Deferred Annuities, Next Presentations, &c., together with Smart's Five Tables of Compound Interest, and an Extension of the same to Lower and Intermediate Rates. By WILLIAM INWOOD, Architect. The 21st edition, with considerable additions, and new and valuable Tables of Logarithms for the more Difficult Computations of the Interest of Money, Discount, Annuities, &c. By M. FÉDOR THOMAN. 12mo, 8*s*. cloth.

"Those interested in the purchase and sale of estates, and in the adjustment of compensation cases, as well as in transactions in annuities, life insurances, &c., will find the present edition of eminent service."—*Engineering*.

Geometry for the Architect, Engineer, &c.

PRACTICAL GEOMETRY, for the Architect, Engineer, and Mechanic. By E. W. TARN, M.A., Architect. Demy 8vo, 12*s*. 6*d*. cl.

Mathematical Instruments.

MATHEMATICAL INSTRUMENTS: Their Construction, Adjustment, Testing, and Use ; comprising Drawing, Measuring, Optical, Surveying, and Astronomical Instruments. By J. F. HEATHER, M.A. Enlarged Edition. 12mo, 5*s*. cloth.

Weights, Measures, Moneys, &c.

MEASURES, WEIGHTS, and MONEYS of all NATIONS, and an Analysis of the Christian, Hebrew, and Mahometan Calendars. Entirely New Edition, Revised and Enlarged. By W. S. B. WOOLHOUSE, F.R.A.S. 12mo, 2*s*. 6*d*. cloth boards.

Compound Interest and Annuities.

THEORY of COMPOUND INTEREST and ANNUITIES; with Tables of Logarithms for the more Difficult Computations of Interest, Discount, Annuities, &c., in all their Applications and Uses for Mercantile and State Purposes. By FÉDOR THOMAN, of the Société Crédit Mobilier, Paris. 3rd Edit., 12mo, 4s. 6d. cl.

"A very powerful work, and the Author has a very remarkable command of his subject."—*Professor A. de Morgan.*

Iron and Metal Trades' Calculator.

THE IRON AND METAL TRADES' COMPANION: Being a Calculator containing a Series of Tables upon a new and comprehensive plan for expeditiously ascertaining the value of any goods bought or sold by weight, from 1s. per cwt. to 112s. per cwt., and from one farthing per lb. to 1s. per lb. Each Table extends from one lb. to 100 tons. By T. DOWNIE. 396 pp., 9s., leather.

"A most useful set of tables, and will supply a want, for nothing like them before existed."—*Building News.*

Iron and Steel.

'IRON AND STEEL': a Work for the Forge, Foundry, Factory, and Office. Containing Information for Ironmasters and their Stocktakers; Managers of Bar, Rail, Plate, and Sheet Rolling Mills; Iron and Metal Founders; Iron Ship and Bridge Builders; Mechanical, Mining, and Consulting Engineers; Architects, Builders, &c. By CHARLES HOARE, Author of 'The Slide Rule,' &c. Eighth Edition. With folding Scales of "Foreign Measures compared with the English Foot," and "fixed Scales of Squares, Cubes, and Roots, Areas, Decimal Equivalents, &c." Oblong, 32mo, 6s., leather, elastic-band.

"For comprehensiveness the book has not its equal."—*Iron.*

Comprehensive Weight Calculator.

THE WEIGHT CALCULATOR; being a Series of Tables upon a New and Comprehensive Plan, exhibiting at one Reference the exact Value of any Weight from 1 lb. to 15 tons, at 300 Progressive Rates, from 1 Penny to 168 Shillings per cwt., and containing 186,000 Direct Answers, which, with their Combinations, consisting of a single addition (mostly to be performed at sight), will afford an aggregate of 10,266,000 Answers; the whole being calculated and designed to ensure Correctness and promote Despatch. By HENRY HARBEN, Accountant, Sheffield. New Edition. Royal 8vo, 1/. 5s., strongly half-bound.

Comprehensive Discount Guide.

THE DISCOUNT GUIDE: comprising several Series of Tables for the use of Merchants, Manufacturers, Ironmongers, and others, by which may be ascertained the exact profit arising from any mode of using Discounts, either in the Purchase or Sale of Goods, and the method of either Altering a Rate of Discount, or Advancing a Price, so as to produce, by one operation, a sum that will realise any required profit after allowing one or more Discounts: to which are added Tables of Profit or Advance from $1\frac{1}{4}$ to 90 per cent., Tables of Discount from $1\frac{1}{4}$ to $98\frac{1}{4}$ per cent., and Tables of Commission, &c., from $\frac{1}{4}$ to 10 per cent. By HENRY HARBEN, Accountant. New Edition. Demy 8vo, 1/. 5s., half-bound.

SCIENCE AND ART.

The Construction of the Organ.

PRACTICAL ORGAN BUILDING. By W. E. DICKSON, M.A., Precentor of Ely Cathedral. Crown 8vo, 5s. cloth.

"In many respects the book is the best that has yet appeared on the subject. We cordially recommend it."—*English Mechanic*.

"Any practical amateur following the instructions here given might build an organ to his entire satisfaction."—*Leeds Mercury*.

Dentistry.

MECHANICAL DENTISTRY. A Practical Treatise on the Construction of the various kinds of Artificial Dentures. Comprising also Useful Formulæ, Tables, and Receipts for Gold Plate, Clasps, Solders, etc., etc. By CHARLES HUNTER. With numerous Wood Engravings. Crown 8vo, 7s. 6d. cloth.

"The work is very practical."—*Monthly Review of Dental Surgery*.

"An authoritative treatise. . . . We can strongly recommend Mr. Hunter's treatise to all students preparing for the profession of dentistry, as well as to every mechanical dentist."—*Dublin Journal of Medical Science*. [and Circular.

"The best book on the subject with which we are acquainted."—*Medical Press*

Brewing.

A HANDBOOK FOR YOUNG BREWERS. By HERBERT EDWARDS WRIGHT, B.A. Crown 8vo, 3s. 6d. cloth.

"A thoroughly scientific treatise in popular language. It is evident that the author has mastered his subject in its scientific aspects."—*Morning Advertiser*.

"We would particularly recommend teachers of the art to place it in every pupil's hands, and we feel sure its perusal will be attended with advantage."—*Brewer*.

Gold and Gold-Working.

THE GOLDSMITH'S HANDBOOK: containing full instructions for the Alloying and Working of Gold. Including the Art of Alloying, Melting, Reducing, Colouring, Collecting and Refining. The processes of Manipulation, Recovery of Waste, Chemical and Physical Properties of Gold, with a new System of Mixing its Alloys; Solders, Enamels, and other useful Rules and Recipes, &c. By GEORGE E. GEE, Goldsmith and Silversmith. Second Edition, considerably enlarged. 12mo, 3s. 6d. cloth boards.

"The best work yet printed on its subject for a reasonable price."—*Jeweller*.

"We consider that the trade owes not a little to Mr. Gee, who has in two volumes compressed almost the whole of its literature, and we doubt not that many a young beginner will owe a part of his future success to a diligent study of the pages which are peculiarly well adapted to his use."—*Clerkenwell Press*.

"Essentially a practical manual, well adapted to the wants of amateurs and apprentices, containing trustworthy information that only a practical man can supply."—*English Mechanic*.

Silver and Silver Working.

THE SILVERSMITH'S HANDBOOK, containing full Instructions for the Alloying and Working of Silver, including the different modes of refining and melting the metal, its solders, the preparation of imitation alloys, &c. By GEORGE E. GEE, Jeweller, &c. 12mo, 3s. 6d. cloth boards.

"The chief merit of the work is its practical character. The workers in the trade will speedily discover its merits when they sit down to study it."—*English Mechanic*.

"This work forms a valuable sequel to the author's *Practical Goldworker*, and supplies a want long felt in the silver trade."—*Silversmith's Trade Journal*.

Electric Lighting.

ELECTRIC LIGHT : Its Production and Use, embodying plain Directions for the Working of Galvanic Batteries, Electric Lamps, and Dynamo-Electric Machines. By J. W. URQUHART, C. E., Author of "Electroplating : a Practical Handbook." Edited by F. C. WEBB, M.I.C.E., M.S.T.E. With 94 Illustrations. Crown 8vo, 7s. 6d. cloth.

"It is the only work at present available, which gives a general but concise history of the means which have been adopted up to the present time in producing the electric light."—*Metropolitan*.

"An important addition to the literature of the electric light. Students of the subject should not fail to read it."—*Colliery Guardian*.

Electroplating, &c.

ELECTROPLATING : A Practical Handbook. By J. W. URQUHART, C.E. Crown 8vo, 5s. cloth.

"A large amount of thoroughly practical information."—*Telegraphic Journal*.

"An excellent practical manual."—*Engineering*.

"The information given appears to be based on direct personal knowledge. . . . Its science is sound, and the style is always clear."—*Athenæum*.

"Any ordinarily intelligent person may become an adept in electro-deposition with a very little science indeed, and this is the book to show him or her the way."—*Builder*.

"The volume is without a rival in its particular sphere."—*Design and Work*.

Electrotyping, &c.

ELECTROTYPING : a Practical Manual on the Reproduction and Multiplication of Printing Surfaces and Works of Art by the Electro-deposition of Metals. By J. W. URQUHART, C.E. Crown 8vo, 5s. cloth.

[*Just published.*]
"Will serve as a guide, not only to beginners in the art, but to those who still practise the old and imperfect methods of electrotyping."—*Iron*.

"The book throughout is entirely practical, is lucid and clear in style, and the minutest details are so stated that amateurs will find no difficulty whatever in following them out. We have no hesitation in recommending it as a reliable work."—*Paper and Printing Trades Journal*.

The Military Sciences.

AIDE-MÉMOIRE to the MILITARY SCIENCES. Framed from Contributions of Officers and others connected with the different Services. Originally edited by a Committee of the Corps of Royal Engineers. Second Edition, most carefully revised by an Officer of the Corps, with many additions ; containing nearly 350 Engravings and many hundred Woodcuts. 3 vols. royal 8vo, extra cloth boards, and lettered, 4l. 10s.

Field Fortification.

A TREATISE on FIELD FORTIFICATION, the ATTACK of FORTRESSES, MILITARY MINING, and RECONNOITRING. By Colonel I. S. MACAULAY, late Professor of Fortification in the R. M. A., Woolwich. Sixth Edition, crown 8vo, cloth, with separate Atlas of 12 Plates, 12s. complete.

Dye-Wares and Colours.

THE MANUAL of COLOURS and DYE-WARES : their Properties, Applications, Valuation, Impurities, and Sophistications. For the Use of Dyers, Printers, Drysalers, Brokers, &c. By J. W. SLATER. Post 8vo, 7s. 6d. cloth.

The Alkali Trade—Sulphuric Acid, &c.

A MANUAL OF THE ALKALI TRADE, including the Manufacture of Sulphuric Acid, Sulphate of Soda, and Bleaching Powder. By JOHN LOMAS, Alkali Manufacturer, Newcastle-upon-Tyne and London. With 232 Illustrations and Working Drawings, and containing 386 pages of text. Super-royal 8vo, 2l 12s. 6d. cloth. [Just published.]

This work provides (1) a Complete Handbook for intending Alkali and Sulphuric Acid Manufacturers, and for those already in the field who desire to improve their plant, or to become practically acquainted with the latest processes and developments of the trade; (2) a Handy Volume which Manufacturers can put into the hands of their Managers and Foremen as a useful guide in their daily rounds of duty.

SYNOPSIS OF CONTENTS.

Chap. I. Choice of Site and General Plan of Works—II. Sulphuric Acid—III. Recovery of the Nitrogen Compounds, and Treatment of Small Pyrites—IV. The Salt Cake Process—V. Legislation upon the Noxious Vapours Question—VI. The Hargreaves' and Jones' Processes—VII. The Balling Process—VIII. Lixivation and Salting Down—

IX. Carbonating or Finishing—X. Soda Crystals—XI. Refined Alkali—XII. Caustic Soda—XIII. Bi-carbonate of Soda—XIV. Bleaching Powder—XV. Utilisation of Tank Waste—XVI. General Remarks—Four Appendices, treating of Yields, Sulphuric Acid Calculations, Anemometers, and Foreign Legislation upon the Noxious Vapours Question.

"The author has given the fullest, most practical, and, to all concerned in the alkali trade, most valuable mass of information that, to our knowledge, has been published in any language."—*Engineer*.

"This book is written by a manufacturer for manufacturers. The working details of the most approved forms of apparatus are given, and these are accompanied by no less than 232 wood engravings, all of which may be used for the purposes of construction. Every step in the manufacture is very fully described in this manual, and each improvement explained. Everything which tends to introduce economy into the technical details of this trade receives the fullest attention. The book has been produced with great completeness."—*Athenæum*.

"The author is not one of those clever compilers who, on short notice, will 'read up' any conceivable subject, but a practical man in the best sense of the word. We find here not merely a sound and luminous explanation of the chemical principles of the trade, but a notice of numerous matters which have a most important bearing on the successful conduct of alkali works, but which are generally overlooked by even the most experienced technological authors. This most valuable book, which we trust will be generally appreciated, we must pronounce a credit alike to its author and to the enterprising firm who have undertaken its publication."—*Chemical Review*.

Chemical Analysis.

THE COMMERCIAL HANDBOOK of CHEMICAL ANALYSIS; or Practical Instructions for the determination of the Intrinsic or Commercial Value of Substances used in Manufactures, in Trades, and in the Arts. By A. NORMANDY, Author of "Practical Introduction to Rose's Chemistry," and Editor of Rose's "Treatise on Chemical Analysis." *New Edition*. Enlarged, and to a great extent re-written, by HENRY M. NOAD, Ph. D., F.R.S. With numerous Illustrations. Cr. 8vo, 12s. 6d. cloth.

"We recommend this book to the careful perusal of every one; it may be truly affirmed to be of universal interest, and we strongly recommend it to our readers as a guide, alike indispensable to the housewife as to the pharmaceutical practitioner."—*Medical Times*.

"Essential to the analysts appointed under the new Act. The most recent results are given, and the work is well edited and carefully written."—*Nature*.

Dr. Lardner's Museum of Science and Art.

THE MUSEUM OF SCIENCE AND ART. Edited by DIONYSIUS LARDNER, D.C.L., formerly Professor of Natural Philosophy and Astronomy in University College, London. With upwards of 1200 Engravings on Wood. In 6 Double Volumes. Price £1 1s., in a new and elegant cloth binding, or handsomely bound in half morocco, 31s. 6d.

OPINIONS OF THE PRESS.

"This series, besides affording popular but sound instruction on scientific subjects, with which the humblest man in the country ought to be acquainted, also undertakes that teaching of 'common things' which every well-wisher of his kind is anxious to promote. Many thousand copies of this serviceable publication have been printed, in the belief and hope that the desire for instruction and improvement widely prevails; and we have no fear that such enlightened faith will meet with disappointment."—*Times*.

"A cheap and interesting publication, alike informing and attractive. The papers combine subjects of importance and great scientific knowledge, considerable inductive powers, and a popular style of treatment."—*Spectator*.

"The 'Museum of Science and Art' is the most valuable contribution that has ever been made to the Scientific Instruction of every class of society."—*Sir David Brewster in the North British Review*.

"Whether we consider the liberality and beauty of the illustrations, the charm of the writing, or the durable interest of the matter, we must express our belief that there is hardly to be found among the new books, one that would be welcomed by people of so many ages and classes as a valuable present."—*Examiner*.

* * *Separate books formed from the above, suitable for Workmen's Libraries, Science Classes, &c.*

COMMON THINGS EXPLAINED. Containing Air, Earth, Fire, Water, Time, Man, the Eye, Locomotion, Colour, Clocks and Watches, &c. 233 Illustrations, cloth gilt, 5s.

THE MICROSCOPE. Containing Optical Images, Magnifying Glasses, Origin and Description of the Microscope, Microscopic Objects, the Solar Microscope, Microscopic Drawing and Engraving, &c. 147 Illustrations, cloth gilt, 2s.

POPULAR GEOLOGY. Containing Earthquakes and Volcanoes, the Crust of the Earth, etc. 201 Illustrations, cloth gilt, 2s. 6d.

POPULAR PHYSICS. Containing Magnitude and Minuteness, the Atmosphere, Meteoric Stones, Popular Fallacies, Weather Prognostics, the Thermometer, the Barometer, Sound, &c. 85 Illustrations, cloth gilt, 2s. 6d.

STEAM AND ITS USES. Including the Steam Engine, the Locomotive, and Steam Navigation. 89 Illustrations, cloth gilt, 2s.

POPULAR ASTRONOMY. Containing How to Observe the Heavens, The Earth, Sun, Moon, Planets. Light, Comets, Eclipses, Astronomical Influences, &c. 182 Illustrations, 4s. 6d.

THE BEE AND WHITE ANTS: Their Manners and Habits. With Illustrations of Animal Instinct and Intelligence. 135 Illustrations, cloth gilt, 2s.

THE ELECTRIC TELEGRAPH POPULARISED. To render intelligible to all who can Read, irrespective of any previous Scientific Acquirements, the various forms of Telegraphy in Actual Operation. 100 Illustrations, cloth gilt, 1s. 6d.

Dr. Lardner's Handbooks of Natural Philosophy.

* * * The following five volumes, though each is Complete in itself, and to be purchased separately, form A COMPLETE COURSE OF NATURAL PHILOSOPHY, and are intended for the general reader who desires to attain accurate knowledge of the various departments of Physical Science, without pursuing them according to the more profound methods of mathematical investigation. The style is studiously popular. It has been the author's aim to supply Manuals such as are required by the Student, the Engineer, the Artisan, and the superior classes in Schools.

THE HANDBOOK OF MECHANICS. Enlarged and almost rewritten by BENJAMIN LOEWY, F.R.A.S. With 378 Illustrations. Post 8vo, 6s. cloth.

"The perspicuity of the original has been retained, and chapters which had become obsolete, have been replaced by others of more modern character. The explanations throughout are studiously popular, and care has been taken to show the application of the various branches of physics to the industrial arts, and to the practical business of life."—*Mining Journal*.

THE HANDBOOK OF HYDROSTATICS and PNEUMATICS.

New Edition, Revised and Enlarged by BENJAMIN LOEWY, F.R.A.S. With 236 Illustrations. Post 8vo, 5s. cloth.

"For those who desire to attain an accurate knowledge of physical science without the profound methods of mathematical investigation, this work is not merely intended, but well adapted."—*Chemical News*.

THE HANDBOOK OF HEAT. Edited and almost entirely Rewritten by BENJAMIN LOEWY, F.R.A.S., etc. 117 Illustrations. Post 8vo, 6s. cloth.

"The style is always clear and precise, and conveys instruction without leaving any cloudiness or lurking doubts behind."—*Engineering*.

THE HANDBOOK OF OPTICS. New Edition. Edited by T. OLIVER HARDING, B.A. 298 Illustrations. Post 8vo, 5s. cloth.

"Written by one of the ablest English scientific writers, beautifully and elaborately illustrated."—*Mechanics Magazine*.

THE HANDBOOK OF ELECTRICITY, MAGNETISM, and ACOUSTICS. New Edition. Edited by GEO. CAREY FOSTER, B.A., F.C.S. With 400 Illustrations. Post 8vo, 5s. cloth.

"The book could not have been entrusted to any one better calculated to preserve the terse and lucid style of Lardner, while correcting his errors and bringing up his work to the present state of scientific knowledge."—*Popular Science Review*.

Dr. Lardner's Handbook of Astronomy.

THE HANDBOOK OF ASTRONOMY. Forming a Companion to the "Handbooks of Natural Philosophy." By DIONYSIUS LARDNER, D.C.L., formerly Professor of Natural Philosophy and Astronomy in University College, London. Fourth Edition. Revised and Edited by EDWIN DUNKIN, F.R.S., Royal Observatory, Greenwich. With 38 Plates and upwards of 100 Woodcuts. In 1 vol., small 8vo, 550 pages, 9s. 6d., cloth.

"Probably no other book contains the same amount of information in so compendious and well-arranged a form—certainly none at the price at which this is offered to the public."—*Athenæum*.

"We can do no other than pronounce this work a most valuable manual of astronomy, and we strongly recommend it to all who wish to acquire a general—but at the same time correct—acquaintance with this sublime science."—*Quarterly Journal of Science*.

Dr. Lardner's Handbook of Animal Physics.

THE HANDBOOK OF ANIMAL PHYSICS. By DR. LARDNER. With 520 Illustrations. New edition, small 8vo, cloth, 732 pages, 7s. 6d.

"We have no hesitation in cordially recommending it."—*Educational Times*.

Dr. Lardner's School Handbooks.

NATURAL PHILOSOPHY FOR SCHOOLS. By DR. LARDNER.
328 Illustrations. Sixth Edition. 1 vol. 3s. 6d. cloth.

"Conveys, in clear and precise terms, general notions of all the principal divisions of Physical Science."—*British Quarterly Review*.

ANIMAL PHYSIOLOGY FOR SCHOOLS. By DR. LARDNER.

With 190 Illustrations. Second Edition. 1 vol. 3s. 6d. cloth.

"Clearly written, well arranged, and excellently illustrated."—*Gardeners' Chronicle*.

Dr. Lardner's Electric Telegraph.

THE ELECTRIC TELEGRAPH. By DR. LARDNER. New Edition. Revised and Re-written, by E. B. BRIGHT, F.R.A.S.
140 Illustrations. Small 8vo, 2s. 6d. cloth.

"One of the most readable books extant on the Electric Telegraph."—*Eng. Mechanic*.
Electricity.

A MANUAL of ELECTRICITY; including Galvanism, Magnetism, Diamagnetism, Electro-Dynamics, Magneto-Electricity, and the Electric Telegraph. By HENRY M. NOAD, Ph.D., F.C.S.
Fourth Edition, with 500 Woodcuts. 8vo, 1l. 4s. cloth.

"The accounts given of electricity and galvanism are not only complete in a scientific sense, but, which is a rarer thing, are popular and interesting."—*Lancet*.

Text-Book of Electricity.

THE STUDENT'S TEXT-BOOK OF ELECTRICITY. By HENRY M. NOAD, Ph.D., F.R.S., F.C.S. New Edition, carefully Revised. With an Introduction and Additional Chapters by W. H. PREECE, M.I.C.E., Vice-President of the Society of Telegraph Engineers, &c. With 470 Illustrations. Crown 8vo, 12s. 6d. cloth.

"A reflex of the existing state of Electrical Science adapted for students."—W. H. PREECE, Esq., vide "Introduction."

"We can recommend Dr. Noad's book for clear style, great range of subject, a good index, and a plethora of woodcuts. Such collections as the present are indispensable."—*Athenæum*.

"An admirable text-book for every student—beginner or advanced—of electricity."—*Engineering*.

"Recommended to students as one of the best text-books on the subject that they can have. Mr. Preece appears to have introduced all the newest inventions in the shape of telegraphic, telephonic, and electric-lighting apparatus."—*English Mechanic*.

"The work contains everything that the student can require."—*Academy*.

"One of the best and most useful compendiums of any branch of science in our literature."—*Iron*.

"Under the editorial hand of Mr. Preece the late Dr. Noad's text-book of electricity has grown into an admirable handbook."—*Westminster Review*.

Carriage Building, &c.

COACH BUILDING: a Practical Treatise, Historical and Descriptive, containing full information of the various Trades and Processes involved, with Hints on the proper Keeping of Carriages, &c. With 57 Illustrations. By JAMES W. BURGESS. 12mo, 3s. cloth boards. [Just published.]

Geology and Genesis.

THE TWIN RECORDS OF CREATION; or, Geology and Genesis, their Perfect Harmony and Wonderful Concord. By GEORGE W. VICTOR LE VAUX. Fcap. 8vo, 5s. cloth.

"A valuable contribution to the evidences of revelation, and disposes very conclusively of the arguments of those who would set God's Works against God's Word. No real difficulty is shirked, and no sophistry is left unexposed."—*The Rock*.

Science and Scripture.

SCIENCE ELUCIDATIVE OF SCRIPTURE, AND NOT ANTAGONISTIC TO IT; being a Series of Essays on—1. Alleged Discrepancies; 2. The Theory of the Geologists and Figure of the Earth; 3. The Mosaic Cosmogony; 4. Miracles in general—Views of Hume and Powell; 5. The Miracle of Joshua—Views of Dr. Colenso: The Supernaturally Impossible; 6. The Age of the Fixed Stars, &c. By Prof. J. R. YOUNG. Fcap. 5s. cl.

Geology.

A CLASS-BOOK OF GEOLOGY: Consisting of "Physical Geology," which sets forth the Leading Principles of the Science; and "Historical Geology," which treats of the Mineral and Organic Conditions of the Earth at each successive epoch, especial reference being made to the British Series of Rocks. By RALPH TATE. With more than 250 Illustrations. Fcap. 8vo, 5s. cloth.

Practical Philosophy.

A SYNOPSIS OF PRACTICAL PHILOSOPHY. By Rev. JOHN CARR, M.A., late Fellow of Trin. Coll., Camb. 18mo, 5s. cl.

Mollusca.

A MANUAL OF THE MOLLUSCA; being a Treatise on Recent and Fossil Shells. By Dr. S. P. WOODWARD, A.L.S. With Appendix by RALPH TATE, A.L.S., F.G.S. With numerous Plates and 300 Woodcuts. 3rd Edition. Cr. 8vo, 7s. 6d. cloth.

Clocks, Watches, and Bells.

RUDIMENTARY TREATISE ON CLOCKS, and WATCHES, and BELLS. By Sir EDMUND BECKETT, Bart. (late E. B. Denison), LL.D., Q.C., F.R.A.S. Sixth edition, revised and enlarged. Limp cloth (No. 67, Weale's Series), 4s. 6d.; cloth bds. 5s. 6d.

"As a popular and practical treatise it is unapproached."—*English Mechanic*.

"The best work on the subject, probably extant. The treatise on bells is undoubtedly the best in the language."—*Engineering*.

"The only modern treatise on clock-making."—*Horological Journal*.

Grammar of Colouring.

A GRAMMAR OF COLOURING, applied to Decorative Painting and the Arts. By GEORGE FIELD. New edition, enlarged. By ELLIS A. DAVIDSON. With new Coloured Diagrams and Engravings. 12mo, 3s. 6d. cloth.

"The book is a most useful *résumé* of the properties of pigments."—*Builder*.

Pictures and Painters.

THE PICTURE AMATEUR'S HANDBOOK AND DICTIONARY OF PAINTERS: A Guide for Visitors to Picture Galleries, and for Art-Students, including methods of Painting, Cleaning, Re-Lining, and Restoring, Principal Schools of Painting, Copyists and Imitators. By PHILIPPE DARYL, B.A. Cr. 8vo, 3s. 6d. cl.

Woods and Marbles (Imitation of).

SCHOOL OF PAINTING FOR THE IMITATION OF WOODS AND MARBLES, as Taught and Practised by A. R. and P. VAN DER BURG, Directors of the Rotterdam Painting Institution. Illustrated with 24 full-size Coloured Plates; also 12 Plain Plates, comprising 154 Figures. Folio, 2l. 12s. 6d. bound.

Delamotte's Works on Illumination & Alphabets.

A PRIMER OF THE ART OF ILLUMINATION; for the use of Beginners: with a Rudimentary Treatise on the Art, Practical Directions for its Exercise, and numerous Examples taken from Illuminated MSS., printed in Gold and Colours. By F. DELAMOTTE. Small 4to, 9s. Elegantly bound, cloth antique.

"The examples of ancient MSS. recommended to the student, which, with much good sense, the author chooses from collections accessible to all, are selected with judgment and knowledge, as well as taste."—*Athenæum*.

ORNAMENTAL ALPHABETS, ANCIENT and MEDIEVAL; from the Eighth Century, with Numerals; including Gothic, Church-Text, German, Italian, Arabesque, Initials, Monograms, Crosses, &c. Collected and engraved by F. DELAMOTTE, and printed in Colours. New and Cheaper Edition. Royal 8vo, oblong, 2s. 6d. ornamental boards.

"For those who insert enamelled sentences round gilded chalices, who blazon shop legends over shop-doors, who letter church walls with pithy sentences from the Decalogue, this book will be useful."—*Athenæum*.

EXAMPLES OF MODERN ALPHABETS, PLAIN and ORNAMENTAL; including German, Old English, Saxon, Italic, Perspective, Greek, Hebrew, Court Hand, Engrossing, Tuscan, Riband, Gothic, Rustic, and Arabesque, &c., &c. Collected and engraved by F. DELAMOTTE, and printed in Colours. New and Cheaper Edition. Royal 8vo, oblong, 2s. 6d. ornamental boards.

"There is comprised in it every possible shape into which the letters of the alphabet and numerals can be formed."—*Standard*.

MEDIEVAL ALPHABETS AND INITIALS FOR ILLUMINATORS. By F. DELAMOTTE. Containing 21 Plates, and Illuminated Title, printed in Gold and Colours. With an Introduction by J. WILLIS BROOKS. Small 4to, 6s. cloth gilt.

THE EMBROIDERER'S BOOK OF DESIGN; containing Initials, Emblems, Cyphers, Monograms, Ornamental Borders, Ecclesiastical Devices, Mediæval and Modern Alphabets, and National Emblems. Collected and engraved by F. DELAMOTTE, and printed in Colours. Oblong royal 8vo, 1s. 6d. in ornamental boards.

Wood-Carving.

INSTRUCTIONS in WOOD-CARVING, for Amateurs; with Hints on Design. By A LADY. In emblematic wrapper, handsomely printed, with Ten large Plates, 2s. 6d.

"The handicraft of the wood-carver, so well as a book can impart it, may be learnt from 'A Lady's' publication."—*Athenæum*.

Popular Work on Painting.

PAINTING POPULARLY EXPLAINED; with Historical Sketches of the Progress of the Art. By THOMAS JOHN GULLICK, Painter, and JOHN TIMBS, F.S.A. Fourth Edition, revised and enlarged. With Frontispiece and Vignette. In small 8vo, 6s. cloth.

* * * This Work has been adopted as a Prize-book in the Schools of Art at South Kensington.

"Contains a large amount of original matter, agreeably conveyed."—*Builder*.

"Much may be learned, even by those who fancy they do not require to be taught, from the careful perusal of this unpretending but comprehensive treatise."—*Art Journal*.

AGRICULTURE, GARDENING, ETC.

Youatt and Burn's Complete Grazier.

THE COMPLETE GRAZIER, and FARMER'S and CATTLE-BREEDER'S ASSISTANT. A Compendium of Husbandry. By WILLIAM YOUATT, ESQ., V.S. 12th Edition, very considerably enlarged, and brought up to the present requirements of agricultural practice. By ROBERT SCOTT BURN. One large 8vo. volume, 860 pp. with 244 Illustrations. 17. 1s. half-bound.

"The standard and text-book, with the farmer and grazier."—*Farmer's Magazine*.
 "A treatise which will remain a standard work on the subject as long as British agriculture endures."—*Mark Lane Express*.

History, Structure, and Diseases of Sheep.

SHEEP; THE HISTORY, STRUCTURE, ECONOMY, AND DISEASES OF. By W. C. SPOONER, M.R.V.C., &c. Fourth Edition, with fine engravings, including specimens of New and Improved Breeds. 366 pp., 4s. cloth.

Production of Meat.

MEAT PRODUCTION. A Manual for Producers, Distributors, and Consumers of Butchers' Meat. Being a treatise on means of increasing its Home Production. Also comprehensively treating of the Breeding, Rearing, Fattening, and Slaughtering of Meat-yielding Live Stock; Indications of the Quality; Means for Preserving, Curing, and Cooking of the Meat, etc. By JOHN EWART. Numerous Illustrations. Cr. 8vo, 5s. cloth.

"A compact and handy volume on the meat question, which deserves serious and thoughtful consideration at the present time."—*Meat and Provision Trades' Review*.

Donaldson and Burn's Suburban Farming.

SUBURBAN FARMING. A Treatise on the Laying Out and Cultivation of Farms adapted to the produce of Milk, Butter and Cheese, Eggs, Poultry, and Pigs. By the late Professor JOHN DONALDSON. With considerable Additions, Illustrating the more Modern Practice, by R. SCOTT BURN. With Illustrations. Second Edition. 12mo, 4s. cloth boards.

Modern Farming.

OUTLINES OF MODERN FARMING. By R. SCOTT BURN. Soils, Manures, and Crops—Farming and Farming Economy—Cattle, Sheep, and Horses—Management of the Dairy, Pigs, and Poultry—Utilisation of Town Sewage, Irrigation, &c. New Edition. In 1 vol. 1250 pp., half-bound, profusely illustrated, 12s.

"There is sufficient stated within the limits of this treatise to prevent a farmer from going far wrong in any of his operations."—*Observer*.

Amateur Farming.

THE LESSONS OF MY FARM: a Book for Amateur Agriculturists, being an Introduction to Farm Practice, in the Culture of Crops, the Feeding of Cattle, Management of the Dairy, Poultry, Pigs, &c. By R. SCOTT BURN. With numerous Illus. Fcp. 6s. cl.

"A complete introduction to the whole round of farming practice."—*John Bull*.

The Management of Estates.

LANDED ESTATES MANAGEMENT: Treating of the Varieties of Lands, Methods of Farming, the Setting-out of Farms, Construction of Roads and Farm Buildings, of Waste or Unproductive Lands, Irrigation, Drainage, &c. By R. SCOTT BURN. Second Edition. 12mo, 3s. cloth.

"A complete and comprehensive outline of the duties appertaining to the management of landed estates."—*Journal of Forestry*.

The Management of Farms.

OUTLINES OF FARM MANAGEMENT, and the Organization of Farm Labour. Treating of the General Work of the Farm, Field, and Live Stock, Details of Contract Work, Specialties of Labour, Economical Management of the Farmhouse and Cottage, Domestic Animals, &c. By ROBERT SCOTT BURN. 12mo, 3s.

Management of Estates and Farms.

LANDED ESTATES AND FARM MANAGEMENT. By R. SCOTT BURN, Author of "Outlines of Modern Farming," Editor of "The Complete Grazier," &c. With Illustrations. Consisting of the above Two Works in One vol., 6s. half-bound.

English Agriculture.

THE FIELDS OF GREAT BRITAIN. A Text-book of Agriculture, adapted to the Syllabus of the Science and Art Department. For Elementary and Advanced Students. By HUGH CLEMENTS (Board of Trade). With an Introduction by H. KAINS-JACKSON. 18mo, 2s. 6d. cloth. [Just published.]

"A clearly written description of the ordinary routine of English farm-life."—*Land*.

"A carefully written text-book of Agriculture."—*Athenæum*.

"A most comprehensive volume, giving a mass of information."—*Agricultural Economist*.

Kitchen Gardening.

KITCHEN GARDENING MADE EASY. Showing how to prepare and lay out the ground, the best means of cultivating every known Vegetable and Herb, etc. By GEORGE M. F. GLENNY. 12mo, 2s. cloth boards.

Culture of Fruit Trees.

FRUIT TREES, the Scientific and Profitable Culture of. From the French of DU BREUIL, revised by GEO. GLENNY. 12mo, 4s.

Good Gardening.

A PLAIN GUIDE TO GOOD GARDENING; or, How to Grow Vegetables, Fruits, and Flowers. With Practical Notes on Soils, Manures, Seeds, Planting, Laying-out of Gardens and Grounds, &c. By S. WOOD. Third Edition. Cr. 8vo, 5s. cloth.

"A very good book, and one to be highly recommended as a practical guide. The practical directions are excellent."—*Athenæum*.

Gainful Gardening.

MULTUM-IN-PARVO GARDENING; or, How to make One Acre of Land produce £620 a year, by the Cultivation of Fruits and Vegetables; also, How to Grow Flowers in Three Glass Houses, so as to realise £176 per annum clear Profit. By SAMUEL WOOD. 3rd Edition, revised. Cr. 8vo, 2s. cloth.

"We are bound to recommend it as not only suited to the case of the amateur and gentleman's gardener, but to the market grower."—*Gardener's Magazine*.

Gardening for Ladies.

THE LADIES' MULTUM-IN-PARVO FLOWER GARDEN, and Amateur's Complete Guide. By SAMUEL WOOD. Author of "Good Gardening," &c. With Illustrations. Crown 8vo, 3s. 6d. cloth. [Just published.]

Bulb Culture.

THE BULB GARDEN, or, How to Cultivate Bulbous and Tuberous-rooted Flowering Plants to Perfection. A Manual adapted for both the Professional and Amateur Gardener. By SAMUEL WOOD, Author of "Good Gardening," etc. With Coloured Illustrations and Wood Engravings. Cr. 8vo, 3s. 6d. cloth.

Tree Planting.

THE TREE PLANTER AND PLANT PROPAGATOR: Being a Practical Manual on the Propagation of Forest Trees, Fruit Trees, Flowering Shrubs, Flowering Plants, Pot Herbs, &c. Numerous Illustrations. By SAMUEL WOOD. 12mo, 2s. 6d. cloth.

Tree Pruning.

THE TREE PRUNER: Being a Practical Manual on the Pruning of Fruit Trees. Including also their Training and Renovation, also treating of the Pruning of Shrubs, Climbers, and Flowering Plants. By SAMUEL WOOD. 12mo, 2s. 6d. cloth.

Tree Planting, Pruning, & Plant Propagation.

THE TREE PLANTER, PROPAGATOR, AND PRUNER. By SAMUEL WOOD, Author of "Good Gardening," &c. Consisting of the above Two Works in One Vol., 5s. half-bound.

Potato Culture.

POTATOES, HOW TO GROW AND SHOW THEM: A Practical Guide to the Cultivation and General Treatment of the Potato. By JAMES PINK. With Illustrations. Cr. 8vo, 2s. cl.

Hudson's Tables for Land Valuers.

THE LAND VALUER'S BEST ASSISTANT: being Tables, on a very much improved Plan, for Calculating the Value of Estates. With Tables for reducing Scotch, Irish, and Provincial Customary Acres to Statute Measure, &c. By R. HUDSON, C.E. New Edition, royal 32mo, leather, gilt edges, elastic band, 4s.

Ewart's Land Improver's Pocket-Book.

THE LAND IMPROVER'S POCKET-BOOK OF FORMULÆ, TABLES, and MEMORANDA, required in any Computation relating to the Permanent Improvement of Landed Property. By JOHN EWART, Land Surveyor and Agricultural Engineer. Royal 32mo, oblong, leather, gilt edges, with elastic band, 4s.

Complete Agricultural Surveyor's Pocket-Book.

THE LAND VALUER'S AND LAND IMPROVER'S COMPLETE POCKET-BOOK; consisting of the above two works bound together, leather, gilt edges, with strap, 7s. 6d.

"We consider Hudson's book to be the best ready-reckoner on matters relating to the valuation of land and crops we have ever seen, and its combination with Mr. Ewart's work greatly enhances the value and usefulness of the latter-mentioned. It is most useful as a manual for reference."—*North of England Farmer.*

'A Complete Epitome of the Laws of this Country.'

EVERY MAN'S OWN LAWYER; a Handy-Book of the Principles of Law and Equity. By A BARRISTER. New Edition, much enlarged. Corrected to the end of last Session. With Notes and References to the Authorities. Crown 8vo, cloth, price, 6s. 8d. (saved at every consultation).

COMPRISING THE RIGHTS AND WRONGS OF INDIVIDUALS, MERCANTILE AND COMMERCIAL LAW, CRIMINAL LAW, PARISH LAW, COUNTY COURT LAW, GAME AND FISHERY LAWS, POOR MEN'S LAW, THE LAWS OF

BANKRUPTCY—BILLS OF EXCHANGE—
CONTRACTS AND AGREEMENTS—COPY-
RIGHT—DOWER AND DIVORCE—ELEC-
TIONS AND REGISTRATION—INSURANCE
—LIBEL AND SLANDER—MORTGAGES—

SETTLEMENTS—STOCK EXCHANGE PRACTICE—TRADE MARKS AND PATENTS—
TRESPASS, NUISANCES, ETC.—TRANSFER
OF LAND, ETC.—WARRANTY—WILLS
AND AGREEMENTS, ETC.

Also Law for Landlord and Tenant—
Master and Servant—Workmen and Ap-
prentices—Heirs, devisees, and Lega-
tees—Husband and Wife—Executors
and Trustees—Guardian and Ward—
Married Women and Infants—Partners
and Agents—Lender and Borrower—
Debtor and Creditor—Purchaser and
Vendor—Companies and Associations

—Friendly Societies—Clergymen, Church-
wardens—Medical Practitioners, &c.—
Bankers—Farmers—Contractors—Stock
and Share Brokers—Sportsmen and Game-
keepers—Farriers and Horse-Dealers—
Auctioneers, House-Agents—Innkeepers,
&c.—Pawnbrokers—Surveyors—Rail-
ways and Carriers, &c., &c.

"No Englishman ought to be without this book."—*Engineer*.
"What it professes to be—a complete epitome of the laws of this country, thoroughly
intelligible to non-professional readers. The book is a handy one to have in readiness
when some knotty point requires ready solution."—*Bell's Life*.

"A useful and concise epitome of the law."—*Law Magazine*.

Auctioneer's Assistant.

THE APPRAISER, AUCTIONEER, BROKER, HOUSE
AND ESTATE AGENT, AND VALUER'S POCKET AS-
SISTANT, for the Valuation for Purchase, Sale, or Renewal of
Leases, Annuities, and Reversions, and of property generally;
with Prices for Inventories, &c. By JOHN WHEELER, Valuer, &c.

Fourth Edition, enlarged, by C. NORRIS. Royal 32mo, cloth, 5s.

"A concise book of reference, containing a clearly-arranged list of prices for
inventories, a practical guide to determine the value of furniture, &c."—*Standard*.

Auctioneering.

AUCTIONEERS: THEIR DUTIES AND LIABILITIES.

By ROBERT SQUIBBS, Auctioneer. Demy 8vo, 10s. 6d. cloth.

House Property.

HANDBOOK OF HOUSE PROPERTY: a Popular and Prac-
tical Guide to the Purchase, Mortgage, Tenancy, and Compulsory
Sale of Houses and Land; including the Law of Dilapidations and
Fixtures, &c. By E. L. TARBUCK. 2nd Edit. 12mo, 3s. 6d. cloth.

"We are glad to be able to recommend it."—*Builder*.

"The advice is thoroughly practical."—*Law Journal*.

Metropolitan Rating.

METROPOLITAN RATING: a Summary of the Appeals
heard before the Court of General Assessment Sessions at West-
minster, in the years 1871–80 inclusive. Containing a large mass
of very valuable information with respect to the Rating of Rail-
ways, Gas and Waterworks, Tramways, Wharves, Public Houses,
&c. By EDWARD and A. L. RYDE. 8vo, 12s. 6d. [Just published.]

Weale's Rudimentary Series.



PHILADELPHIA, 1876.
THE PRIZE MEDAL

Was awarded to the Publishers for
Books: Rudimentary, Scientific,
"WEALE'S SERIES," ETC.



A NEW LIST OF WEALE'S SERIES RUDIMENTARY SCIENTIFIC, EDUCATIONAL, AND CLASSICAL.

Comprising nearly Three Hundred and Fifty distinct works in almost every department of Science, Art, and Education, recommended to the notice of Engineers, Architects, Builders, Artisans, and Students generally, as well as to those interested in Workmen's Libraries, Literary and Scientific Institutions, Colleges, Schools, Science Classes, &c., &c.

"WEALE'S SERIES includes Text-Books on almost every branch of Science and Industry, comprising such subjects as Agriculture, Architecture and Building, Civil Engineering, Fine Arts, Mechanics and Mechanical Engineering, Physical and Chemical Science, and many miscellaneous Treatises. The whole are constantly undergoing revision, and new editions, brought up to the latest discoveries in scientific research, are constantly issued. The prices at which they are sold are as low as their excellence is assured."—*American Literary Gazette*.

"Amongst the literature of technical education, WEALE'S SERIES has ever enjoyed a high reputation, and the additions being made by Messrs. CROSBY LOCKWOOD & Co. render the series even more complete, and bring the information upon the several subjects down to the present time."—*Mining Journal*.

"It is impossible to do otherwise than bear testimony to the value of WEALE'S SERIES."—*Engineer*.

"Everybody—even that outrageous nuisance 'Every Schoolboy'—knows the merits of 'WEALE'S RUDIMENTARY SERIES.' Any persons wishing to acquire knowledge cannot do better than look through Weale's Series and get all the books they require. The Series is indeed an inexhaustible mine of literary wealth."—*The Metropolitan*.

"WEALE'S SERIES has become a standard as well as an unrivalled collection of treatises in all branches of art and science."—*Public Opinion*.



LONDON, 1862.
THE PRIZE MEDAL

Was awarded to the Publishers of
"WEALE'S SERIES."



CROSBY LOCKWOOD & CO.,
7, STATIONERS' HALL COURT, LUDGATE HILL, LONDON, E.C.

WEALE'S RUDIMENTARY SCIENTIFIC SERIES.



. The volumes of this Series are freely Illustrated with Woodcuts, or otherwise, where requisite. Throughout the following List it must be understood that the books are bound in limp cloth, unless otherwise stated; *but the volumes marked with a ‡ may also be had strongly bound in cloth boards for 6d. extra.*

N.B.—In ordering from this List it is recommended, as a means of facilitating business and obviating error, to quote the numbers affixed to the volumes, as well as the titles and prices.

No. **ARCHITECTURE, BUILDING, ETC.**


16. **ARCHITECTURE—ORDERS**—The Orders and their Æsthetic Principles. By W. H. LEEDS. Illustrated. 1s. 6d.
17. **ARCHITECTURE—STYLES**—The History and Description of the Styles of Architecture of Various Countries, from the Earliest to the Present Period. By T. TALBOT BURY, F.R.I.B.A., &c. Illustrated. 2s.
. ORDERS AND STYLES OF ARCHITECTURE, in One Vol., 3s. 6d.
18. **ARCHITECTURE—DESIGN**—The Principles of Design in Architecture, as deducible from Nature and exemplified in the Works of the Greek and Gothic Architects. By E. L. GARBETT, Architect. Illustrated. 2s. 6d.
- *.* The three preceding Works, in One handsome Vol., half bound, entitled "MODERN ARCHITECTURE," price 6s.
22. **THE ART OF BUILDING**, Rudiments of. General Principles of Construction, Materials used in Building, Strength and Use of Materials, Working Drawings, Specifications, and Estimates. By E. DOBSON, 2s. ‡
23. **BRICKS AND TILES**, Rudimentary Treatise on the Manufacture of; containing an Outline of the Principles of Brickmaking. By EDW. DOBSON, M.R.I.B.A. With Additions by C. TOMLINSON, F.R.S. Illustrated, 3s. ‡
25. **MASONRY AND STONECUTTING**, Rudimentary Treatise on; in which the Principles of Masonic Projection and their application to the Construction of Curved Wing-Walls, Domes, Oblique Bridges, and Roman and Gothic Vaulting, are concisely explained. By EDWARD DOBSON, M.R.I.B.A., &c. Illustrated with Plates and Diagrams. 2s. 6d. ‡
44. **FOUNDATIONS AND CONCRETE WORKS**, a Rudimentary Treatise on; containing a Synopsis of the principal cases of Foundation Works, with the usual Modes of Treatment, and Practical Remarks on Footings, Planking, Sand, Concrete, Béton, Pile-driving, Caissons, and Cofferdams. By E. DOBSON, M.R.I.B.A., &c. Fourth Edition, revised by GEORGE DODD, C.E. Illustrated. 1s. 6d.
42. **COTTAGE BUILDING**. By C. BRUCE ALLEN, Architect. Ninth Edition, revised and enlarged. Numerous Illustrations. 1s. 6d.
45. **LIMES, CEMENTS, MORTARS, CONCRETES, MASTICS, PLASTERING**, &c. By G. R. BURNELL, C.E. Eleventh Edition. 1s. 6d.
57. **WARMING AND VENTILATION**, a Rudimentary Treatise on; being a concise Exposition of the General Principles of the Art of Warming and Ventilating Domestic and Public Buildings, Mines, Lighthouses, Ships, &c. By CHARLES TOMLINSON, F.R.S., &c. Illustrated. 3s.
- 83*.* **CONSTRUCTION OF DOOR LOCKS**. Compiled from the Papers of A. C. HOBBS, Esq., of New York, and Edited by CHARLES TOMLINSON, F.R.S. To which is added, a Description of Fenby's Patent Locks, and a Note upon IRON SAFES by ROBERT MALLETT, M.I.C.E. Illus. 2s. 6d.
111. **ARCHES, PIERS, BUTTRESSES, &c.**: Experimental Essays on the Principles of Construction in; made with a view to their being useful to the Practical Builder. By WILLIAM BLAND. Illustrated. 1s. 6d.

 The ‡ indicates that these vols. may be had strongly bound at 6d. extra.

LONDON: CROSBY LOCKWOOD AND CO.,

Architecture, Building, etc., continued.

116. **THE ACOUSTICS OF PUBLIC BUILDINGS;** or, The Principles of the Science of Sound applied to the purposes of the Architect and Builder. By T. ROGER SMITH, M.K.I.B.A., Architect. Illustrated. 1s. 6d.
124. **CONSTRUCTION OF ROOFS,** Treatise on the, as regards Carpentry and Joinery. Deduced from the Works of ROBISON, PRICE, and TREDGOLD. Illustrated. 1s. 6d.
127. **ARCHITECTURAL MODELLING IN PAPER,** the Art of. By T. A. RICHARDSON, Architect. Illustrated. 1s. 6d.
128. **VITRUVIUS—THE ARCHITECTURE OF MARCUS VITRUVIUS POLLO.** In Ten Books. Translated from the Latin by JOSEPH GWILT, F.S.A., F.R.A.S. With 23 Plates. 3s.
130. **GRECIAN ARCHITECTURE,** An Inquiry into the Principles of Beauty in; with an Historical View of the Rise and Progress of the Art in Greece. By the EARL OF ABERDEEN. 1s.
- *. * *The two preceding Works in One handsome Vol., half bound, entitled "ANCIENT ARCHITECTURE," price 6s.*
- 16, 17, 18, 128, and 130, in *One Vol., entitled "ANCIENT AND MODERN ARCHITECTURE," half bound, 12s.*
132. **DWELLING-HOUSES,** a Rudimentary Treatise on the Erection of. Illustrated by a Perspective View, Plans, Elevations, and Sections of a pair of Semi-detached Villas, with the Specification, Quantities, and Estimates, and every requisite detail, in sequence, for their Construction and Finishing. By S. H. BROOKS, Architect. New Edition, with Plates. 2s. 6d.‡
156. **QUANTITIES AND MEASUREMENTS,** How to Calculate and Take them in Bricklayers', Masons', Plasterers', Plumbers', Painters', Paper-hangers', Gilders', Smiths', Carpenters', and Joiners' Work. By A. C. BEATON, Architect and Surveyor. New and Enlarged Edition. Illus. 1s. 6d.
175. **LOCKWOOD & CO.'S BUILDER'S AND CONTRACTOR'S PRICE BOOK,** for 1881, containing the latest Prices of all kinds of Builders' Materials and Labour, and of all Trades connected with Building: Lists of the Members of the Metropolitan Board of Works, of Districts, District Officers, and District Surveyors, and the Metropolitan Bye-laws. Edited by FRANCIS T. W. MILLER, Architect and Surveyor. 3s. 6d.; half bound, 4s.
182. **CARPENTRY AND JOINERY—THE ELEMENTARY PRINCIPLES OF CARPENTRY.** Chiefly composed from the Standard Work of THOMAS TREDGOLD, C.E. With Additions from the Works of the most Recent Authorities, and a TREATISE ON JOINERY by E. WYNDHAM TARN, M.A. Numerous Illustrations. 3s. 6d.‡
- 182*. **CARPENTRY AND JOINERY. ATLAS** of 35 Plates to accompany the foregoing book. With Descriptive Letterpress. 4to. 6s. cloth boards, 7s. 6d.
187. **HINTS TO YOUNG ARCHITECTS.** By GEORGE WIGHTWICK. New, Revised, and enlarged Edition. By G. HUSKISSON GUILLAUME, Architect. With numerous Woodcuts. 3s. 6d.‡
188. **HOUSE PAINTING, GRAINING, MARBLING, AND SIGN WRITING:** A Practical Manual of, containing full information on the Processes of House-Painting, the Formation of Letters and Practice of Sign-Writing, the Principles of Decorative Art, a Course of Elementary Drawing for House-Painters, Writers, &c., &c. With 9 Coloured Plates of Woods and Marbles, and nearly 150 Wood Engravings. By ELLIS A. DAVIDSON. Third Edition, carefully revised. 5s. cloth limp; 6s. cloth boards.
189. **THE RUDIMENTS OF PRACTICAL BRICKLAYING.** In Six Sections: General Principles; Arch Drawing, Cutting, and Setting; Pointing; Paving, Tiling, Materials; Slating and Plastering; Practical Geometry, Mensuration, &c. By ADAM HAMMOND. Illustrated. 1s. 6d.
191. **PLUMBING.** A Text-Book to the Practice of the Art or Craft of the Plumber. With Chapters upon House Drainage, embodying the latest Improvements. Second Edition, enlarged. Containing 300 Illustrations. By W. P. BUCHAN, Sanitary Engineer. 3s. 6d.‡

 The ‡ indicates that these vols. may be had strongly bound at 6d. extra.

7, STATIONERS' HALL COURT, LUDGATE HILL, E.C.

Architecture, Building, etc., continued.

192. **THE TIMBER IMPORTER'S, TIMBER MERCHANT'S, and BUILDER'S STANDARD GUIDE**; comprising copious and valuable Memoranda for the Retailer and Builder. By RICHARD E. GRANDY. Second Edition. Revised. 3s.†
205. **THE ART OF LETTER PAINTING MADE EASY.** By J. G. BADENOCH. Illustrated with 12 full-page Engravings of Examples. 1s.
206. **A BOOK ON BUILDING, Civil and Ecclesiastical**, including CHURCH RESTORATION. With the Theory of Domes and the Great Pyramid, &c. By Sir EDWARD BECKETT, Bart., LL.D., Q.C., F.R.A.S. Second Edition, enlarged, 4s. 6d.†

CIVIL ENGINEERING, ETC.

219. **CIVIL ENGINEERING.** By HENRY LAW, M.Inst. C.E. Including a Treatise on HYDRAULIC ENGINEERING by GEO. R. BURNELL, M.Inst.C.E. Sixth Edition, revised, with LARGE ADDITIONS ON RECENT PRACTICE IN CIVIL ENGINEERING, by D. KINNAR CLARK, M.Inst. C.E., Author of "Tramways: Their Construction," &c. 6s. 6d., Cloth boards, 7s. 6d.
29. **THE DRAINAGE OF DISTRICTS AND LANDS.** By G. DRYSDALE DEMPSEY, C.E. (New Edition in preparation.)
30. **THE DRAINAGE OF TOWNS AND BUILDINGS.** By G. DRYSDALE DEMPSEY, C.E. (New Edition in preparation.)
31. **WELL-DIGGING, BORING, AND PUMP-WORK.** By JOHN GEORGE SWINDELL, A.R.I.B.A. New Edition, by G. R. BURNELL, C.E. 1s. 6d.
35. **THE BLASTING AND QUARRYING OF STONE**, for Building and other Purposes. With Remarks on the Blowing up of Bridges. By Gen. Sir JOHN BURGOYNE, Bart., K.C.B. Illustrated. 1s. 6d.
62. **RAILWAY CONSTRUCTION**, Elementary and Practical Instructions on the Science of. By Sir M. STEPHENSON, C.E. New Edition, by EDWARD NUGENT, C.E. With Statistics of the Capital, Dividends, and Working of Railways in the United Kingdom. By E. D. CHATTAWAY. 4s.
- 80*. **EMBANKING LANDS FROM THE SEA**, the Practice of. Treated as a Means of Profitable Employment for Capital. With Examples and Particulars of actual Embankments, &c. By J. WIGGINS, F.G.S. 2s.
81. **WATER WORKS**, for the Supply of Cities and Towns. With a Description of the Principal Geological Formations of England as influencing Supplies of Water; and Details of Engines and Pumping Machinery for raising Water. By SAMUEL HUGHES, F.G.S., C.E. New Edition. 4s.†
117. **SUBTERRANEAN SURVEYING**, an Elementary and Practical Treatise on. By THOMAS FENWICK. Also the Method of Conducting Subterranean Surveys without the Use of the Magnetic Needle, and other Modern Improvements. By THOMAS BAKER, C.E. Illustrated. 2s. 6d.†
118. **CIVIL ENGINEERING IN NORTH AMERICA**, a Sketch of. By DAVID STEVENSON, F.R.S.E., &c. Plates and Diagrams. 3s.
197. **ROADS AND STREETS (THE CONSTRUCTION OF)**, in two Parts: I. THE ART OF CONSTRUCTING COMMON ROADS, by HENRY LAW, C.E., revised and condensed by D. KINNAR CLARK, C.E.; II. RECENT PRACTICE, including pavements of Stone, Wood, and Asphalte. Second Edition, revised, by D. K. CLARK, M.I.C.E. 4s. 6d.†
203. **SANITARY WORK IN THE SMALLER TOWNS AND IN VILLAGES.** Comprising:—1. Some of the more Common Forms of Nuisance and their Remedies; 2. Drainage; 3. Water Supply. A useful book for Members of Local Boards and Rural Sanitary Authorities, Health Officers, Engineers, Surveyors, &c. By CHARLES SLAGG, A.I.C.E. 2s. 6d.†
212. **THE CONSTRUCTION OF GAS-WORKS**, and the Manufacture and Distribution of Coal Gas. Originally written by SAMUEL HUGHES, C.E. Sixth Edition, re-written and much Enlarged by WILLIAM RICHARDS, C.E. With 72 Illustrations. 4s. 6d.† [Just published.]
213. **PIONEER ENGINEERING.** A Treatise on the Engineering Operations connected with the Settlement of Waste Lands in New Countries. By EDWARD DOBSON, Assoc. Inst. C.E. 4s. 6d.†

† The † indicates that these vols. may be had strongly bound at 6d. extra.

LONDON: CROSBY LOCKWOOD AND CO.,

MECHANICAL ENGINEERING, ETC.

33. *CRANES*, the Construction of, and other Machinery for Raising Heavy Bodies for the Erection of Buildings, and for Hoisting Goods. By JOSEPH GLYNN, F.R.S., &c. Illustrated. 1s. 6d.
34. *THE STEAM ENGINE*, a Rudimentary Treatise on. By Dr. LARDNER. Illustrated. 1s. 6d.
59. *STEAM BOILERS*: their Construction and Management. By R. ARMSTRONG, C.E. Illustrated. 1s. 6d.
67. *CLOCKS, WATCHES, AND BELLS*, a Rudimentary Treatise on. By Sir EDMUND BECKETT (late EDMUND BECKETT DENISON), LL.D., Q.C. A New, Revised, and considerably Enlarged Edition (the 6th), with very numerous Illustrations. 4s. 6d. cloth limp; 5s. 6d. cloth boards, gilt.
82. *THE POWER OF WATER*, as applied to drive Flour Mills, and to give motion to Turbines and other Hydrostatic Engines. By JOSEPH GLYNN, F.R.S., &c. New Edition, Illustrated. 2s. 4d.
98. *PRACTICAL MECHANISM*, the Elements of; and Machine Tools. By T. BAKER, C.E. With Remarks on Tools and Machinery, by J. NASMYTH, C.E. Plates. 2s. 6d. 4d.
114. *MACHINERY*, Elementary Principles of, in its Construction and Working. By C. D. ABEL, C.E. 1s. 6d.
139. *THE STEAM ENGINE*, a Treatise on the Mathematical Theory of, with Rules and Examples for Practical Men. By T. BAKER, C.E. 1s. 6d.
162. *THE BRASS FOUNDER'S MANUAL*; Instructions for Modelling, Pattern-Making, Moulding, Turning, Filing, Burnishing, Bronzing, &c. With copious Receipts, &c. By WALTER GRAHAM. 2s. 4d.
164. *MODERN WORKSHOP PRACTICE*, as applied to Marine, Land, and Locomotive Engines, Floating Docks, Dredging Machines, Bridges, Cranes, Ship-building, &c., &c. By J. G. WINTON. Illustrated. 3s. 4d.
165. *IRON AND HEAT*, exhibiting the Principles concerned in the Construction of Iron Beams, Pillars, and Bridge Girders, and the Action of Heat in the Smelting Furnace. By J. ARMOUR, C.E. 2s. 6d. 4d.
166. *POWER IN MOTION*: Horse-Power, Toothed-Wheel Gearing, Long and Short Driving Bands, and Angular Forces. By J. ARMOUR, 2s. 6d. 4d.
167. *IRON BRIDGES, GIRDERS, ROOFS, AND OTHER WORKS*. By FRANCIS CAMPIN, C.E. 2s. 6d. 4d.
171. *THE WORKMAN'S MANUAL OF ENGINEERING DRAWING*. By JOHN MAXTON, Engineer. Fourth Edition. Illustrated with 7 Plates and nearly 350 Woodcuts. 3s. 6d. 4d.
190. *STEAM AND THE STEAM ENGINE*, Stationary and Portable. Being an extension of Mr. John Sewell's "Treatise on Steam." By D. K. CLARK, M.I.C.E. Second Edition, revised. 3s. 6d. 4d.
200. *FUEL*, its Combustion and Economy. By C. W. WILLIAMS, A.I.C.E. With extensive additions on Recent Practice in the Combustion and Economy of Fuel—Coal, Coke, Wood, Peat, Petroleum, &c.—by D. K. CLARK, M.I.C.E. 2nd Edition. 3s. 6d. 4d.
202. *LOCOMOTIVE ENGINES*. By G. D. DEMPSEY, C.E.; with large additions treating of the Modern Locomotive, by D. KINNAR CLARK, M.I.C.E. 3s. 4d.
211. *THE BOILERMAKER'S ASSISTANT* in Drawing, Tempering, and Calculating Boiler and Tank Work. By JOHN COURTNEY, Practical Boiler Maker. Edited by D. K. CLARK, C.E. 100 Illustrations. 2s.
216. *MATERIALS AND CONSTRUCTION*; A Theoretical and Practical Treatise on the Strains, Designing, and Erection of Works of Construction. By FRANCIS CAMPIN, C.E. 3s. 4d. [Just published.]
217. *SEWING MACHINERY*, being a Practical Manual of the Sewing Machine; comprising its History and Details of its Construction, with full Technical Directions for the Adjusting of Sewing Machines. By J. W. URQUHART, C.E. 2s. 4d. [Just published.]
223. *MECHANICAL ENGINEERING*, A Practical Treatise on. Comprising Metallurgy, Moulding, Casting, Forging, Tools, Workshop Machinery, Mechanical Manipulation, Manufacture of the Steam Engine, &c. By FRANCIS CAMPIN, C.E. 2s. 6d. 4d. [Just published.]

 The 4 indicates that these vols. may be had strongly bound at 6d. extra.

SHIPBUILDING, NAVIGATION, MARINE ENGINEERING, ETC.

51. *NAVAL ARCHITECTURE*, the Rudiments of; or an Exposition of the Elementary Principles of the Science, and their Practical Application to Naval Construction. Compiled for the Use of Beginners. By JAMES PRAKES, School of Naval Architecture, H.M. Dockyard, Portsmouth. Fourth Edition, corrected, with Plates and Diagrams. 2s. 6d.‡
- 53°. *SHIPS FOR OCEAN AND RIVER SERVICE*, Elementary and Practical Principles of the Construction of. By HAKOX A. SOMMERFELD, Surveyor of the Royal Norwegian Navy. With an Appendix. 1s. 6d.
- 53°. *AN ATLAS OF ENGRAVINGS* to Illustrate the above. Twelve large folding plates. Royal 4to, cloth. 7s. 6d.
54. *MASTING, MAST-MAKING, AND RIGGING OF SHIPS*, Rudimentary Treatise on. Also Tables of Spars, Rigging, Blocks; Chain, Wire, and Hemp Ropes, &c., relative to every class of vessels. With an Appendix of Dimensions of Masts and Yards of the Royal Navy. By ROBERT KIPPING, N.A. Fourteenth Edition. Illustrated. 2s.‡
- 54°. *IRON SHIP-BUILDING*. With Practical Examples and Details for the Use of Ship Owners and Ship Builders. By JOHN GRANTHAM, Consulting Engineer and Naval Architect. 5th Edition, with Additions. 4s.
- 54°. *AN ATLAS OF FORTY PLATES* to Illustrate the above. Fifth Edition. Including the latest Examples, such as H.M. Steam Frigates "Warrior," "Hercules," "Bellerophon;" H.M. Troop Ship "Serapis," Iron Floating Dock, &c., &c. 4to, boards. 38s.
55. *THE SAILOR'S SEA BOOK: a Rudimentary Treatise on Navigation*. Part I. How to Keep the Log and Work it off. Part II. On Finding the Latitude and Longitude. By JAMES GREENWOOD, B.A. To which are added, the Deviation and Error of the Compass; Great Circle Sailing; the International (Commercial) Code of Signals; the Rule of the Road at Sea; Rocket and Mortar Apparatus for Saving Life; the Law of Storms; and a Brief Dictionary of Sea Terms. With numerous Woodcuts and Coloured Plates of Flags. New, thoroughly revised and much enlarged edition. By W. H. ROSSER. 2s. 6d.‡
80. *MARINE ENGINES, AND STEAM VESSELS*, a Treatise on. Together with Practical Remarks on the Screw and Propelling Power, as used in the Royal and Merchant Navy. By ROBERT MURRAY, C.E., Engineer-Surveyor to the Board of Trade. With a Glossary of Technical Terms, and their Equivalents in French, German, and Spanish. Seventh Edition, revised and enlarged. Illustrated. 3s.‡
- 83bis. *THE FORMS OF SHIPS AND BOATS: Hints, Experimentally Derived, on some of the Principles regulating Ship-building*. By W. BLAND. Seventh Edition, revised, with numerous Illustrations and Models. 1s. 6d.
99. *NAVIGATION AND NAUTICAL ASTRONOMY*, in Theory and Practice. With Attempts to facilitate the Finding of the Time and the Longitude at Sea. By J. R. YOUNG, formerly Professor of Mathematics in Belfast College. Illustrated. 2s. 6d.
- 100°. *TABLES* intended to facilitate the Operations of Navigation and Nautical Astronomy, as an Accompaniment to the above Book. By J. R. YOUNG. 1s. 6d.
106. *SHIPS' ANCHORS*, a Treatise on. By G. COTSELL, N.A. 1s. 6d.
149. *SAILS AND SAIL-MAKING*, an Elementary Treatise on. With Draughting, and the Centre of Effort of the Sails. Also, Weights and Sizes of Ropes: Mastng, Rigging, and Sails of Steam Vessels, &c., &c. Eleventh Edition, enlarged, with an Appendix. By ROBERT KIPPING, N.A., Sailmaker, Quayside, Newcastle. Illustrated. 2s. 6d.‡
155. *THE ENGINEER'S GUIDE TO THE ROYAL AND MERCANTILE NAVIES*. By a PRACTICAL ENGINEER. Revised by D. F. M'CARTHY, late of the Ordnance Survey Office, Southampton. 3s.
- 55 & 204. *PRACTICAL NAVIGATION*. Consisting of The Sailor's Sea-Book. By JAMES GREENWOOD and W. H. ROSSER. Together with the requisite Mathematical and Nautical Tables for the Working of the Problems. By HENRY LAW, C.E., and J. R. YOUNG, formerly Professor of Mathematics in Belfast College. Illustrated with numerous Wood Engravings and Coloured Plates. 7s. Strongly half-bound in leather.

‡ The ‡ indicates that these vols. may be had strongly bound at 6d. extra.

PHYSICAL SCIENCE, NATURAL PHILOSOPHY, ETC.

1. **CHEMISTRY**, for the Use of Beginners. By Professor GEORGE FOWNES, F.R.S. With an Appendix on the Application of Chemistry to Agriculture. 1s.
2. **NATURAL PHILOSOPHY**, Introduction to the Study of; for the Use of Beginners. By C. TOMLINSON, Lecturer on Natural Science in King's College School, London. Woodcuts. 1s. 6d.
4. **MINERALOGY**, Rudiments of; a concise View of the Properties of Minerals. By A. RAMSAY, Jun. Woodcuts and Steel Plates. 3s. 1/2
6. **MECHANICS**, Rudimentary Treatise on; being a concise Exposition of the General Principles of Mechanical Science, and their Applications. By CHARLES TOMLINSON. Illustrated. 1s. 6d.
7. **ELECTRICITY**; showing the General Principles of Electrical Science, and the purposes to which it has been applied. By Sir W. SNOW HARRIS, F.R.S., &c. With Additions by R. SABINE, C.E., F.S.A. 1s. 6d.
- 7*. **GALVANISM**, Rudimentary Treatise on, and the General Principles of Animal and Voltaic Electricity. By Sir W. SNOW HARRIS. New Edition, with considerable Additions by ROBERT SABINE, C.E., F.S.A. 1s. 6d.
8. **MAGNETISM**; being a concise Exposition of the General Principles of Magnetical Science, and the Purposes to which it has been applied. By Sir W. SNOW HARRIS. New Edition, revised and enlarged by H. M. NOAD, Ph.D., Vice-President of the Chemical Society, Author of "A Manual of Electricity," &c., &c. With 165 Woodcuts. 3s. 6d. 1/2
11. **THE ELECTRIC TELEGRAPH**; its History and Progress; with Descriptions of some of the Apparatus. By R. SABINE, C.E., F.S.A. 3s.
12. **PNEUMATICS**, for the Use of Beginners. By CHARLES TOMLINSON. Illustrated. 1s. 6d.
72. **MANUAL OF THE MOLLUSCA**; a Treatise on Recent and Fossil Shells. By Dr. S. P. WOODWARD, A.L.S. Fourth Edition. With Appendix by RALPH TATE, A.L.S., F.G.S. With numerous Plates and 300 Woodcuts. 6s. 6d. Cloth boards, 7s. 6d.
- 79**. **PHOTOGRAPHY**, Popular Treatise on; with a Description of the Stereoscope, &c. Translated from the French of D. VAN MONCKHOVEN, by W. H. THORNTWHAITE, Ph.D. Woodcuts. 1s. 6d.
96. **ASTRONOMY**. By the Rev. R. MAIN, M.A., F.R.S., &c. New Edition, with an Appendix on "Spectrum Analysis." Woodcuts. 1s. 6d.
97. **STATICS AND DYNAMICS**, the Principles and Practice of; embracing also a clear development of Hydrostatics, Hydrodynamics, and Central Forces. By T. BAKER, C.E. 1s. 6d.
138. **TELEGRAPH**, Handbook of the; a Manual of Telegraphy, Telegraph Clerks' Remembrancer, and Guide to Candidates for Employment in the Telegraph Service. By R. BOND. Fourth Edition, revised and enlarged: to which is appended, QUESTIONS on MAGNETISM, ELECTRICITY, and PRACTICAL TELEGRAPHY, for the Use of Students, by W. MCGREGOR, First Assistant Supnt., Indian Gov. Telegraphs. 3s. 1/2
143. **EXPERIMENTAL ESSAYS**. By CHARLES TOMLINSON. I. On the Motions of Camphor on Water. II. On the Motion of Camphor towards the Light. III. History of the Modern Theory of Dew. Woodcuts. 1s.
173. **PHYSICAL GEOLOGY**, partly based on Major-General PORTLOCK's "Rudiments of Geology." By RALPH TATE, A.L.S., &c. Woodcuts. 2s.
174. **HISTORICAL GEOLOGY**, partly based on Major-General PORTLOCK's "Rudiments." By RALPH TATE, A.L.S., &c. Woodcuts. 2s. 6d.
173. **RUDIMENTARY TREATISE ON GEOLOGY**, Physical and Historical. Partly based on Major-General PORTLOCK's "Rudiments of Geology." By RALPH TATE, A.L.S., F.G.S., &c. In One Volume. 4s. 6d. 1/2
174. **ANIMAL PHYSICS**, Handbook of. By Dr. LARDNER, D.C.L., &c. formerly Professor of Natural Philosophy and Astronomy in University College, Lond. With 520 Illustrations. In One Vol. 7s. 6d., cloth boards.
184. * * Sold also in Two Parts, as follows:—
183. **ANIMAL PHYSICS**. By Dr. LARDNER. Part I., Chapters I.—VII. 4s.
184. **ANIMAL PHYSICS**. By Dr. LARDNER. Part II., Chapters VIII.—XVIII. 3s.

 The ‡ indicates that these vols. may be had strongly bound at 6d. extra.

MINING, METALLURGY, ETC.

117. **SUBTERRANEAN SURVEYING**, Elementary and Practical Treatise on, with and without the Magnetic Needle. By THOMAS FENWICK, Surveyor of Mines, and THOMAS BAKER, C.E. Illustrated. 2s. 6d.†
133. **METALLURGY OF COPPER**; an Introduction to the Methods of Seeking, Mining, and Assaying Copper, and Manufacturing its Alloys. By ROBERT H. LAMBORN, Ph.D. Woodcuts. 2s. 6d.†
134. **METALLURGY OF SILVER AND LEAD**. A Description of the Ores; their Assay and Treatment, and valuable Constituents. By Dr. R. H. LAMBORN. Woodcuts. 2s. 6d.†
135. **ELECTRO-METALLURGY**; Practically Treated. By ALEXANDER WATT, F.R.S.S.A. 7th Edition, revised, with important additions, including the Electro-Deposition of Nickel, &c. Woodcuts. 3s.†
172. **MINING TOOLS**, Manual of. For the Use of Mine Managers, Agents, Students, &c. By WILLIAM MORGANS. 2s. 6d.†
- 172*. **MINING TOOLS, ATLAS** of Engravings to illustrate the above, containing 235 Illustrations, drawn to Scale. 4to. 4s. 6d.; cloth boards, 6s.
176. **METALLURGY OF IRON**. Containing History of Iron Manufacture, Methods of Assay, and Analyses of Iron Ores, Processes of Manufacture of Iron and Steel, &c. By H. BAUERMAN, F.G.S. 4th Edition. 4s. 6d.†
180. **COAL AND COAL MINING**, A Rudimentary Treatise on. By WARINGTON W. SMYTH, M.A., F.R.S. Fifth Edition, revised and enlarged. With numerous Illustrations. 3s. 6d.† [Just published.]
195. **THE MINERAL SURVEYOR AND VALUER'S COMPLETE GUIDE**, with new Traverse Tables, and Descriptions of Improved Instruments; also the Correct Principles of Laying out and Valuing Mineral Properties. By WILLIAM LINTERN, Mining and Civil Engineer. 3s. 6d.†
214. **SLATE AND SLATE QUARRYING**, Scientific, Practical, and Commercial. By D. C. DAVIES, F.G.S., Mining Engineer, &c. With numerous Illustrations and Folding Plates. 3s.†
215. **THE GOLDSMITH'S HANDBOOK**, containing full Instructions for the Alloying and Working of Gold, including the Art of Alloying, Melting, Reducing, Colouring, Collecting, and Refining; Chemical and Physical Properties of Gold; with a New System of Mixing its Alloys; Solders, Enamels, &c. By GEORGE E. GER, Goldsmith and Silversmith. Second Edition, considerably enlarged. 3s.† [Just published.]
- THE SILVERSMITH'S HANDBOOK**, containing full Instructions for the Alloying and Working of Silver. By GEORGE E. GER. 3s.†
220. **MAGNETIC SURVEYING, AND ANGULAR SURVEYING**, with Records of the Peculiarities of Needle Disturbances. Compiled from the Results of carefully made Experiments. By WILLIAM LINTERN, Mining and Civil Engineer and Surveyor. 2s. [Just published.]

FINE ARTS.

20. **PERSPECTIVE FOR BEGINNERS**. Adapted to Young Students and Amateurs in Architecture, Painting, &c. By GEORGE PYNE. 2s.
40. **GLASS STAINING**; or, The Art of Painting on Glass. From & the German of Dr. GESSERT. With an Appendix on THE ART OF ENAMELLING, &c.; together with THE ART OF PAINTING ON GLASS. From the German of EMANUEL OTTO FROMBERG. In One Volume. 2s. 6d.
41. **MUSIC**, A Rudimentary and Practical Treatise on. With numerous Examples. By CHARLES CHILD SPENCER. 2s. 6d.
71. **PIANOFORTE**, The Art of Playing the. With numerous Exercises & Lessons. From the Best Masters, by CHARLES CHILD SPENCER. 3s. 6d.
181. **PAINTING POPULARLY EXPLAINED**, including Fresco, Oil, Mosaic, Water Colour, Water-Glass, Tempera, Encaustic, Miniature, Painting on Ivory, Vellum, Pottery, Enamel, Glass, &c. With Historical Sketches of the Progress of the Art by THOMAS JOHN GULLICK, assisted by JOHN LIMBS, F.S.A. Fourth Edition, revised and enlarged. 5s.†
186. **A GRAMMAR OF COLOURING**, applied to Decorative Painting and the Arts. By GEORGE FIELD. New Edition, enlarged and adapted to the Use of the Ornamental Painter and Designer. By ELLIS A. DAVIDSON. With two new Coloured Diagrams, &c. 3s.†

† The † indicates that these vols. may be had strongly bound at 6d. extra.


AGRICULTURE, GARDENING, ETC.

29. *THE DRAINAGE OF DISTRICTS AND LANDS.* By G. DRYSDALE DEMPSEY, C.E. [New Edition in preparation.]
66. *CLAY LANDS & LOAMY SOILS.* By Prof. DONALDSON. 1s.
131. *MILLER'S, MERCHANT'S, AND FARMER'S READY RECKONER*, for ascertaining at sight the value of any quantity of Corn, from One Bushel to One Hundred Quarters, at any given price, from £1 to £5 per Qt. With approximate values of Millstones, Millwork, &c. 1s.
140. *SOILS, MANURES, AND CROPS.* (Vol. 1. OUTLINES OF MODERN FARMING.) By R. SCOTT BURN. Woodcuts. 2s.
141. *FARMING & FARMING ECONOMY*, Notes, Historical and Practical, on. (Vol. 2. OUTLINES OF MODERN FARMING.) By R. SCOTT BURN. 3s.
142. *STOCK; CATTLE, SHEEP, AND HORSES.* (Vol. 3. OUTLINES OF MODERN FARMING.) By R. SCOTT BURN. Woodcuts. 2s. 6d.
145. *DAIRY, PIGS, AND POULTRY*, Management of the. By R. SCOTT BURN. With Notes on the Diseases of Stock. (Vol. 4. OUTLINES OF MODERN FARMING.) Woodcuts. 2s.
146. *UTILIZATION OF SEWAGE, IRRIGATION, AND RECLAMATION OF WASTE LAND.* (Vol. 5. OUTLINES OF MODERN FARMING.) By R. SCOTT BURN. Woodcuts. 2s. 6d.
- * * Nos. 140-1-2-5-6, in One Vol., handsomely half-bound, entitled "OUTLINES OF MODERN FARMING." By ROBERT SCOTT BURN. Price 12s.
177. *FRUIT TREES*, The Scientific and Profitable Culture of. From the French of DU BREUIL. Revised by GEO. GLENNY. 187 Woodcuts. 3s. 6d. ‡
198. *SHEEP; THE HISTORY, STRUCTURE, ECONOMY, AND DISEASES OF.* By W. C. SPOONER, M.R.V.C., &c. Fourth Edition, considerably enlarged; with numerous fine engravings, including some specimens of New and Improved Breeds. 366 pp. 3s. 6d. ‡
201. *KITCHEN GARDENING MADE EASY.* Showing how to prepare and lay out the ground, the best means of cultivating every known Vegetable and Herb, with cultural directions for the management of them all the year round. By GEORGE M.F. GLENNY, Author of "Floriculture," &c. 1s. 6d. ‡
207. *OUTLINES OF FARM MANAGEMENT, and the Organization of Farm Labour:* Treating of the General Work of the Farm; Field and Live Stock; Details of Contract Work; Specialities of Labour; Economical Management of the Farmhouse and Cottage, and their Domestic Animals. By ROBERT SCOTT BURN. 2s. 6d. ‡ [Just published.]
208. *OUTLINES OF LANDED ESTATES MANAGEMENT:* Treating of the Varieties of Lands, Methods of Farming, Farm Buildings, Irrigation, Drainage, &c. By R. SCOTT BURN. 2s. 6d. ‡
- * * Nos. 207 & 208 in One Vol., handsomely half-bound, entitled "OUTLINES OF LANDED ESTATES AND FARM MANAGEMENT." By R. SCOTT BURN. Price 6s.
209. *THE TREE PLANTER AND PLANT PROPAGATOR:* Being a Practical Manual on the Propagation of Forest Trees, Fruit Trees, Flowering Shrubs, Flowering Plants, Pot-Herbs, &c.; with numerous Illustrations of Grafting, Layering, Budding, Cuttings, &c., Useful Implements, Houses, Pits, &c. By SAMUEL WOOD. 2s. ‡ [Just published.]
210. *THE TREE PRUNER:* Being a Practical Manual on the Pruning of Fruit Trees, including also their Training and Renovation; also treating of the Pruning of Shrubs, Climbers and Flowering Plants. By SAMUEL WOOD. 2s. ‡ [Just published.]
- * * Nos. 209 & 210 in One Vol., handsomely half-bound, entitled "THE TREE PLANTER, PROPAGATOR AND PRUNER." By SAMUEL WOOD. Price 5s.
219. *THE HAY AND STRAW MEASURER:* Being New Tables for the Use of Auctioneers, Valuers, Farmers, Hay and Straw Dealers, &c., forming a complete Calculator and Ready-Reckoner, especially adapted to persons connected with Agriculture. Third Edition. By JOHN STEELE. 2s.
222. *SUBURBAN FARMING.* The Laying-out and Cultivation of Farms, adapted to the Produce of Milk, Butter, and Cheese, Eggs, Poultry, and Pigs. By the late Prof. JOHN DONALDSON. With Additions by R. SCOTT BURN. Second Edition. 3s. 6d. ‡ [Just published.]

 The ‡ indicates that these vols. may be had strongly bound at 6d. extra.

ARITHMETIC, GEOMETRY, MATHEMATICS, ETC.

32. **MATHEMATICAL INSTRUMENTS**, a Treatise on; in which their Construction and the Methods of Testing, Adjusting, and Using them are concisely Explained. By J. F. HEATHER, M.A., of the Royal Military Academy, Woolwich. Original Edition, in 1 vol., Illustrated. 1s. 6d.
- * * *In ordering the above, be careful to say, "Original Edition" (No. 32), to distinguish it from the Enlarged Edition in 3 vols. (Nos. 168-9-70).*
60. **LAND AND ENGINEERING SURVEYING**, a Treatise on; with all the Modern Improvements. Arranged for the Use of Schools and Private Students; also for Practical Land Surveyors and Engineers. By T. BAKER, C.E. New Edition, revised by EDWARD NUGENT, C.E. Illustrated with Plates and Diagrams. 2s.†
- 61*. **READY RECKONER FOR THE ADMEASUREMENT OF LAND**. By ABRAHAM ARMAN, Schoolmaster, Thurleigh, Beds. To which is added a Table, showing the Price of Work, from 2s. 6d. to £1 per acre, and Tables for the Valuation of Land, from 1s. to £1,000 per acre, and from one pole to two thousand acres in extent, &c., &c. 1s. 6d.
76. **DESCRIPTIVE GEOMETRY**, an Elementary Treatise on; with a Theory of Shadows and of Perspective, extracted from the French of G. MONGE. To which is added, a description of the Principles and Practice of Isometrical Projection; the whole being intended as an introduction to the Application of Descriptive Geometry to various branches of the Arts. By J. F. HEATHER, M.A. Illustrated with 14 Plates. 2s.
178. **PRACTICAL PLANE GEOMETRY**: giving the Simplest Modes of Constructing Figures contained in one Plane and Geometrical Construction of the Ground. By J. F. HEATHER, M.A. With 215 Woodcuts. 2s.
179. **PROJECTION**: Orthographic, Topographic, and Perspective: giving the various Modes of Delineating Solid Forms by Constructions on a Single Plane Surface. By J. F. HEATHER, M.A. [*In preparation.*]
- * * *The above three volumes will form a COMPLETE ELEMENTARY COURSE OF MATHEMATICAL DRAWING.*
83. **COMMERCIAL BOOK-KEEPING**. With Commercial Phrases and Forms in English, French, Italian, and German. By JAMES HADDON, M.A., Arithmetical Master of King's College School, London. 1s. 6d.
84. **ARITHMETIC**, a Rudimentary Treatise on: with full Explanations of its Theoretical Principles, and numerous Examples for Practice. For the Use of Schools and for Self-Instruction. By J. R. YOUNG, late Professor of Mathematics in Belfast College. New Edition, with Index. 1s. 6d.
- 84*. A KEY to the above, containing Solutions in full to the Exercises, together with Comments, Explanations, and Improved Processes, for the Use of Teachers and Unassisted Learners. By J. R. YOUNG. 1s. 6d.
85. **EQUATIONAL ARITHMETIC**, applied to Questions of Interest,
- 85*. Annuities, Life Assurance, and General Commerce; with various Tables by which all Calculations may be greatly facilitated. By W. HIPSLEY. 2s.
86. **ALGEBRA**, the Elements of. By JAMES HADDON, M.A., Second Mathematical Master of King's College School. With Appendix, containing miscellaneous Investigations, and a Collection of Problems in various parts of Algebra. 2s.
- 86*. A KEY and COMPANION to the above Book, forming an extensive repository of Solved Examples and Problems in Illustration of the various Expedients necessary in Algebraical Operations. Especially adapted for Self-Instruction. By J. R. YOUNG. 1s. 6d.
88. **EUCLID, THE ELEMENTS OF**: with many additional Propositions and Explanatory Notes: to which is prefixed, an Introductory Essay on Logic. By HENRY LAW, C.E. 2s. 6d.‡
- * * *Sold also separately, viz. —*
88. EUCLID, The First Three Books. By HENRY LAW, C.E. 1s. 6d.
89. EUCLID, Books 4, 5, 6, 11, 12. By HENRY LAW, C.E. 1s. 6d.

 *The ‡ indicates that these vols. may be had strongly bound at 6d. extra.*

LONDON: CROSBY LOCKWOOD AND CO.,

Arithmetic, Geometry, Mathematics, etc., *continued.*

90. **ANALYTICAL GEOMETRY AND CONIC SECTIONS**, a Rudimentary Treatise on. By JAMES HANN, late Mathematical Master of King's College School, London. A New Edition, re-written and enlarged by J. R. YOUNG, formerly Professor of Mathematics at Belfast College. 2s.†
91. **PLANE TRIGONOMETRY**, the Elements of. By JAMES HANN, formerly Mathematical Master of King's College, London. 1s. 6d.
92. **SPHERICAL TRIGONOMETRY**, the Elements of. By JAMES HANN. Revised by CHARLES H. DOWLING, C.E. 1s.
 * Or with "*The Elements of Plane Trigonometry*," in One Volume, 2s. 6d.
93. **MENSURATION AND MEASURING**, for Students and Practical Use. With the Mensuration and Levelling of Land for the Purposes of Modern Engineering. By T. BAKER, C.E. New Edition, with Corrections and Additions by E. NUGENT, C.E. Illustrated. 1s. 6d.
102. **INTEGRAL CALCULUS**, Rudimentary Treatise on the. By HOMERSHAM COX, B.A. Illustrated. 1s.
103. **INTEGRAL CALCULUS**, Examples on the. By JAMES HANN, late of King's College, London. Illustrated. 1s.
101. **DIFFERENTIAL CALCULUS**, Elements of the. By W. S. B. WOOLHOUSE, F.R.A.S., &c. 1s. 6d.
105. **MNEMONICAL LESSONS**.—GEOMETRY, ALGEBRA, AND TRIGONOMETRY, in Easy Mnemonical Lessons. By the Rev. THOMAS PENYNGTON KIRKMAN, M.A. 1s. 6d.
136. **ARITHMETIC**, Rudimentary, for the Use of Schools and Self-Instruction. By JAMES HADDON, M.A. Revised by ABRAHAM ARMAN. 1s. 6d.
137. A KEY TO HADDON'S RUDIMENTARY ARITHMETIC. By A. ARMAN. 1s. 6d.
168. **DRAWING AND MEASURING INSTRUMENTS**. Including—I. Instruments employed in Geometrical and Mechanical Drawing, and in the Construction, Copying, and Measurement of Maps and Plans. II. Instruments used for the purposes of Accurate Measurement, and for Arithmetical Computations. By J. F. HEATHER, M.A., late of the Royal Military Academy, Woolwich, Author of "*Descriptive Geometry*," &c., &c. Illustrated. 1s. 6d.
169. **OPTICAL INSTRUMENTS**. Including (more especially) Telescopes, Microscopes, and Apparatus for producing copies of Maps and Plans by Photography. By J. F. HEATHER, M.A. Illustrated. 1s. 6d.
170. **SURVEYING AND ASTRONOMICAL INSTRUMENTS**. Including—I. Instruments Used for Determining the Geometrical Features of a portion of Ground. II. Instruments Employed in Astronomical Observations. By J. F. HEATHER, M.A. Illustrated. 1s. 6d.
- ** *The above three volumes form an enlargement of the Author's original work, "Mathematical Instruments: their Construction, Adjustment, Testing, and Use," the Thirteenth Edition of which is on sale, price 1s. 6d. (See No. 32 in the Series.)*
168. } **MATHEMATICAL INSTRUMENTS**. By J. F. HEATHER,
 169. } M.A. Enlarged Edition, for the most part entirely re-written. The 3 Parts as
 170. } above, in One thick Volume. With numerous Illustrations. 4s. 6d.†
158. **THE SLIDE RULE, AND HOW TO USE IT**; containing full, easy, and simple Instructions to perform all Business Calculations with unexampled rapidity and accuracy. By CHARLES HOARE, C.E. With a Slide Rule in tuck of cover. 2s. 6d.†
185. **THE COMPLETE MEASURER**; setting forth the Measurement of Boards, Glass, &c., &c.; Unequal-sided, Square-sided, Octagonal-sided, Round Timber and Stone, and Standing Timber. With a Table showing the solidity of hewn or eight-sided timber, or of any octagonal-sided column. Compiled for Timber-growers, Merchants, and Surveyors, Stonemasons, Architects, and others. By RICHARD HORTON. Third Edition, with valuable additions. 4s.; strongly bound in leather, 5s.
196. **THEORY OF COMPOUND INTEREST AND ANNUITIES**; with Tables of Logarithms for the more Difficult Computations of Interest, Discount, Annuities, &c. By FÉDOR THOMAN. 4s.†

 The † indicates that these vols. may be had strongly bound at 6d. extra.

Arithmetic, Geometry, Mathematics, etc., continued.

199. **INTUITIVE CALCULATIONS**; or, Easy and Compendious Methods of Performing the various Arithmetical Operations required in Commercial and Business Transactions; together with Full Explanations of Decimals and Duodecimals, several Useful Tables, &c. By DANIEL O'GORMAN. Twenty-fifth Edition, corrected and enlarged by J. K. YOUNG, formerly Professor of Mathematics in Belfast College. 3s.†
204. **MATHEMATICAL TABLES**, for Trigonometrical, Astronomical, and Nautical Calculations; to which is prefixed a Treatise on Logarithms. By HENRY LAW, C.E. Together with a Series of Tables for Navigation and Nautical Astronomy. By J. K. YOUNG, formerly Professor of Mathematics in Belfast College. New Edition. 3s. 6d.†
221. **MEASURES, WEIGHTS, AND MONEYS OF ALL NATIONS**, and an Analysis of the Christian, Hebrew, and Mahometan Calendars. By W. S. B. WOOLHOUSE, F.R.A.S., F.S.S. Sixth Edition, carefully revised and enlarged. 2s.† *[Just published.]*

MISCELLANEOUS VOLUMES.

36. **A DICTIONARY OF TERMS used in ARCHITECTURE, BUILDING, ENGINEERING, MINING, METALLURGY, ARCHÆOLOGY, the FINE ARTS, &c.** By JOHN WEALE. Fifth Edition. Revised by ROBERT HUNT, F.R.S., Keeper of Mining Records. Numerous Illustrations. 5s. cloth limp; 6s. cloth boards.
50. **THE LAW OF CONTRACTS FOR WORKS AND SERVICES.** By DAVID GIBBONS. Third Edition, enlarged. 3s.†
112. **MANUAL OF DOMESTIC MEDICINE.** By R. GOODING, B.A., M.D. Intended as a Family Guide in all Cases of Accident and Emergency. 2s.†
- 112*. **MANAGEMENT OF HEALTH.** A Manual of Home and Personal Hygiene. By the Rev. JAMES BAIRD, B.A. 1s.
150. **LOGIC**, Pure and Applied. By S. H. EMMENS. 1s. 6d.
152. **PRACTICAL HINTS FOR INVESTING MONEY.** With an Explanation of the Mode of Transacting Business on the Stock Exchange. By FRANCIS PLAYFORD, Sworn Broker. 1s. 6d.
153. **SELECTIONS FROM LOCKE'S ESSAYS ON THE HUMAN UNDERSTANDING.** With Notes by S. H. EMMENS. 2s.
154. **GENERAL HINTS TO EMIGRANTS.** Containing Notices of the various Fields for Emigration. With Hints on Preparation for Emigrating, Outfits, &c., &c. With Directions and Recipes useful to the Emigrant. With a Map of the World. 2s.
157. **THE EMIGRANT'S GUIDE TO NATAL.** By ROBERT JAMES MANN, F.R.A.S., F.M.S. Second Edition, carefully corrected to the present Date. Map. 2s.
193. **HANDBOOK OF FIELD FORTIFICATION**, intended for the Guidance of Officers Preparing for Promotion, and especially adapted to the requirements of Beginners. By Major W. W. KNOLLYS, F.R.G.S., 93rd Sutherland Highlanders, &c. With 163 Woodcuts. 3s.†
194. **THE HOUSE MANAGER**: Being a Guide to Housekeeping. Practical Cookery, Pickling and Preserving, Household Work, Dairy Management, the Table and Dessert, Cellarage of Wines, Home-brewing and Wine-making, the Boudoir and Dressing-room, Travelling, Stable Economy, Gardening Operations, &c. By AN OLD HOUSEKEEPER. 3s. 6d.†
194. **HOUSE BOOK (The)**. Comprising:—I. THE HOUSE MANAGER. II. DOMESTIC MEDICINE. By RALPH GOODING, M.D. III. MANAGEMENT OF HEALTH. By JAMES BAIRD. In One Vol., & strongly half-bound. 6s.
- 112*.
224. **COACH BUILDING**, A Practical Treatise, Historical and Descriptive, containing full information of the various Trades and Processes involved, with Hints on the proper Keeping of Carriages, &c. With 57 Illustrations. By JAMES W. BURGESS. 2s. 6d.† *[Just published.]*

 The † indicates that these vols. may be had strongly bound at 6d. extra.

EDUCATIONAL AND CLASSICAL SERIES.**HISTORY.**

1. **England, Outlines of the History of;** more especially with reference to the Origin and Progress of the English Constitution. By WILLIAM DOUGLAS HAMILTON, F.S.A., of Her Majesty's Public Record Office. 4th Edition, revised. 3s.; cloth boards, 6s.
5. **Greece, Outlines of the History of;** in connection with the Rise of the Arts and Civilization in Europe. By W. DOUGLAS HAMILTON, of University College, London, and EDWARD LEVIEN, M.A., of Balliol College, Oxford. 2s. 6d.; cloth boards, 3s. 6d.
7. **Rome, Outlines of the History of;** from the Earliest Period to the Christian Era and the Commencement of the Decline of the Empire. By EDWARD LEVIEN, of Balliol College, Oxford. Map, 2s. 6d.; cl. bds. 3s. 6d.
9. **Chronology of History, Art, Literature, and Progress,** from the Creation of the World to the Conclusion of the Franco-German War. The Continuation by W. D. HAMILTON, F.S.A. 3s.; cloth boards, 3s. 6d.
50. **Dates and Events in English History,** for the use of Candidates in Public and Private Examinations. By the Rev. E. RAND. 1s.

ENGLISH LANGUAGE AND MISCELLANEOUS.

11. **Grammar of the English Tongue, Spoken and Written.** With an Introduction to the Study of Comparative Philology. By HYDE CLARKE, D.C.L. Fourth Edition. 1s. 6d.
- 11*. **Philology: Handbook of the Comparative Philology of English,** Anglo-Saxon, Frisian, Flemish or Dutch, Low or Platt Dutch, High Dutch or German, Danish, Swedish, Icelandic, Latin, Italian, French, Spanish, and Portuguese Tongues. By HYDE CLARKE, D.C.L. 1s.
12. **Dictionary of the English Language,** as Spoken and Written. Containing above 100,000 Words. By HYDE CLARKE, D.C.L. 3s. 6d.; cloth boards, 4s. 6d.; complete with the GRAMMAR, cloth bds., 5s. 6d.
48. **Composition and Punctuation,** familiarly Explained for those who have neglected the Study of Grammar. By JUSTIN BRENNAN. 17th Edition. 1s. 6d.
49. **Derivative Spelling-Book: Giving the Origin of Every Word** from the Greek, Latin, Saxon, German, Teutonic, Dutch, French, Spanish, and other Languages; with their present Acceptation and Pronunciation. By J. ROWBOTHAM, F.R.A.S. Improved Edition. 1s. 6d.
51. **The Art of Extempore Speaking: Hints for the Pulpit, the Senate, and the Bar.** By M. BAUTAIN, Vicar-General and Professor at the Sorbonne. Translated from the French. 7th Edition, carefully corrected. 2s. 6d.
52. **Mining and Quarrying, with the Sciences connected therewith.** First Book of, for Schools. By J. H. COLLINS, F.G.S., Lecturer to the Miners' Association of Cornwall and Devon. 1s.
53. **Places and Facts in Political and Physical Geography,** for Candidates in Examinations. By the Rev. EDGAR RAND, B.A. 1s.
54. **Analytical Chemistry, Qualitative and Quantitative, a Course of.** To which is prefixed, a Brief Treatise upon Modern Chemical Nomenclature and Notation. By WM. W. PINK and GEORGE E. WEBSTER. 2s.

THE SCHOOL MANAGERS' SERIES OF READING BOOKS,

Adapted to the Requirements of the New Code. Edited by the Rev. A. R. GRANT, Rector of Hitcham, and Honorary Canon of Ely; formerly H.M. Inspector of Schools.

INTRODUCTORY PRIMER, 3d.

	s.	d.		s.	d.
FIRST STANDARD . . .	0	6	FOURTH STANDARD . . .	1	2
SECOND " . . .	0	10	FIFTH " . . .	1	6
THIRD " . . .	1	0	SIXTH " . . .	1	6
LESSONS FROM THE BIBLE. Part I. Old Testament. 1s.					
LESSONS FROM THE BIBLE. Part II. New Testament, to which is added					
THE GEOGRAPHY OF THE BIBLE, for very young Children. By Rev. C.					
THORNTON FORSTER. 1s. 2d. * Or the Two Parts in One Volume. 2s.					

FRENCH.

24. **French Grammar.** With Complete and Concise Rules on the Genders of French Nouns. By G. L. STRAUSS, Ph.D. 1s. 6d.
 25. **French-English Dictionary.** Comprising a large number of New Terms used in Engineering, Mining, &c. By ALFRED ELWES. 1s. 6d.
 26. **English French Dictionary.** By ALFRED ELWES. 2s.
 25, 26. **French Dictionary** (as above). Complete, in One Vol., 3s.; cloth boards, 3s. 6d. * * * Or with the GRAMMAR, cloth boards, 4s. 6d.
 47. **French and English Phrase Book:** containing Introductory Lessons, with Translations, several Vocabularies of Words, a Collection of suitable Phrases, and Easy Familiar Dialogues. 1s. 6d.

GERMAN.

39. **German Grammar.** Adapted for English Students, from Heyse's Theoretical and Practical Grammar, by Dr. G. L. STRAUSS. 1s.
 40. **German Reader:** A Series of Extracts, carefully culled from the most approved Authors of Germany; with Notes, Philological and Explanatory. By G. L. STRAUSS, Ph.D. 1s.
 41-43. **German Tril实现 Dictionary.** By NICHOLAS ESTERHAZY S. A. HAMILTON. In Three Parts. Part I. German-French-English. Part II. English-German-French. Part III. French-German-English. 3s., or cloth boards, 4s.
 41-43. **German Tril实现 Dictionary** (as above), together with German & 39. Grammar (No. 39), in One Volume, cloth boards, 5s.

ITALIAN.

27. **Italian Grammar,** arranged in Twenty Lessons, with a Course of Exercises. By ALFRED ELWES. 1s. 6d.
 28. **Italian Tril实现 Dictionary,** wherein the Genders of all the Italian and French Nouns are carefully noted down. By ALFRED ELWES. Vol. 1. Italian-English-French. 2s. 6d.
 30. **Italian Tril实现 Dictionary.** By A. ELWES. Vol. 2. English-French-Italian. 2s. 6d.
 32. **Italian Tril实现 Dictionary.** By ALFRED ELWES. Vol. 3. French-Italian-English. 2s. 6d.
 28, 30, **Italian Tril实现 Dictionary** (as above). In One Vol., 7s. 6d. 32. Cloth boards.

SPANISH AND PORTUGUESE.

34. **Spanish Grammar,** in a Simple and Practical Form. With a Course of Exercises. By ALFRED ELWES. 1s. 6d.
 35. **Spanish-English and English-Spanish Dictionary.** Including a large number of Technical Terms used in Mining, Engineering, &c., with the proper Accents and the Gender of every Noun. By ALFRED ELWES. 4s.; cloth boards, 5s. * * * Or with the GRAMMAR, cloth boards, 6s.
 55. **Portuguese Grammar,** in a Simple and Practical Form. With a Course of Exercises. By ALFRED ELWES. 1s. 6d.
 56. **Portuguese-English and English-Portuguese Dictionary,** with the Genders of each Noun. By ALFRED ELWES.

*[In preparation.]***HEBREW.**

- 46*. **Hebrew Grammar** By Dr. BRESSLAU. 1s. 6d.
 44. **Hebrew and English Dictionary,** Biblical and Rabbinical; containing the Hebrew and Chaldee Roots of the Old Testament Post-Rabbinical Writings. By Dr. BRESSLAU. 6s. * * * Or with the GRAMMAR, 7s.
 46. **English and Hebrew Dictionary.** By Dr. BRESSLAU. 3s.
 44, 46. **Hebrew Dictionary** (as above), in Two Vols., complete, with 46*. the GRAMMAR, cloth boards, 12s.

LONDON : CROSBY LOCKWOOD AND CO.,

LATIN.

19. **Latin Grammar.** Containing the Inflections and Elementary Principles of Translation and Construction. By the Rev. THOMAS GOODWIN, M.A., Head Master of the Greenwich Proprietary School. 1s.
20. **Latin-English Dictionary.** By the Rev. THOMAS GOODWIN, M.A. 2s.
22. **English-Latin Dictionary;** together with an Appendix of French and Italian Words which have their origin from the Latin. By the Rev. THOMAS GOODWIN, M.A. 1s. 6d.
- 20, 22. **Latin Dictionary** (as above). Complete in One Vol., 3s. 6d.; cloth boards, 4s. 6d. * * Or with the GRAMMAR, cloth boards, 5s. 6d.

LATIN CLASSICS. With Explanatory Notes in English.

1. **Latin Delectus.** Containing Extracts from Classical Authors, with Genealogical Vocabularies and Explanatory Notes, by H. YOUNG. 1s. 6d.
2. **Cæsar's Commentarii de Bello Gallico.** Notes, and a Geographical Register for the Use of Schools, by H. YOUNG. 2s.
3. **Cornelius Nepos.** With Notes. By H. YOUNG. 1s.
4. **Virgillii Maronis Bucolica et Georgica.** With Notes on the Bucolics by W. RUSHTON, M.A., and on the Georgics by H. YOUNG. 1s. 6d.
5. **Virgillii Maronis Æneis.** With Notes, Critical and Explanatory, by H. YOUNG. New Edition, revised and improved. With copious Additional Notes by Rev. T. H. L. LEARY, D.C.L., formerly Scholar of Brasenose College, Oxford. 3s.
- 5* ——— Part 1. Books i.—vi., 1s. 6d.
- 5** ——— Part 2. Books vii.—xii., 2s.
6. **Horace; Odes, Epode, and Carmen Sæculare.** Notes by H. YOUNG. 1s. 6d.
7. **Horace; Satires, Epistles, and Ars Poetica.** Notes by W. BROWN-RIGG SMITH, M.A., F.R.G.S. 1s. 6d.
8. **Sallustii Crispi Catalina et Bellum Jugurthinum.** Notes, Critical and Explanatory, by W. M. DONNE, B.A., Trin. Coll., Cam. 1s. 6d.
9. **Terentii Andria et Heautontimorumenos.** With Notes, Critical and Explanatory, by the Rev. JAMES DAVIES, M.A. 1s. 6d.
10. **Terentii Adelphi, Hecyra, Phormio.** Edited, with Notes, Critical and Explanatory, by the Rev. JAMES DAVIES, M.A. 2s.
11. **Terentii Eunuchus, Comœdia.** Notes, by Rev. J. DAVIES, M.A. 1s. 6d.
12. **Ciceronis Oratio pro Sexto Roscio Amerino.** Edited, with an Introduction, Analysis, and Notes, Explanatory and Critical, by the Rev. JAMES DAVIES, M.A. 1s.
13. **Ciceronis Orationes in Catilinam, Verrem, et pro Archia.** With Introduction, Analysis, and Notes, Explanatory and Critical, by Rev. T. H. L. LEARY, D.C.L. formerly Scholar of Brasenose College, Oxford. 1s. 6d.
14. **Ciceronis Cato Major, Lælius, Brutus, sive de Senectute, de Amicitia, de Claris Oratoribus Dialogi.** With Notes by W. BROWN-RIGG SMITH, M.A., F.R.G.S. 2s.
16. **Livy: History of Rome.** Notes by H. YOUNG and W. B. SMITH, M.A. Part 1. Books i., ii., 1s. 6d.
- 16* ——— Part 2. Books iii., iv., v., 1s. 6d.
17. ——— Part 3. Books xxi., xxii., 1s. 6d.
19. **Latin Verse Selections,** from Catullus, Tibullus, Propertius, and Ovid. Notes by W. B. DONNE, M.A., Trinity College, Cambridge. 2s.
20. **Latin Prose Selections,** from Varro, Columella, Vitruvius, Seneca, Quintilian, Florus, Velleius Paterculus, Valerius Maximus Suetonius, Apuleius, &c. Notes by W. B. DONNE, M.A. 2s.
21. **Juvenalis Satiræ.** With Prolegomena and Notes by T. H. S. ESCOTT, B.A., Lecturer on Logic at King's College, London. 2s.

GREEK.

14. **Greek Grammar**, in accordance with the Principles and Philological Researches of the most eminent Scholars of our own day. By HANS CLAUDE HAMILTON. 1s. 6d.
- 15, 17. **Greek Lexicon**. Containing all the Words in General Use, with their Significations, Inflections, and Doubtful Quantities. By HENRY R. HAMILTON. Vol. 1. Greek-English, 2s. 6d.; Vol. 2. English-Greek, 2s. Or the Two Vols. in One, 4s. 6d.: cloth boards, 5s.
- 14, 15. **Greek Lexicon** (as above). Complete, with the GRAMMAR, in 17. One Vol., cloth boards, 6s.

GREEK CLASSICS. With Explanatory Notes in English.

1. **Greek Delectus**. Containing Extracts from Classical Authors, with Genealogical Vocabularies and Explanatory Notes, by H. YOUNG. New Edition, with an improved and enlarged Supplementary Vocabulary, by JOHN HUTCHISON, M.A., of the High School, Glasgow. 1s. 6d.
- 2, 3. **Xenophon's Anabasis**; or, The Retreat of the Ten Thousand. Notes and a Geographical Register, by H. YOUNG. Part 1. Books i. to iii., 1s. Part 2. Books iv. to vii., 1s.
4. **Lucian's Select Dialogues**. The Text carefully revised, with Grammatical and Explanatory Notes, by H. YOUNG. 1s. 6d.
- 5-12. **Homer, The Works of**. According to the Text of BARUMLEIN. With Notes, Critical and Explanatory, drawn from the best and latest Authorities, with Preliminary Observations and Appendices, by T. H. L. LEARY, M.A., D.C.L.
- | | | |
|--------------|-------------------------------------|---|
| THE ILIAD: | Part 1. Books i. to vi., 1s. 6d. | Part 3. Books xiii. to xviii., 1s. 6d. |
| | Part 2. Books vii. to xii., 1s. 6d. | Part 4. Books xix. to xxiv., 1s. 6d. |
| THE ODYSSEY: | Part 1. Books i. to vi., 1s. 6d. | Part 3. Books xiii. to xviii., 1s. 6d. |
| | Part 2. Books vii. to xii., 1s. 6d. | Part 4. Books xix. to xxiv., and Hymns, 2s. |
13. **Plato's Dialogues**: The Apology of Socrates, the Crito, and the Phædo. From the Text of C. F. HERMANN. Edited with Notes, Critical and Explanatory, by the Rev. JAMES DAVIES, M.A. 2s.
- 14-17. **Herodotus, The History of**, chiefly after the Text of GAISFORD. With Preliminary Observations and Appendices, and Notes, Critical and Explanatory, by T. H. L. LEARY, M.A., D.C.L.
- | | |
|---------|---|
| Part 1. | Books i., ii. (The Clio and Euterpe), 2s. |
| Part 2. | Books iii., iv. (The Thalia and Melpomene), 2s. |
| Part 3. | Books v.-vii. (The Terpsichore, Erato, and Polymnia), 2s. |
| Part 4. | Books viii., ix. (The Urania and Calliope) and Index, 1s. 6d. |
18. **Sophocles: Œdipus Tyrannus**. Notes by H. YOUNG. 1s.
20. **Sophocles: Antigone**. From the Text of DINDORF. Notes, Critical and Explanatory, by the Rev. JOHN MILNER, B.A. 2s.
23. **Euripides: Hecuba and Medea**. Chiefly from the Text of DINDORF. With Notes, Critical and Explanatory, by W. BROWNRIGG SMITH, M.A., F.R.G.S. 1s. 6d.
26. **Euripides: Alceſtis**. Chiefly from the Text of DINDORF. With Notes, Critical and Explanatory, by JOHN MILNER, B.A. 1s. 6d.
30. **Æschylus: Prometheus Vincſtus**: The Prometheus Bound. From the Text of DINDORF. Edited, with English Notes, Critical and Explanatory, by the Rev. JAMES DAVIES, M.A. 1s.
32. **Æschylus: Septem Contra Thebes**: The Seven against Thebes. From the Text of DINDORF. Edited, with English Notes, Critical and Explanatory, by the Rev. JAMES DAVIES, M.A. 1s.
40. **Aristophanes: Acharnians**. Chiefly from the Text of C. H. WEISE. With Notes, by C. S. T. TOWNSEND, M.A. 1s. 6d.
41. **Thucydides: History of the Peloponnesian War**. Notes by H. YOUNG. Book 1. 1s.
42. **Xenophon's Panegyric on Agesilaus**. Notes and Introduction by L. F. W. JEWITT. 1s. 6d.
43. **Demosthenes. The Oration on the Crown and the Philippiſs**. With English Notes. By Rev. T. H. L. LEARY, D.C.L., formerly Scholar of Brasenose College, Oxford. 1s. 6d.

